

Beautiful[®]


Home

LOT NUMBER: _____

DATE PURCHASED: __/__/__

5-Drawer Fluted Dresser

Stock # BE65250047100A4

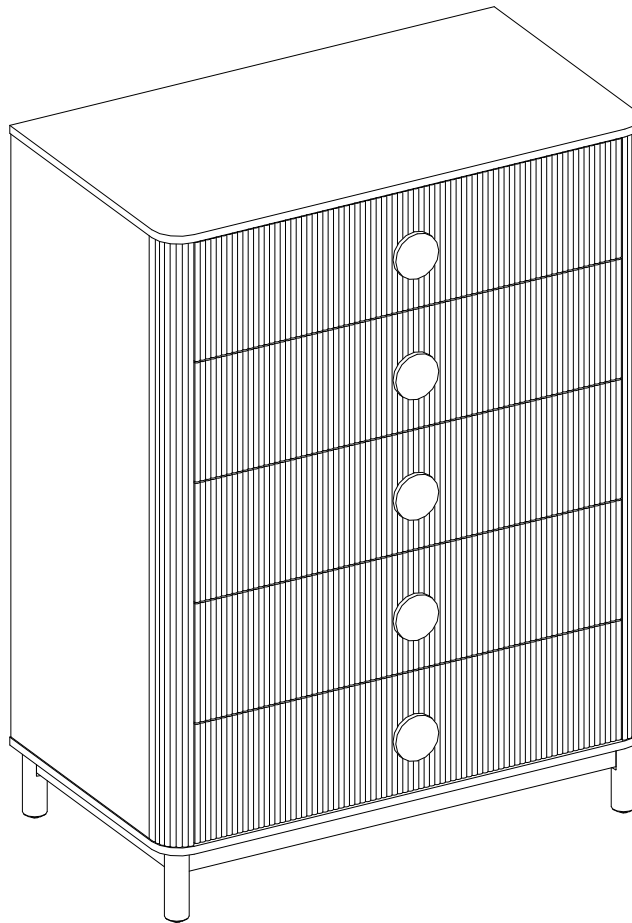

ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please call our customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

1-866-942-5362

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday - Friday

Or visit our website 24 hours a day, 7 days a week for product assistance at

www.whalenstyle.com

Or e-mail your request to **parts@whalenfurniture.com**


**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

Date 2025-04-12

Rev. 0001-A

MAXIMUM RECOMMENDED WEIGHT LOADS

MANUFACTURER: Whalen Furniture Manufacturing
CATALOG: 5-Drawer Fluted Dresser
STOCK # BE65250047100A4

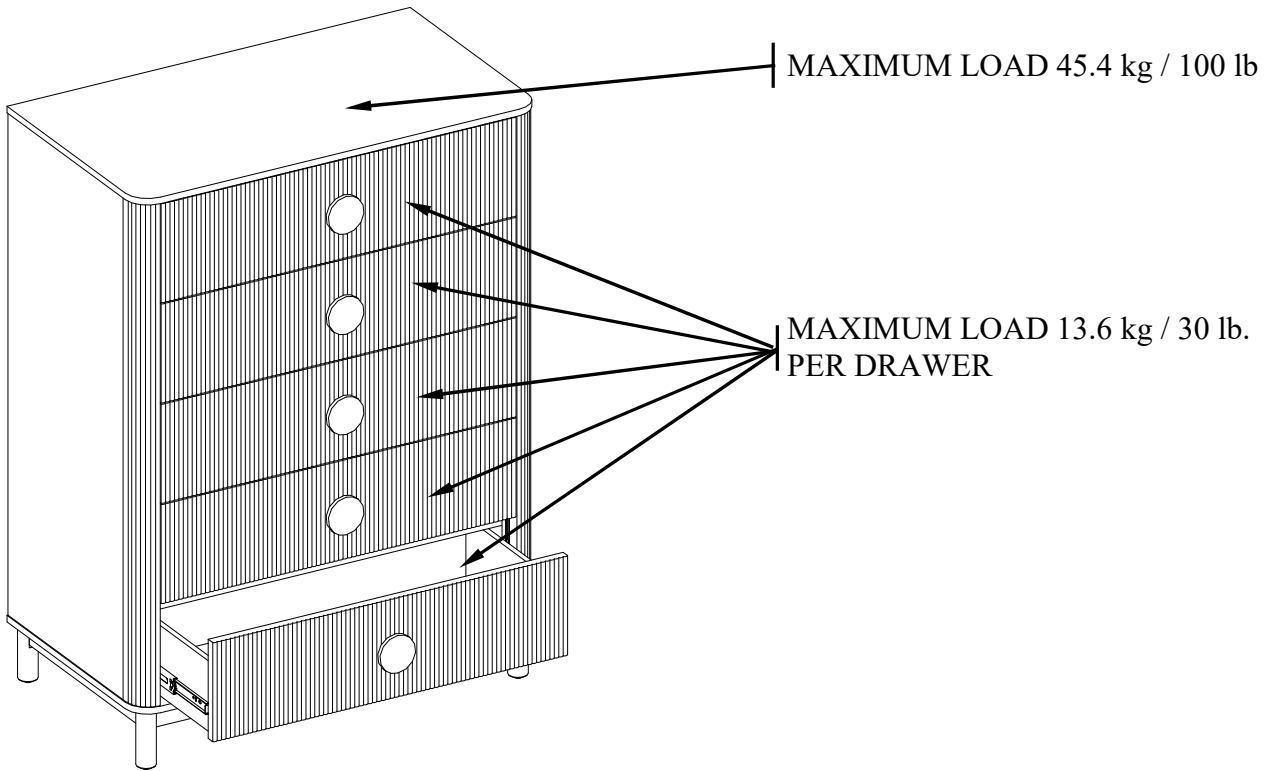

⚠ WARNING

THIS UNIT IS INTENDED ONLY FOR USE WITHIN THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.

SPECIAL NOTE


Please read the instruction sheets completely before assembly. Examine all packaging material before discarding carton. Remove any remaining staples from the carton before discarding. Remove all parts from carton and separate into groups as indicated on part list. Please ensure all parts are included prior to assembly. Use of power tools to complete assembly is not recommended.

IMPORTANT


Before you begin: Open, identify and count all parts prior to assembly. Lay out parts on a flat and non-abrasive surface. You will need the parts identified on page 5 and 6 of this instruction manuals.

NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH DAMP CLOTH.

Insert the Dowel at least halfway by tapping lightly with a rubber mallet, IF NECESSARY.

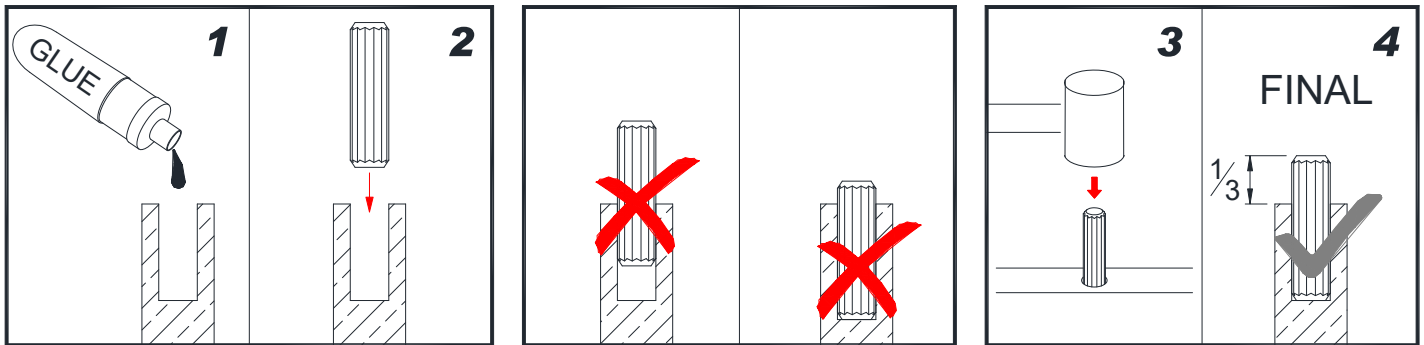

CAM LOCK SYSTEM OPERATION

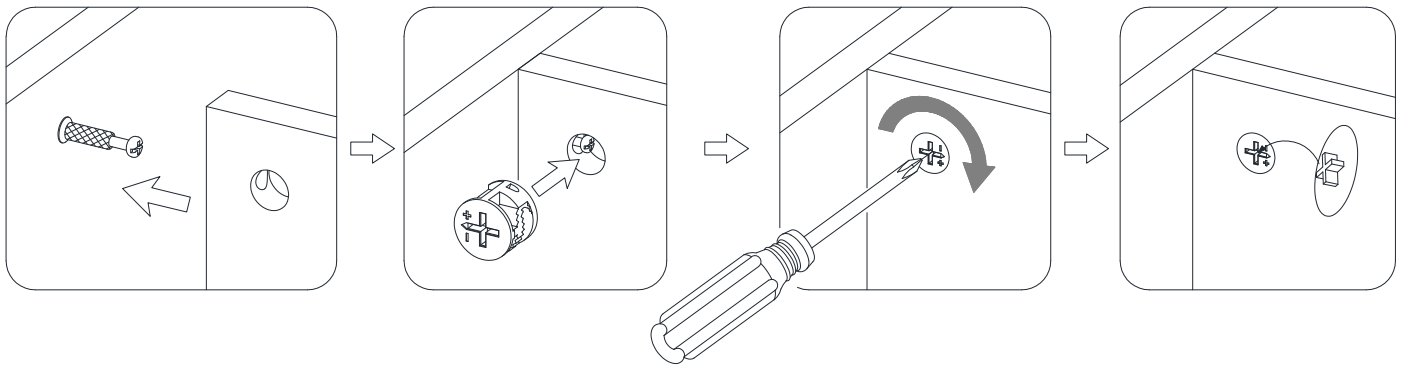

HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1. Screw the Cam Bolt into the pre-drilled small holes on the panel. Connect both panels together; making sure the Cam Bolt goes into the pre-drilled hole on the end of panel for the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of the Cam Lock faces out and points towards the Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt in place.
4. Plug the Cam Lock Cover into the cross slot of the Cam Lock to conceal the Cam.

You are now ready to assemble the KD unit.

FURNITURE TIPPING RESTRAINT

YOUNG CHILDREN MAY BE INJURED BY TIPPING FURNITURE AND YOU MUST USE THIS TIPPING RESTRAINT TO ATTACH THIS UNIT TO THE WALL, TO PREVENT ACCIDENTS AND/OR INJURIES.


THIS HARDWARE, MUST BE PROPERLY INSTALLED (FOLLOW ALL DIRECTIONS IN ORDER ON THIS INSTRUCTIONS), TO PROVIDE PROTECTION AGAINST THE UNEXPECTED TIPPING OF FURNITURE DUE TO IMPROPER USE.

THIS PRODUCT IS ONLY A DETERRENT. IT IS NOT A SUBSTITUTE FOR PROPER ADULT SUPERVISION. USE OF TIP-OVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE, THE RISK OF TIP-OVER.


 WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none">• ALWAYS install anti-tip device provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers.
	<p>Use of tip-over restraints may only reduce, but not eliminate, the risk of tipover.</p>

Parts and Hardware List


Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

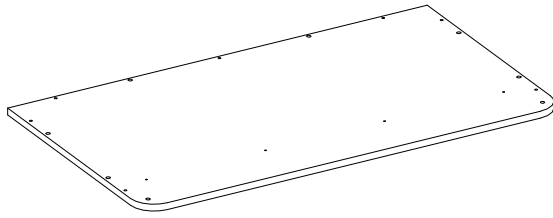


A- Top Panel
(Qty. 1)

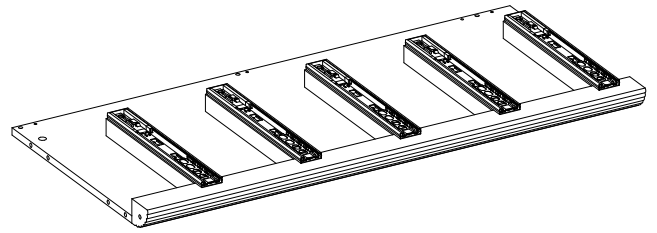


B- Left Side Panel
(Qty. 1)

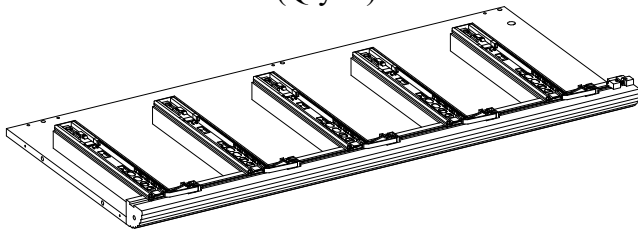


C- Right Side Panel
(Qty. 1)

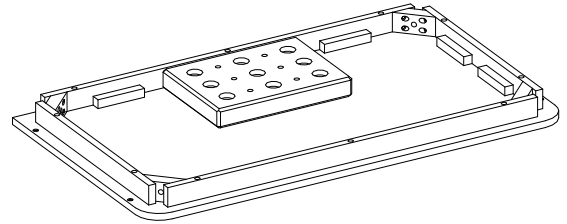


D- Base
(Qty. 1)

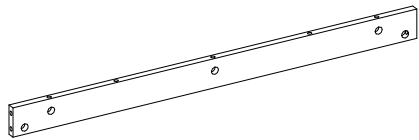


E- Top Back Stretcher
(Qty. 1)

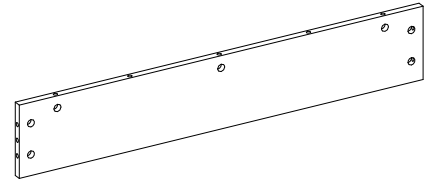


F- Lower Back Stretcher
(Qty. 1)

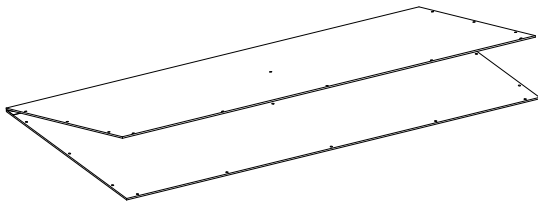


G- Back Panel
(Qty. 1)

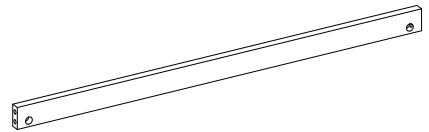


H- Crossbar
(Qty. 5)

 


I- Foot
(Qty. 4)

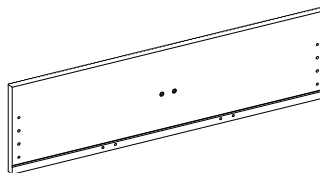


J- Drawer Front Panel
(Qty. 5)

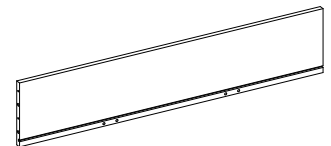


K- Drawer Back Panel
(Qty. 5)

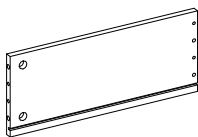

L- Drawer Left Panel
(Qty. 5)

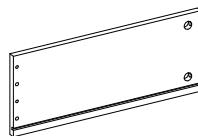


M- Drawer Right Panel
(Qty. 5)

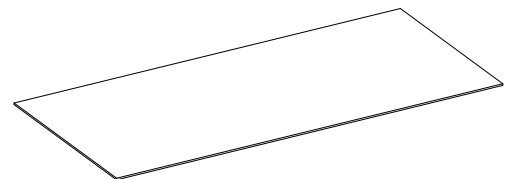


N- Drawer Back Panel
(Qty. 5)

Parts and Hardware List

 
Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.




O – Drawer Bottom Support
(Qty. 10)

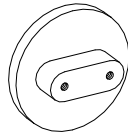


P- Drawer Knob
(Qty. 5)

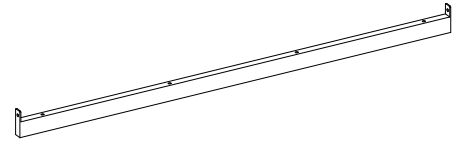


Q- Reinforcement
(Qty. 1)

 

 
(1) Large Cam Lock
(Qty. 26+1 extra)



 
(2) Cam Bolt
(Qty. 66+2 extra)



 
(3) M8 x 30 mm Large Wood Dowel
(Qty. 30+1 extra)



 
(4) Cam Lock Cover
(Qty. 20+1 extra)



 (5) M3.5 x 15 mm Washer Head Screw
(Qty. 24+1 extra)



 
(6) M3.5 x 40 mm Pan Head Screw
(Qty. 44+1 extra)




(7) M4 x 50 mm Pan Head Screw
(Qty. 4+1 extra)



 (8) Small Cam Lock
(Qty. 40+1 extra)



 
(9) M6 x 30 mm Small Wood Dowel
(Qty. 40+1 extra)




(10) 1/4" x 55 mm Bolt
(Qty. 4+1 extra)




(11) Lock Washer
(Qty. 4+1 extra)

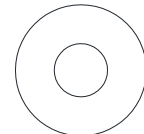

 
(12) Flat Washer
(Qty. 4+1 extra)



 
(13) 5/32" x 25 mm Knob Bolt
(Qty. 10+1 extra)



(14) M3.5 x 15 mm Pan Head Screw
(Qty. 2+1 extra)

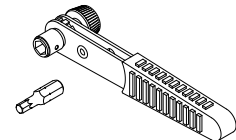


Ratchet Wrench
(Qty. 1)

 

Glue
(Qty. 1)




Touchup Pen
(Qty. 1)

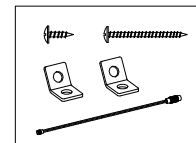


Tipping Restraint Hardware Kit (Qty. 2)
(Included in plastic bag)

Tools required: Ratchet wrench (provided), Phillips screwdriver, rubber mallet, stud finder, pencil, tape measure, power drill and 1/8" drill bit (not provided).

Assembly Instructions

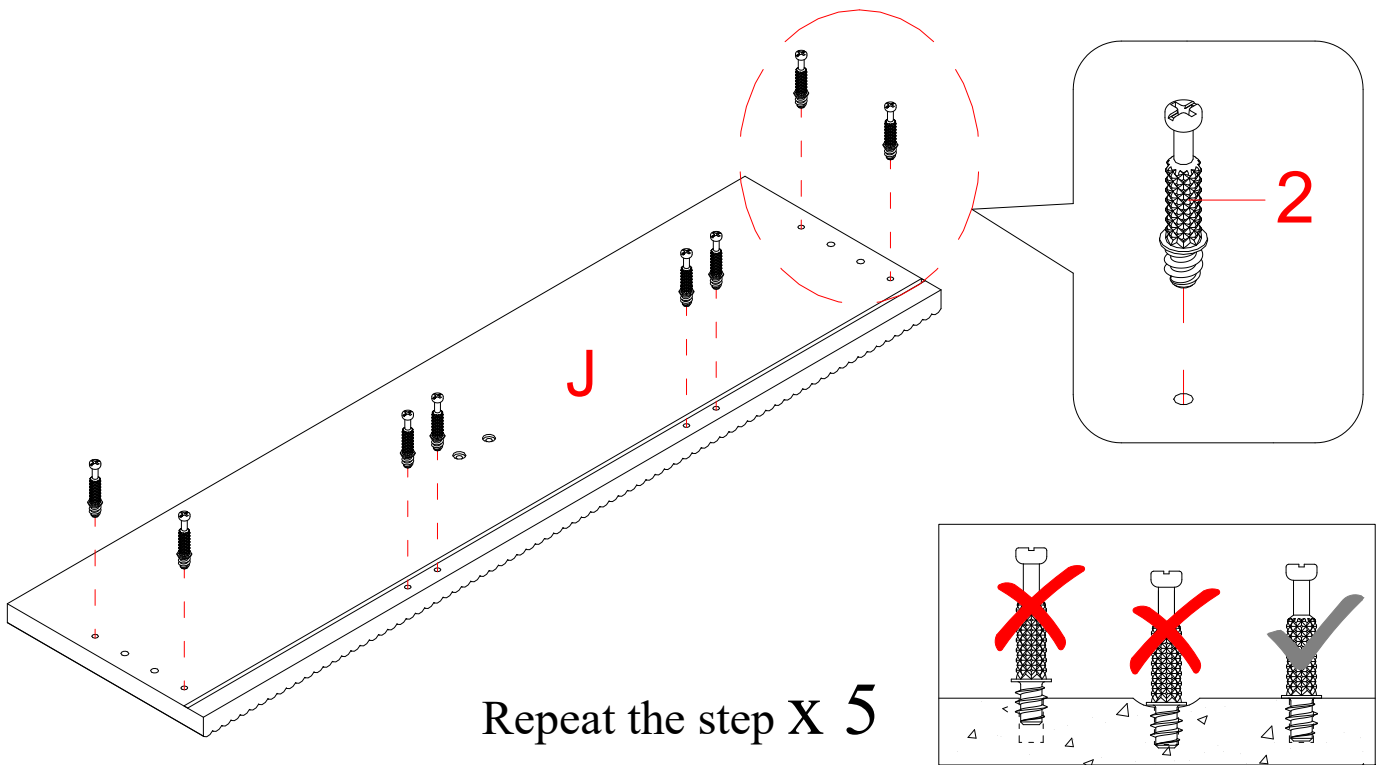

Repeat the step X 5

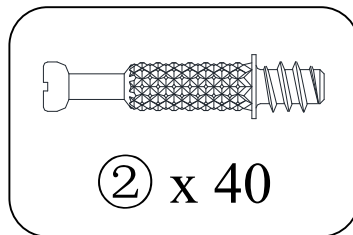


WARNING

DO NOT fully tighten the bolts or screws until all the bolts or screws are loosely installed. To avoid causing damage to the threads, DO NOT overtighten the bolts or screws.

1. Unpack the unit and confirm that you have all the hardware and required parts listed. Assemble the unit on a carpeted floor or the empty carton to avoid scratching the parts.
2. Securely screw the Cam Bolts (2) into the designated small holes on the Drawer Front Panels (J). Tighten the cam bolts with a Phillips Screwdriver.

NOTE: DO NOT overtighten the Cam Bolts. Screw-in cam bolts must be screwed down flush.

Assembly Instructions

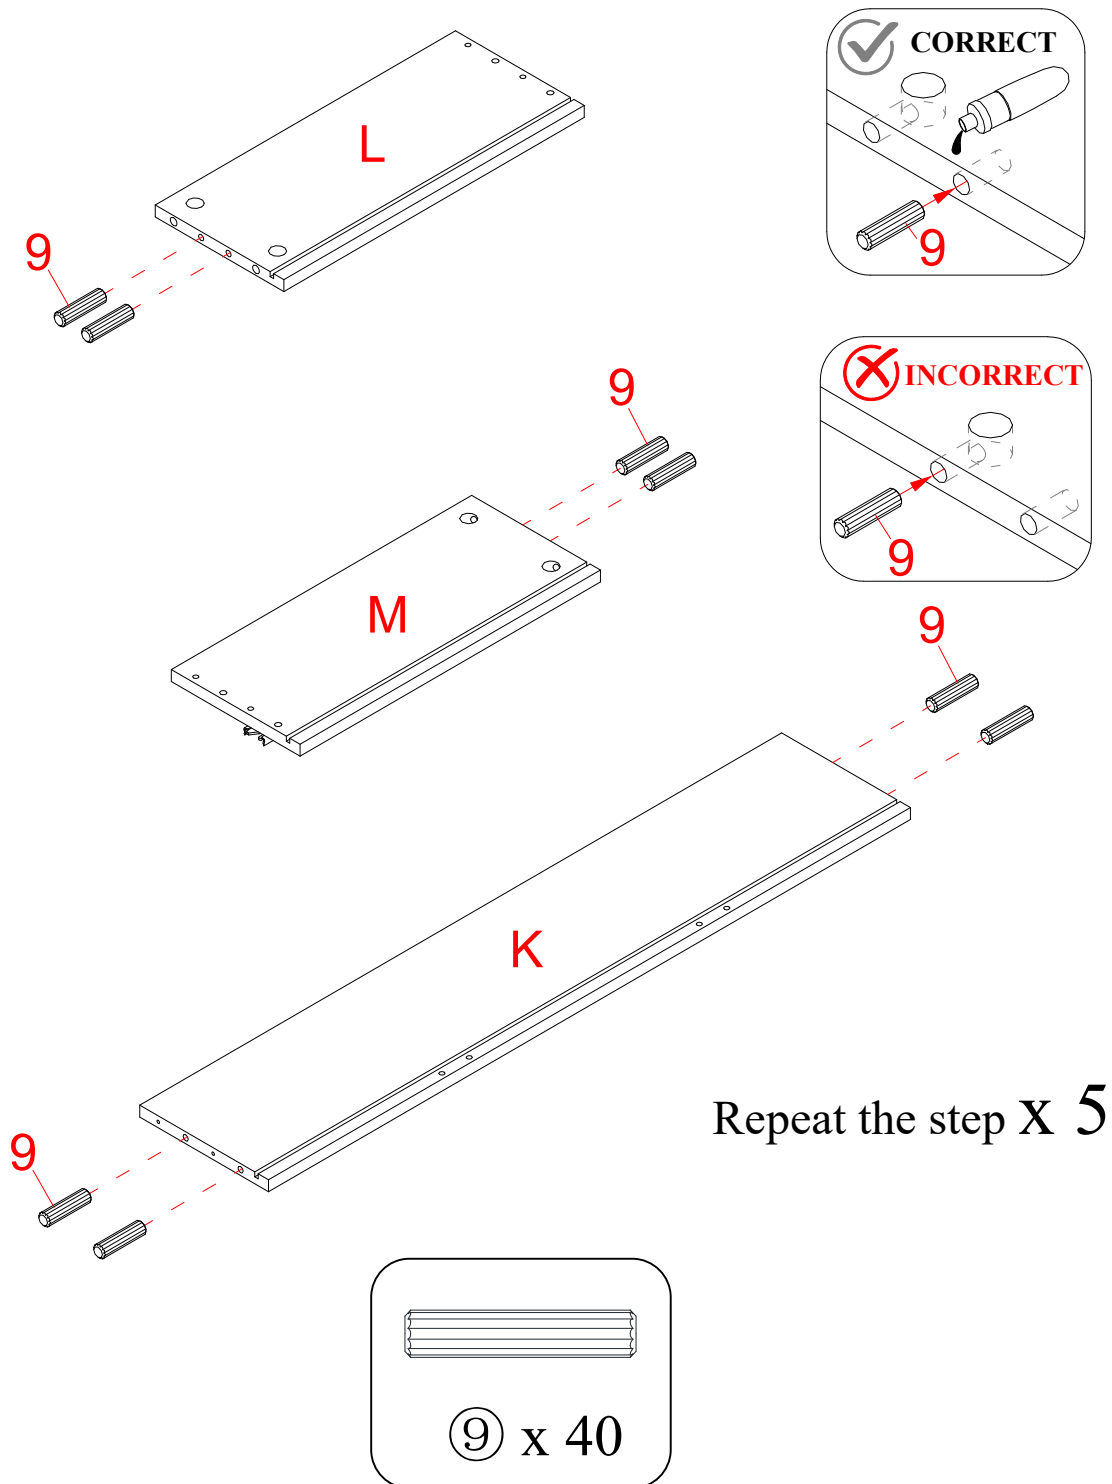


3. Glue the Small Wood Dowels (9) into the inner holes on the Drawer Side Panels (L and M) and Drawer Back Panels (K) as shown.


NOTE: It is very important to use a small amount of glue on both ends of dowels and wipe off the excess glue immediately with a damp cloth.

Assembly Instructions

The grooves line up with each other and face inward.

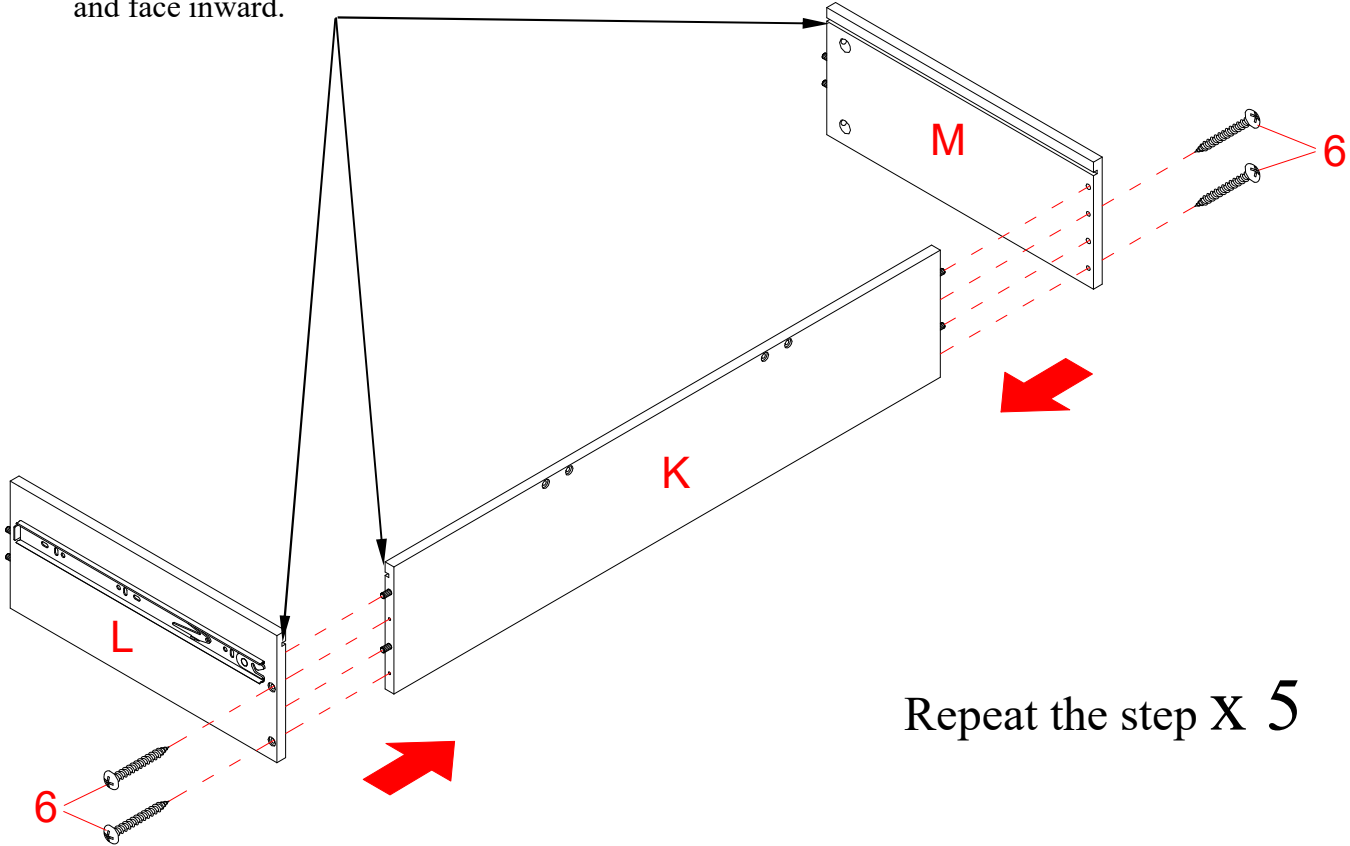


Repeat the step X 5

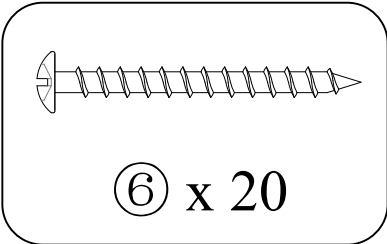

4. Orient and attach one Drawer Back Panel (K) between the Drawer Side Panels (L and M) with four 40 mm Pan Head Screws (6). Tighten the screws with a Phillips Screwdriver.
5. Complete this step five times to assemble five drawer assembly.

Assembly Instructions


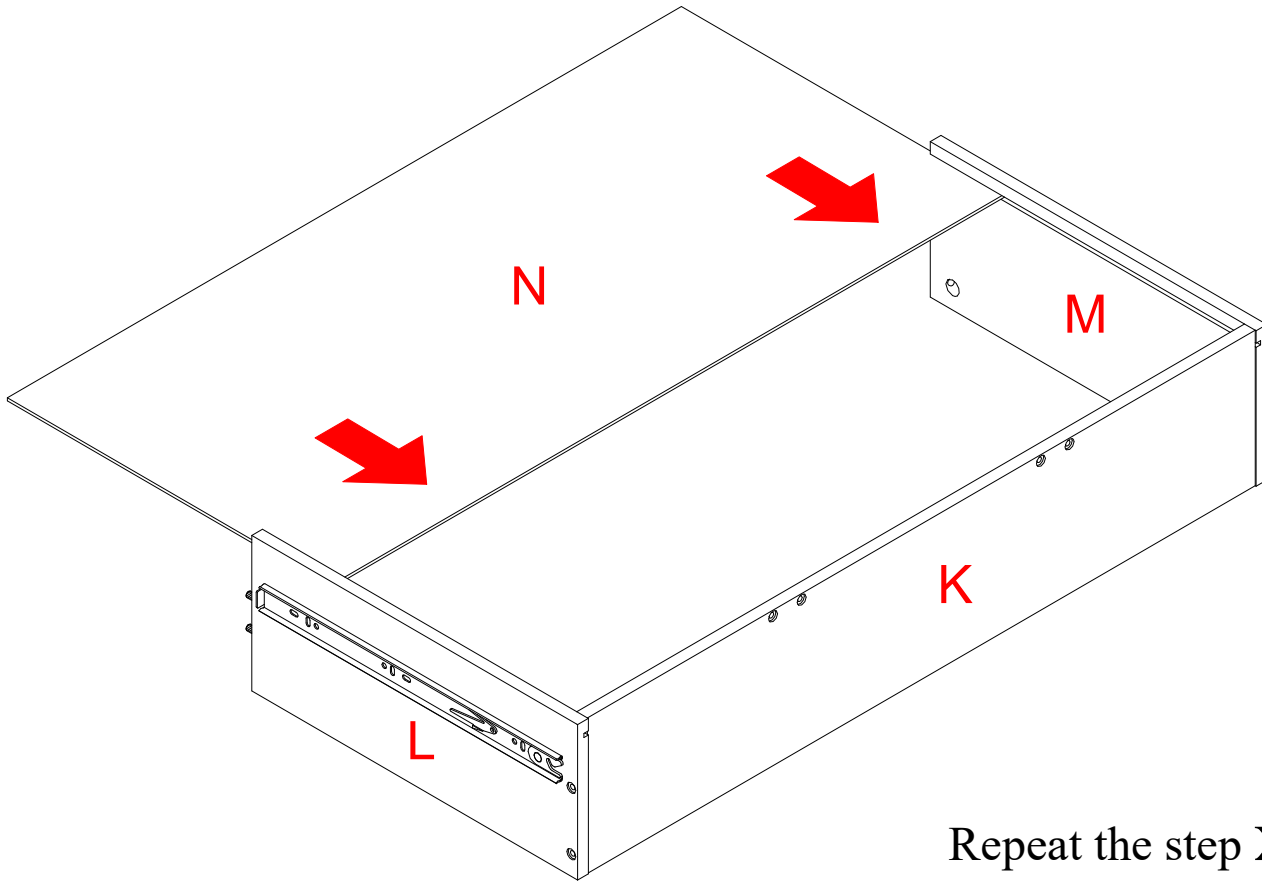


Repeat the step X 5

6. Slide one Drawer Bottom Panel (N) into the grooves on the Drawer Side Panels (L and M) until fully inserted into the Drawer Back Panel (K).
7. Complete this step five times to assemble five drawer assembly.






Assembly Instructions

The cam lock housings face outward.

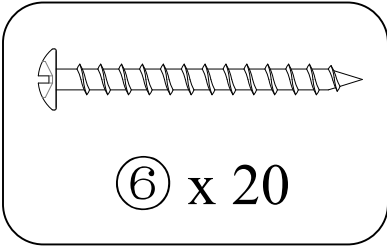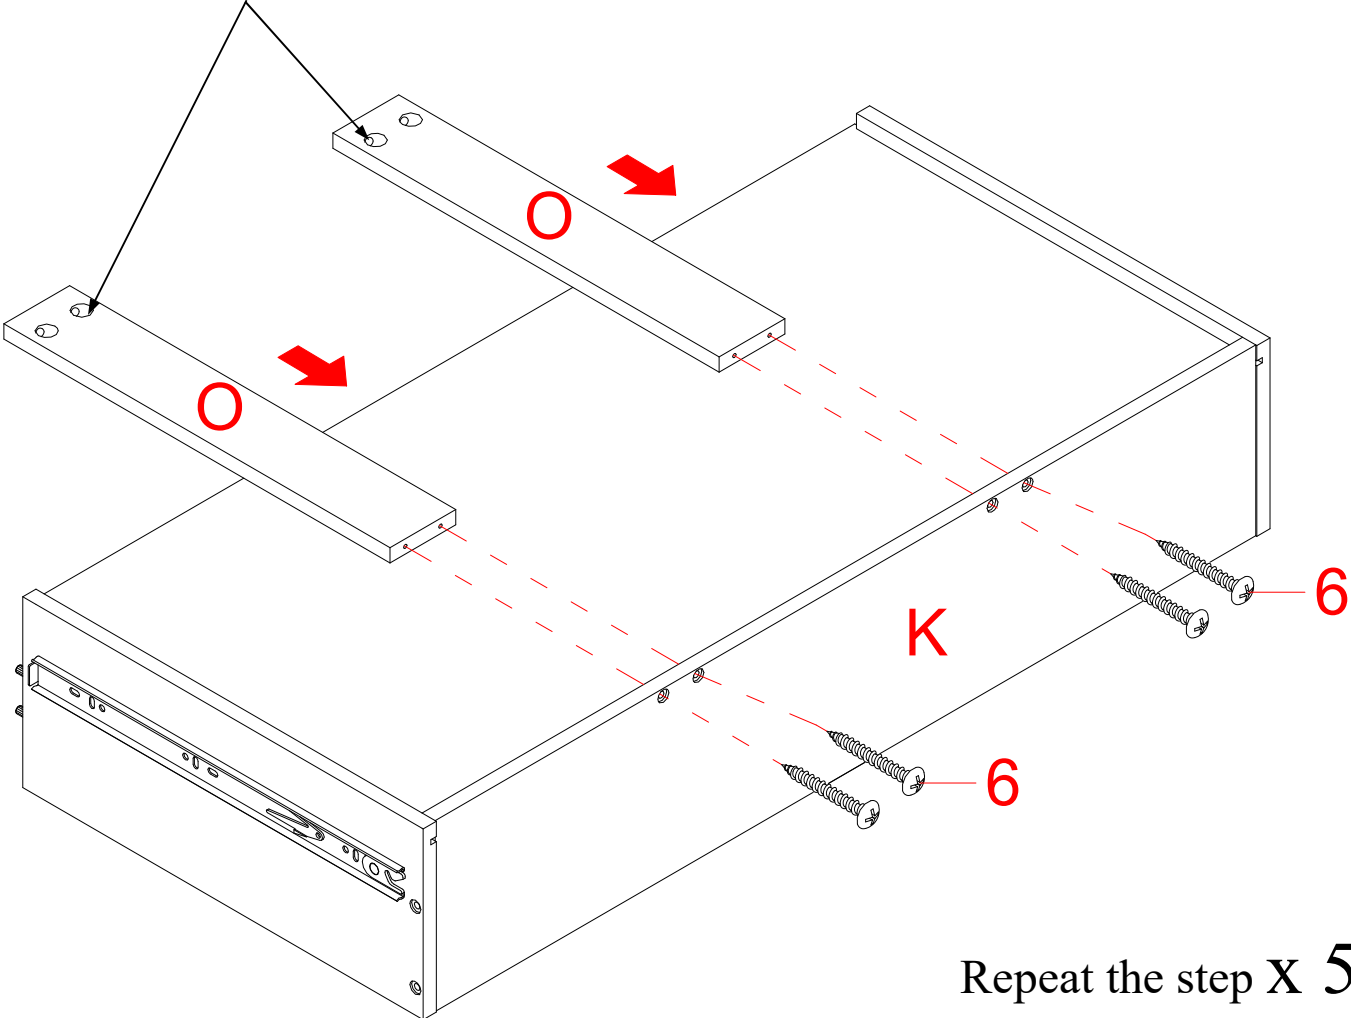

- 8. Orient and fasten two Drawer Bottom Supports (O) to the Drawer Back Panel (K) with two 40 mm Pan Head Screws (6) in each.
- 9. Complete this step five times to assemble five drawer assembly.


Assembly Instructions

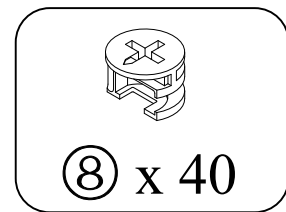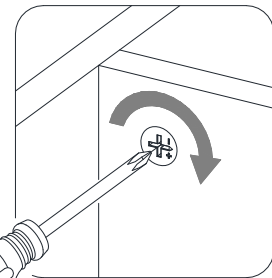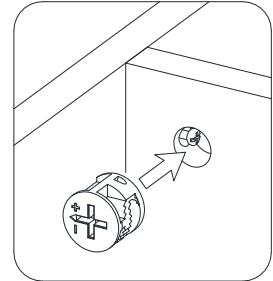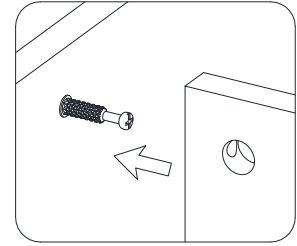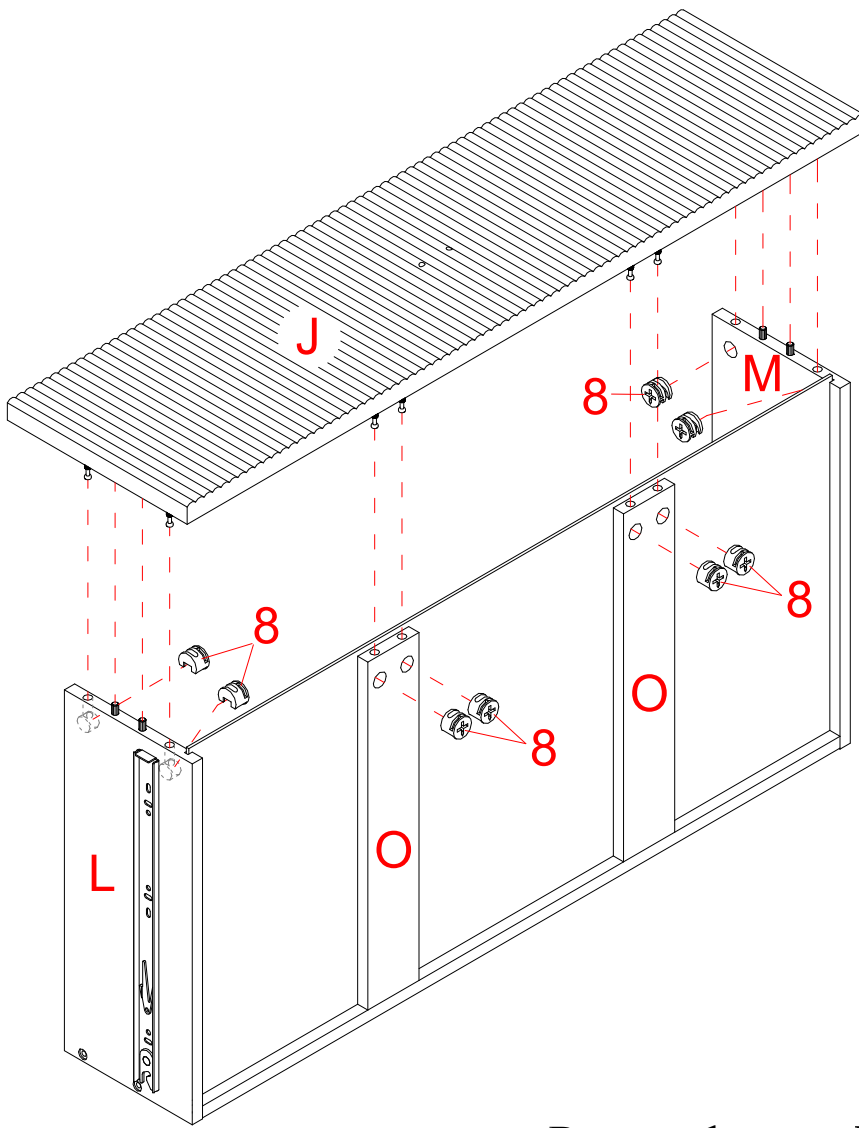


Repeat the step X 5

10. Position the Drawer Front (J) so that the installed Cam Bolts enter the holes in front edge of both Drawer Side Panels (L and M) and Drawer Bottom Support (O). Make sure that the Drawer Bottom Panel (N) fits securely into the groove of the Drawer Front Panel (J).
11. Insert eight Small Cam Locks (8) into the large holes in both Drawer Side Panels (L and M) and Drawer Bottom Support (O), making sure that the arrow on the face of cam lock faces out and points towards the holes on the closest end. Turn the cam locks with a Phillips Screwdriver until securely locked onto the cam bolts.
12. Repeat the same process to assemble the remaining drawer front Panels (J).

Assembly Instructions

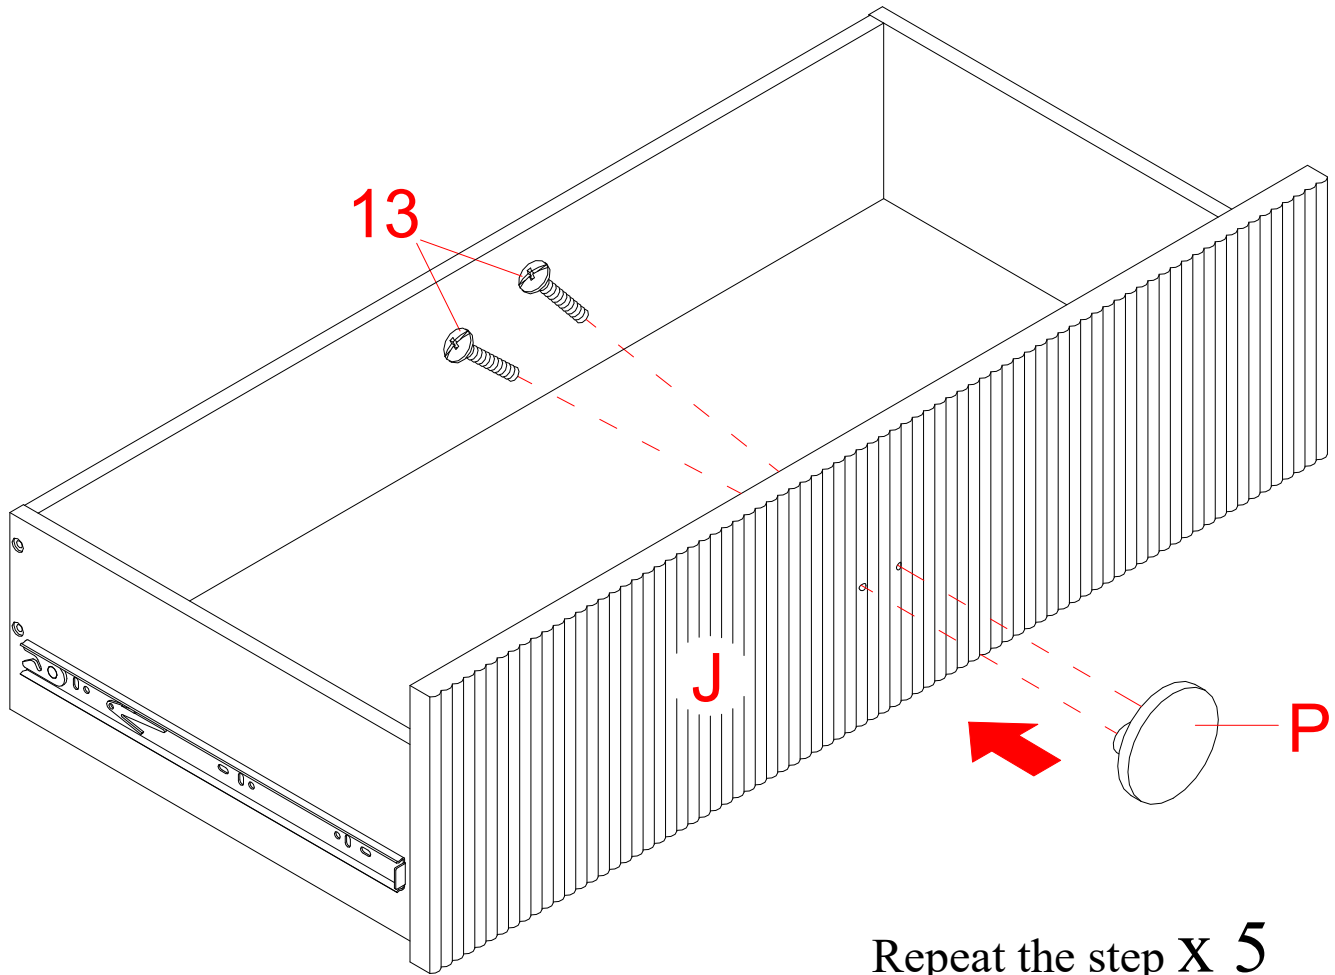


Repeat the step X 5

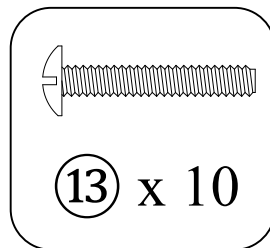





13. Using the pilot holes as a guide, fasten one Knob (P) to the front side of the Drawer Front Panels (J) with two 25 mm Knob Bolts (13).

Assembly Instructions

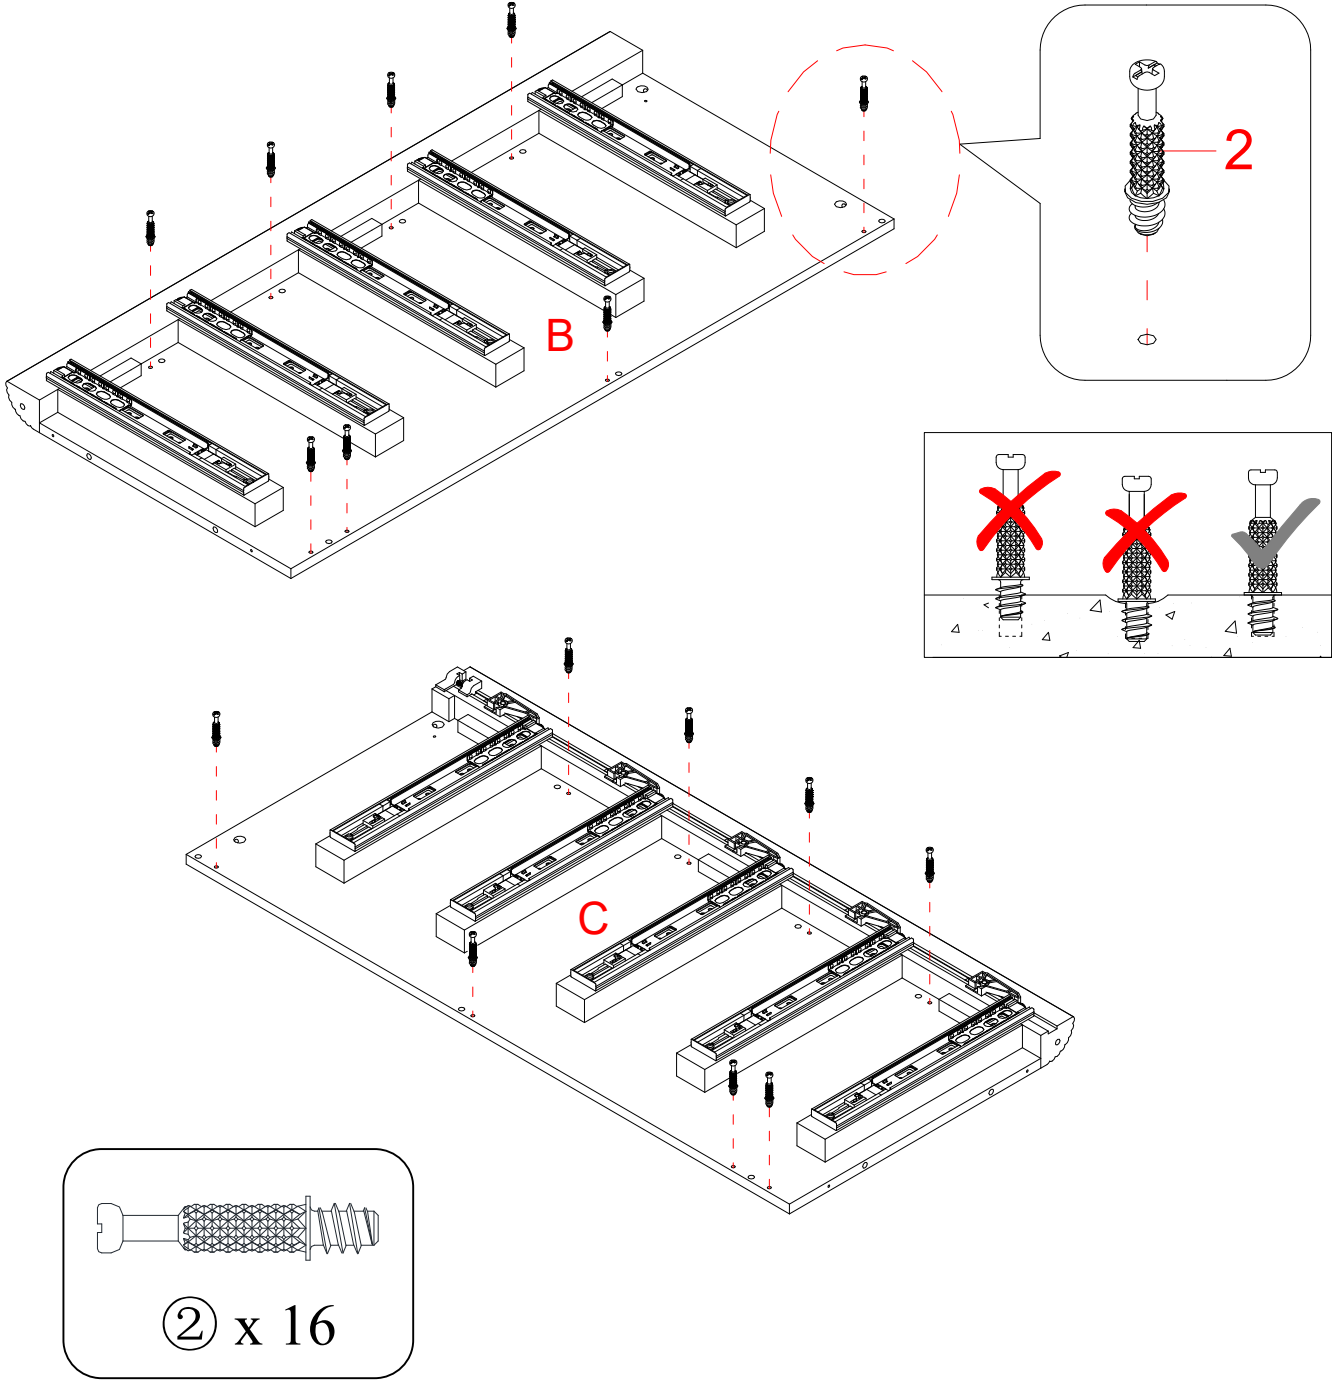





14. Securely screw sixteen Cam Bolts (2) into the designated small holes on both Side Panels (B and C). Tighten the cam bolts with a Phillips screwdriver.

Assembly Instructions

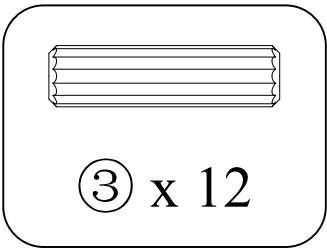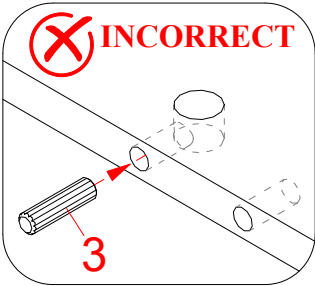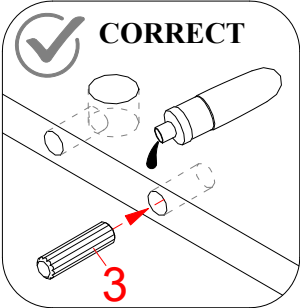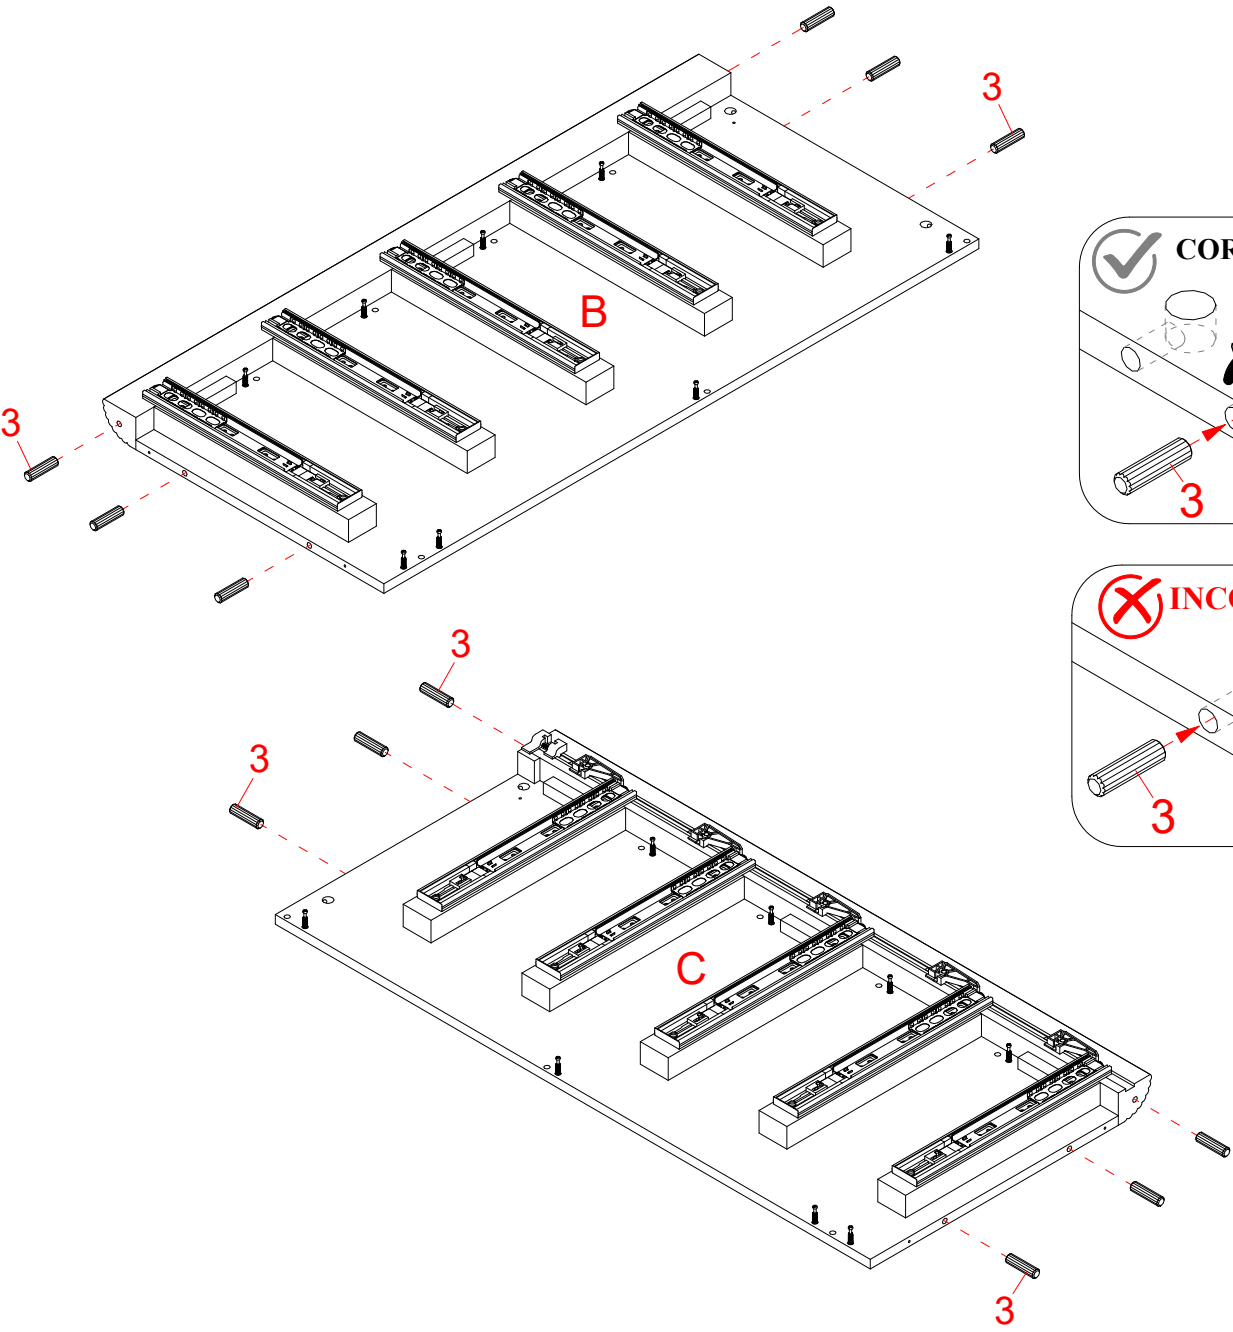


15. Glue twelve Large Wood Dowels (3) into the designated holes on both Side Panels (B and C) as shown.

Assembly Instructions

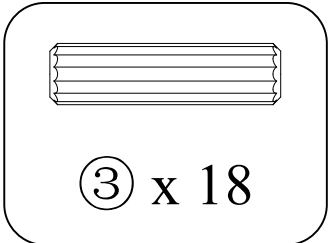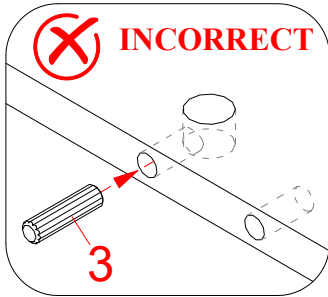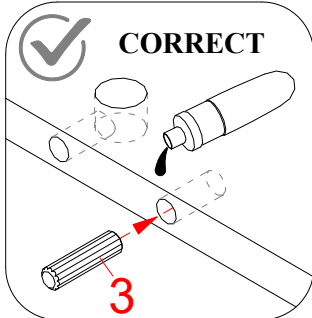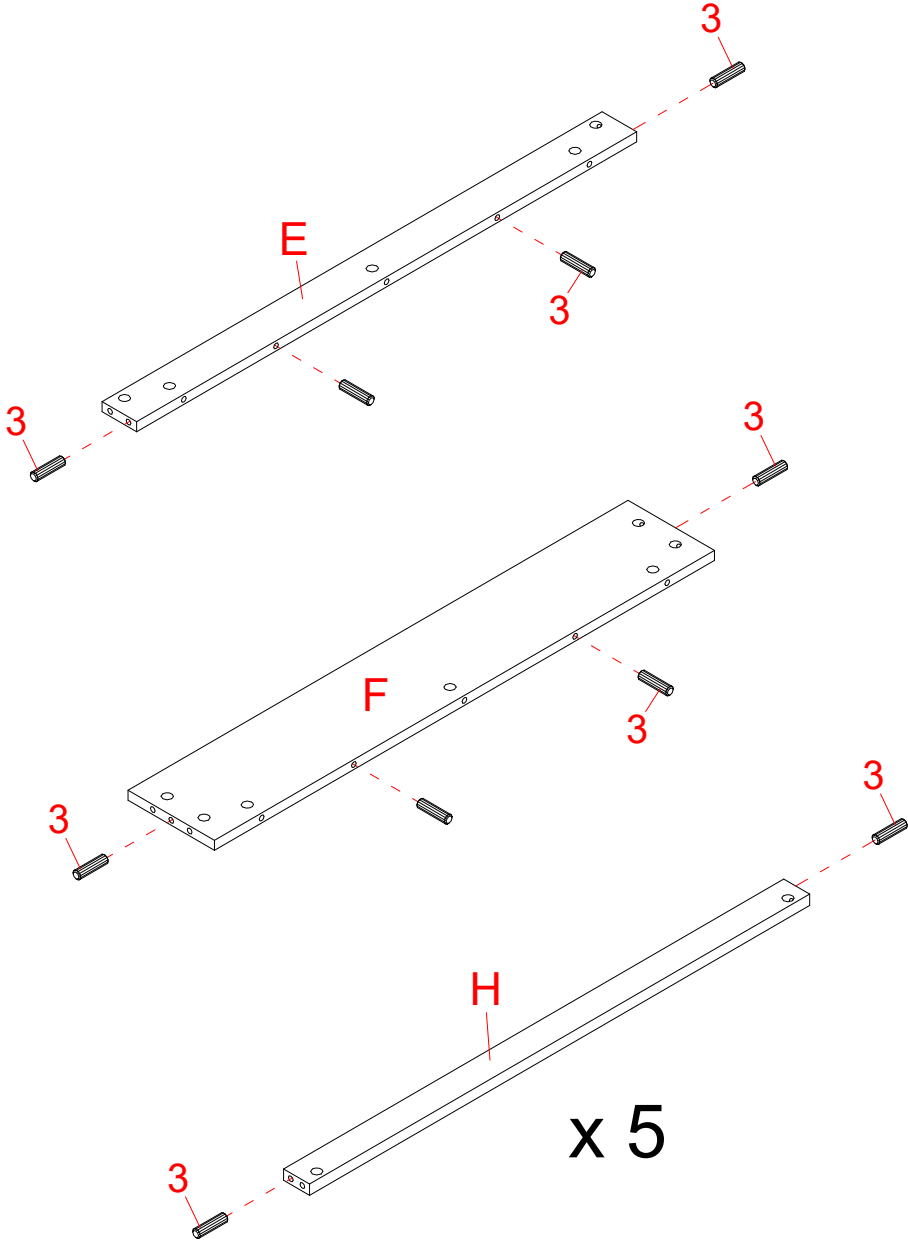


16. Glue eighteen Large Wood Dowels (3) into the designated holes on the Back Stretchers (E and F) and Crossbars (H).

Assembly Instructions

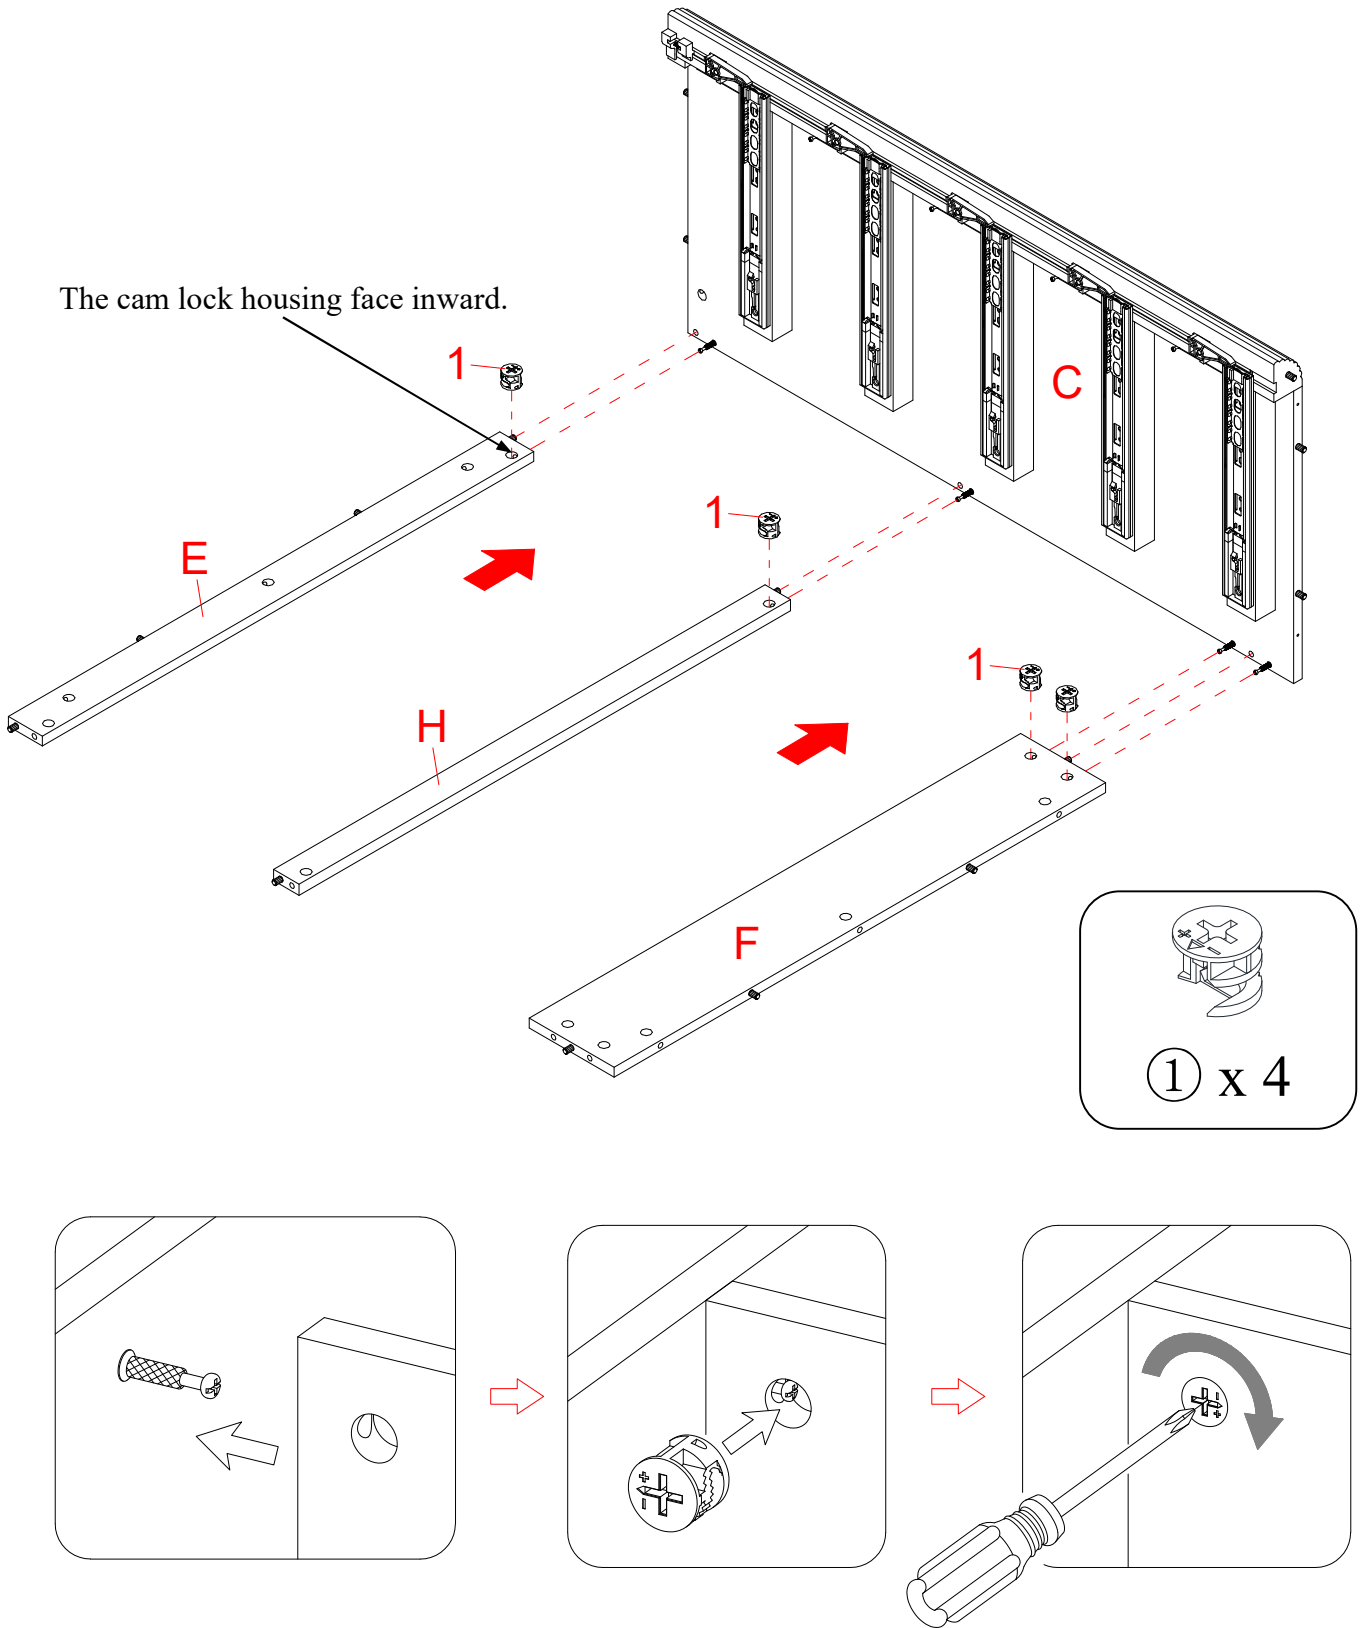





17. Orient and attach the Back Stretchers (E and F) and one Crossbar (H) to the Right Side Panel (C) by engaging four Large Cam Locks (1). Turn the cam locks with a Phillips Screwdriver until securely locked onto the cam bolts.

Assembly Instructions

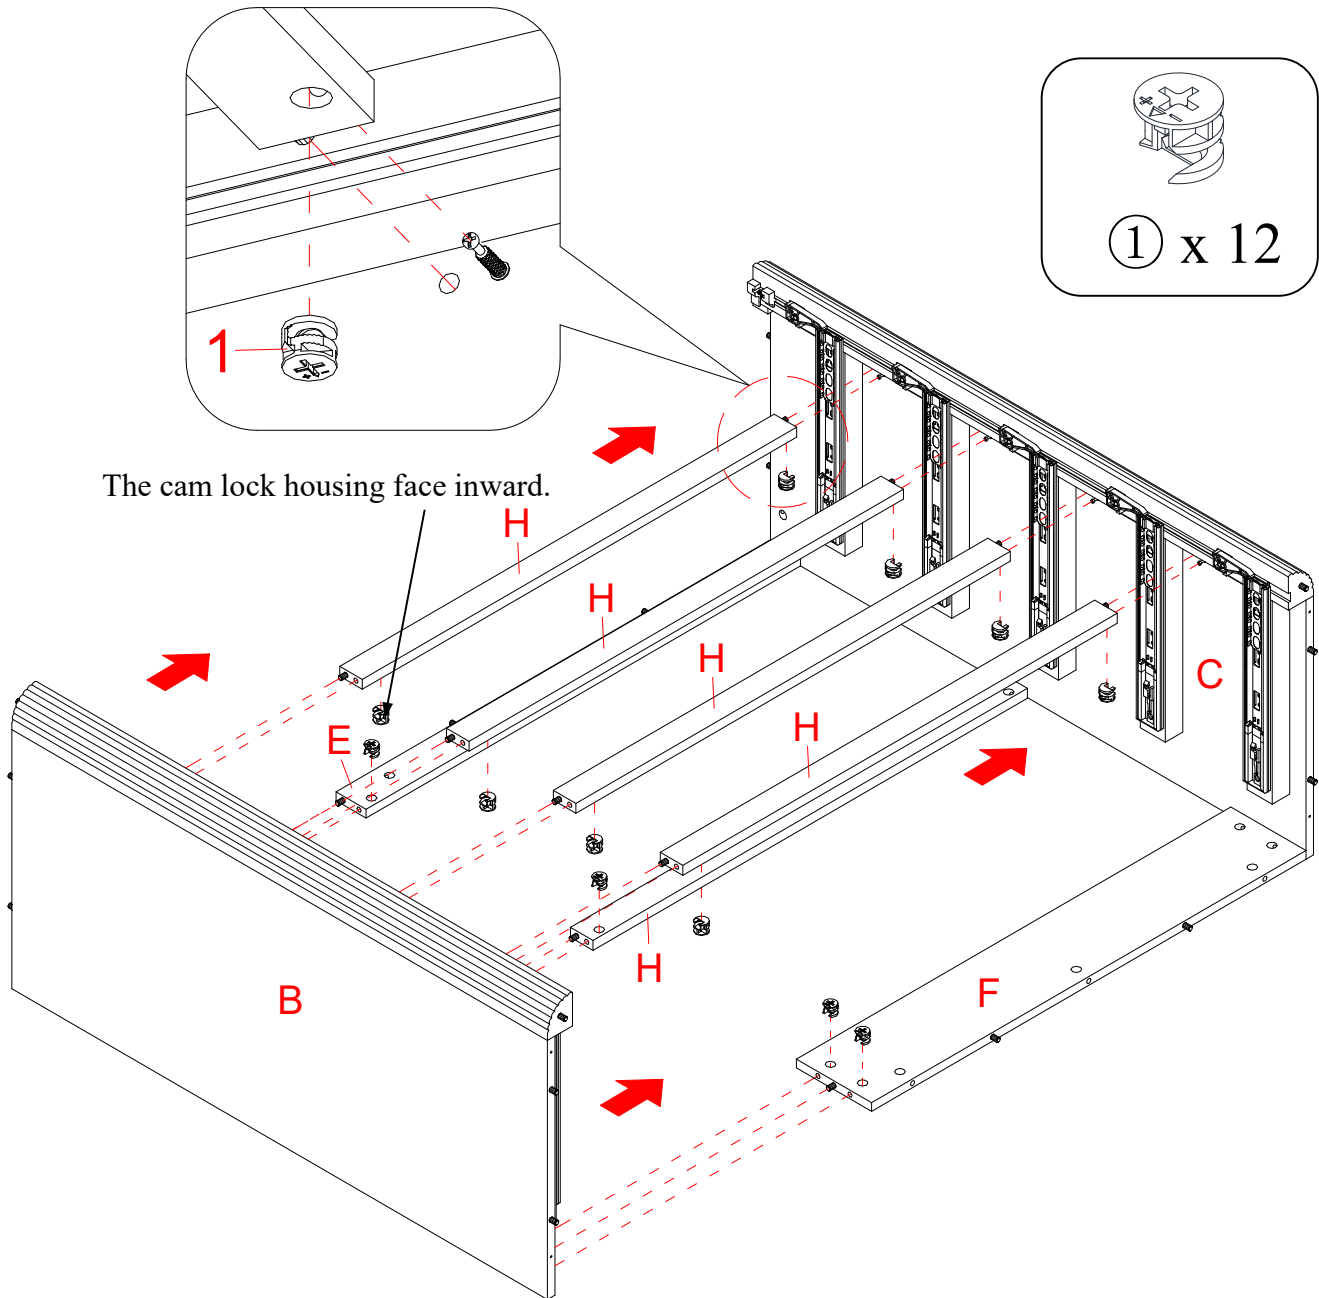


18. Orient and attach the other four Crossbars (H) to the Right Side Panel (C) by engaging four Large Cam Locks (1). Turn the cam locks with a Phillips Screwdriver until securely locked onto the cam bolts.
19. Repeat the same process to attach the Left Side Panel (B) at the opposite end.

Assembly Instructions

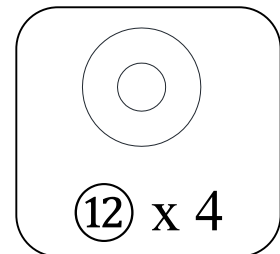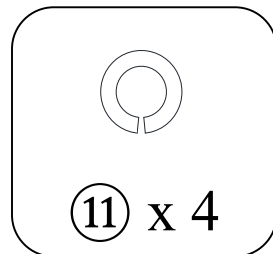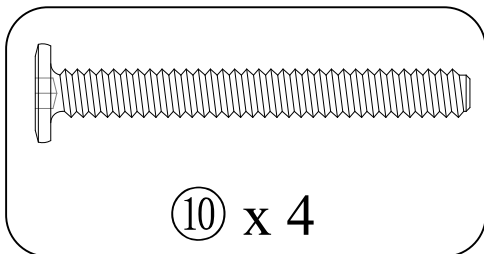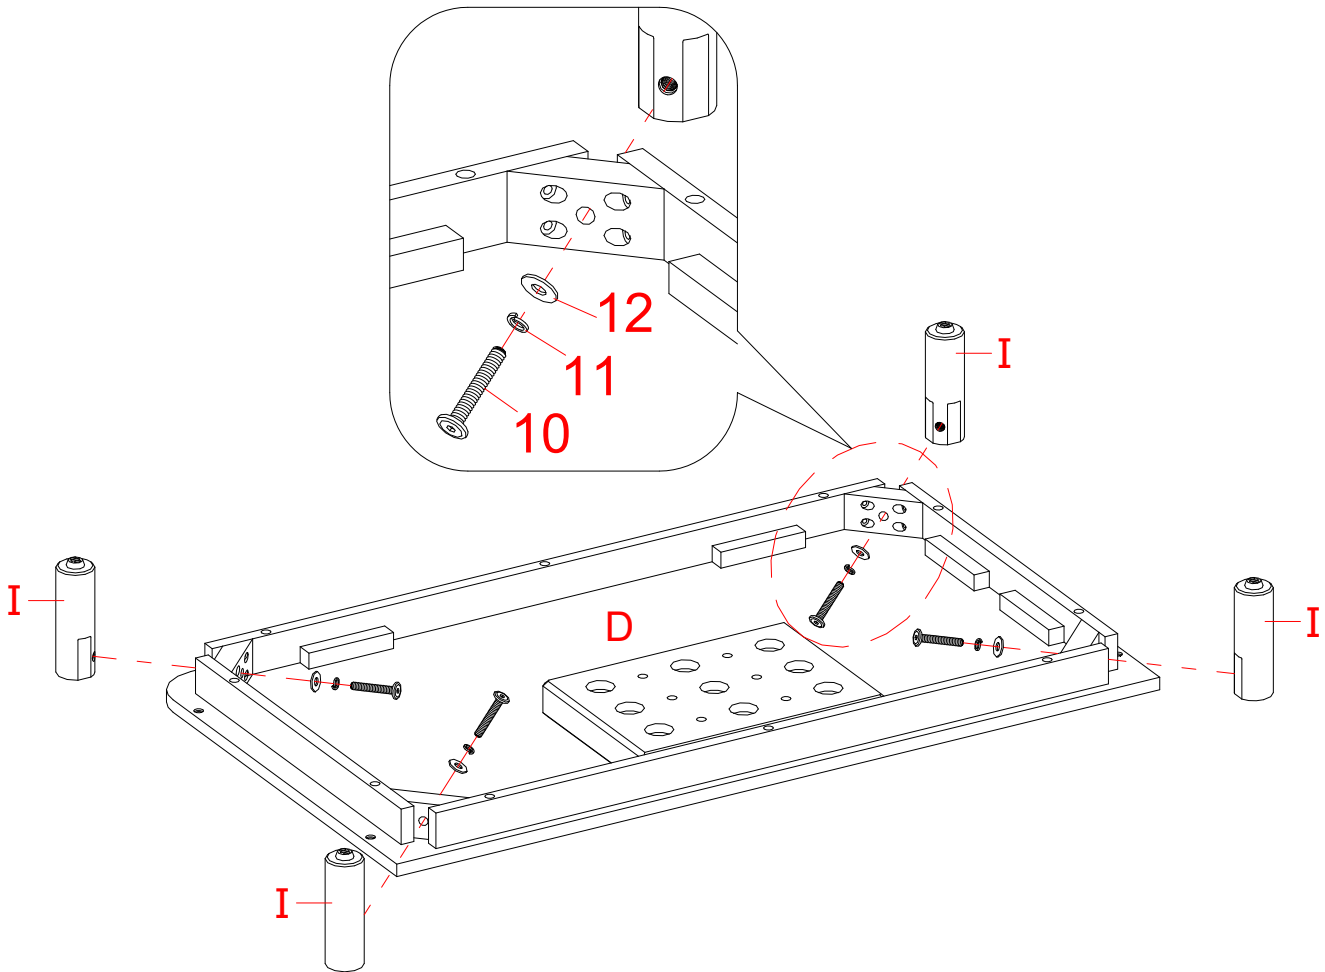



20. Align and attach four Feet (I) to the corner blocks of the Base (D) by inserting four 55mm Bolts (10) with the Lock Washers (11) and Flat Washers (12) through the corner blocks and screw into the threaded inserts in feet. Tighten the bolts with the Ratchet Wrench provided.

Assembly Instructions

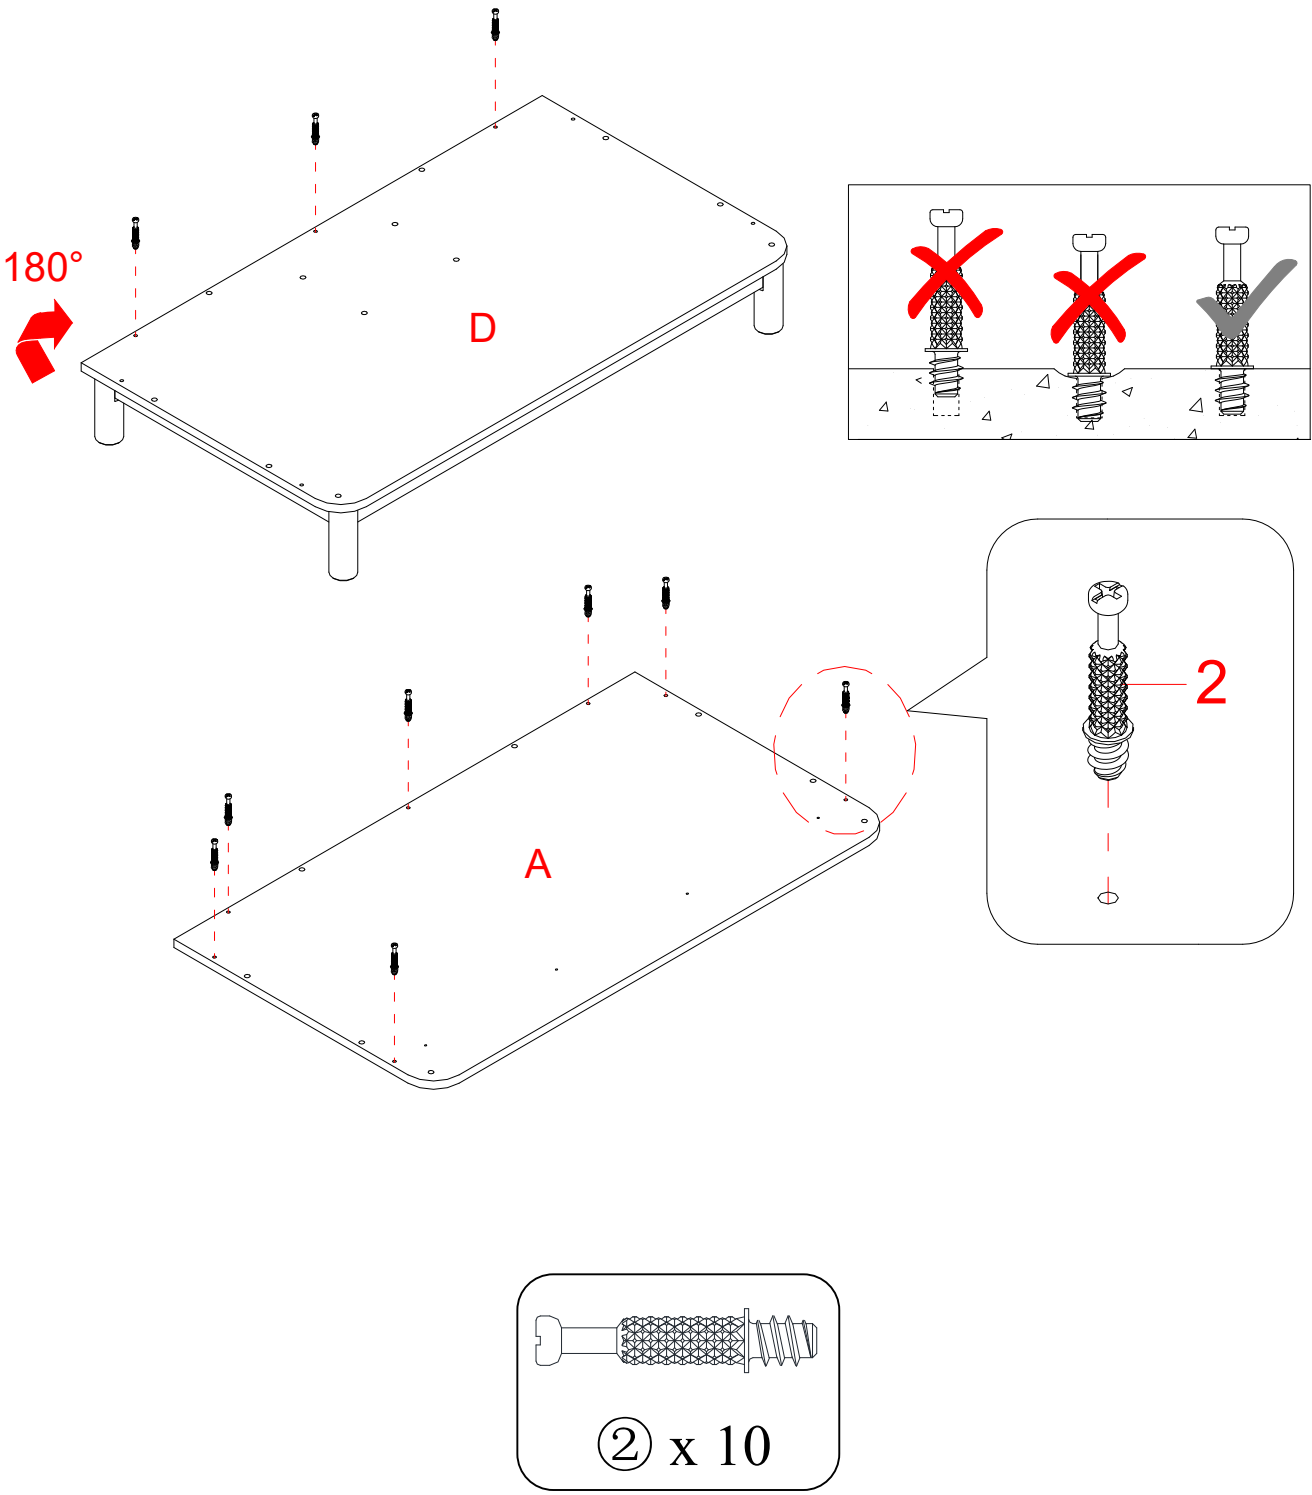


21. Securely screw ten Cam Bolts (2) into the designated small holes on the Top Panel (A) and top surface of the Base (D). Fully tighten with a Phillips Screwdriver.

Assembly Instructions

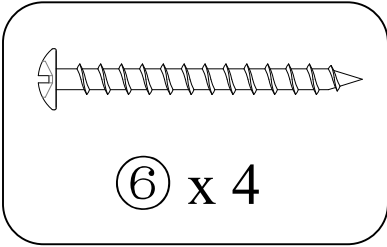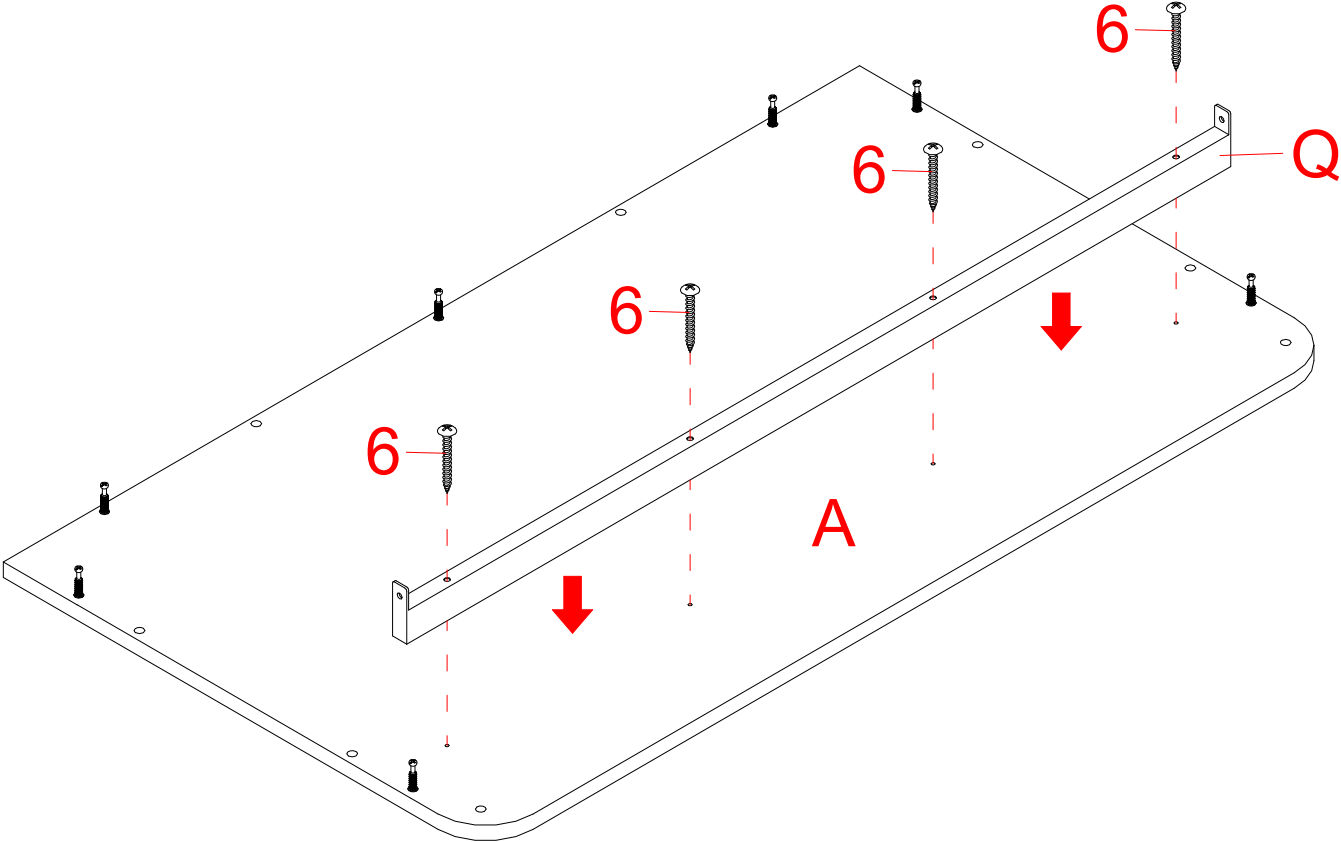


22. Fasten the Reinforcement (Q) to the Top Panel (A) with four 40 mm Pan Head Screws (6).

Assembly Instructions

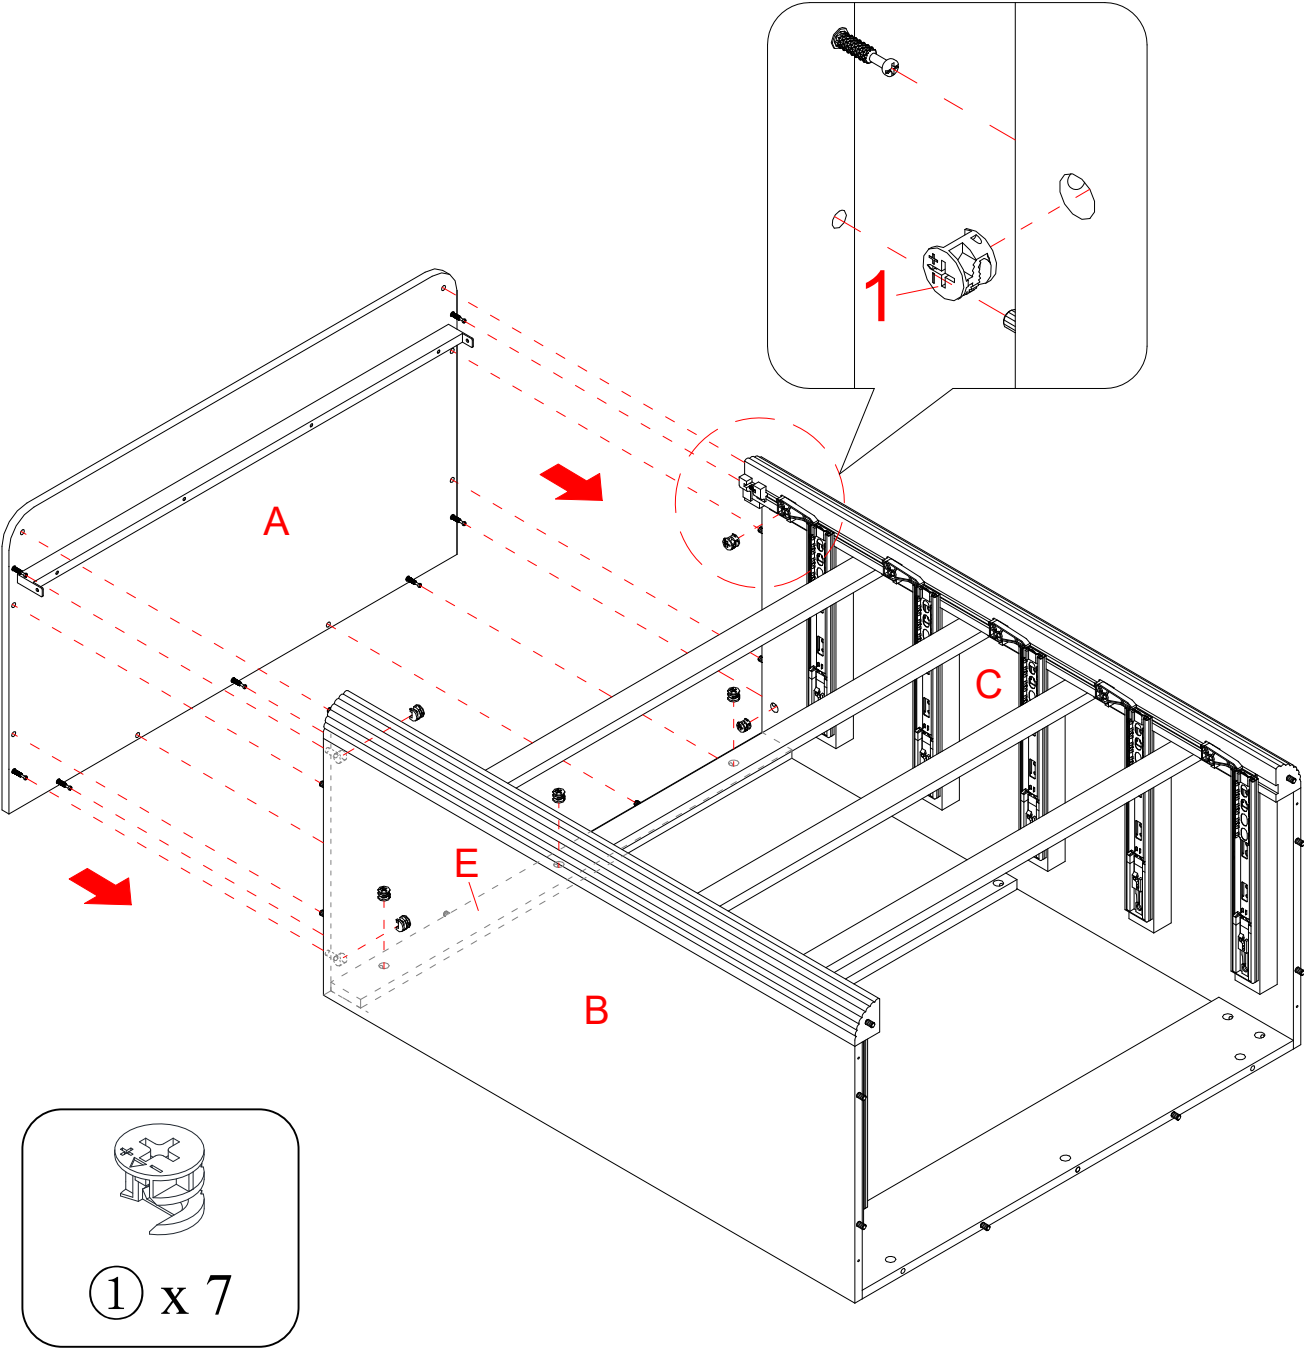



23. Orient and attach the Top Panel (A) to both Side Panels (B and C) and Top Back Stretcher (E) by engaging seven Cam Locks (1). Turn the cam locks with a Phillips Screwdriver until securely locked onto the cam bolts.

Assembly Instructions

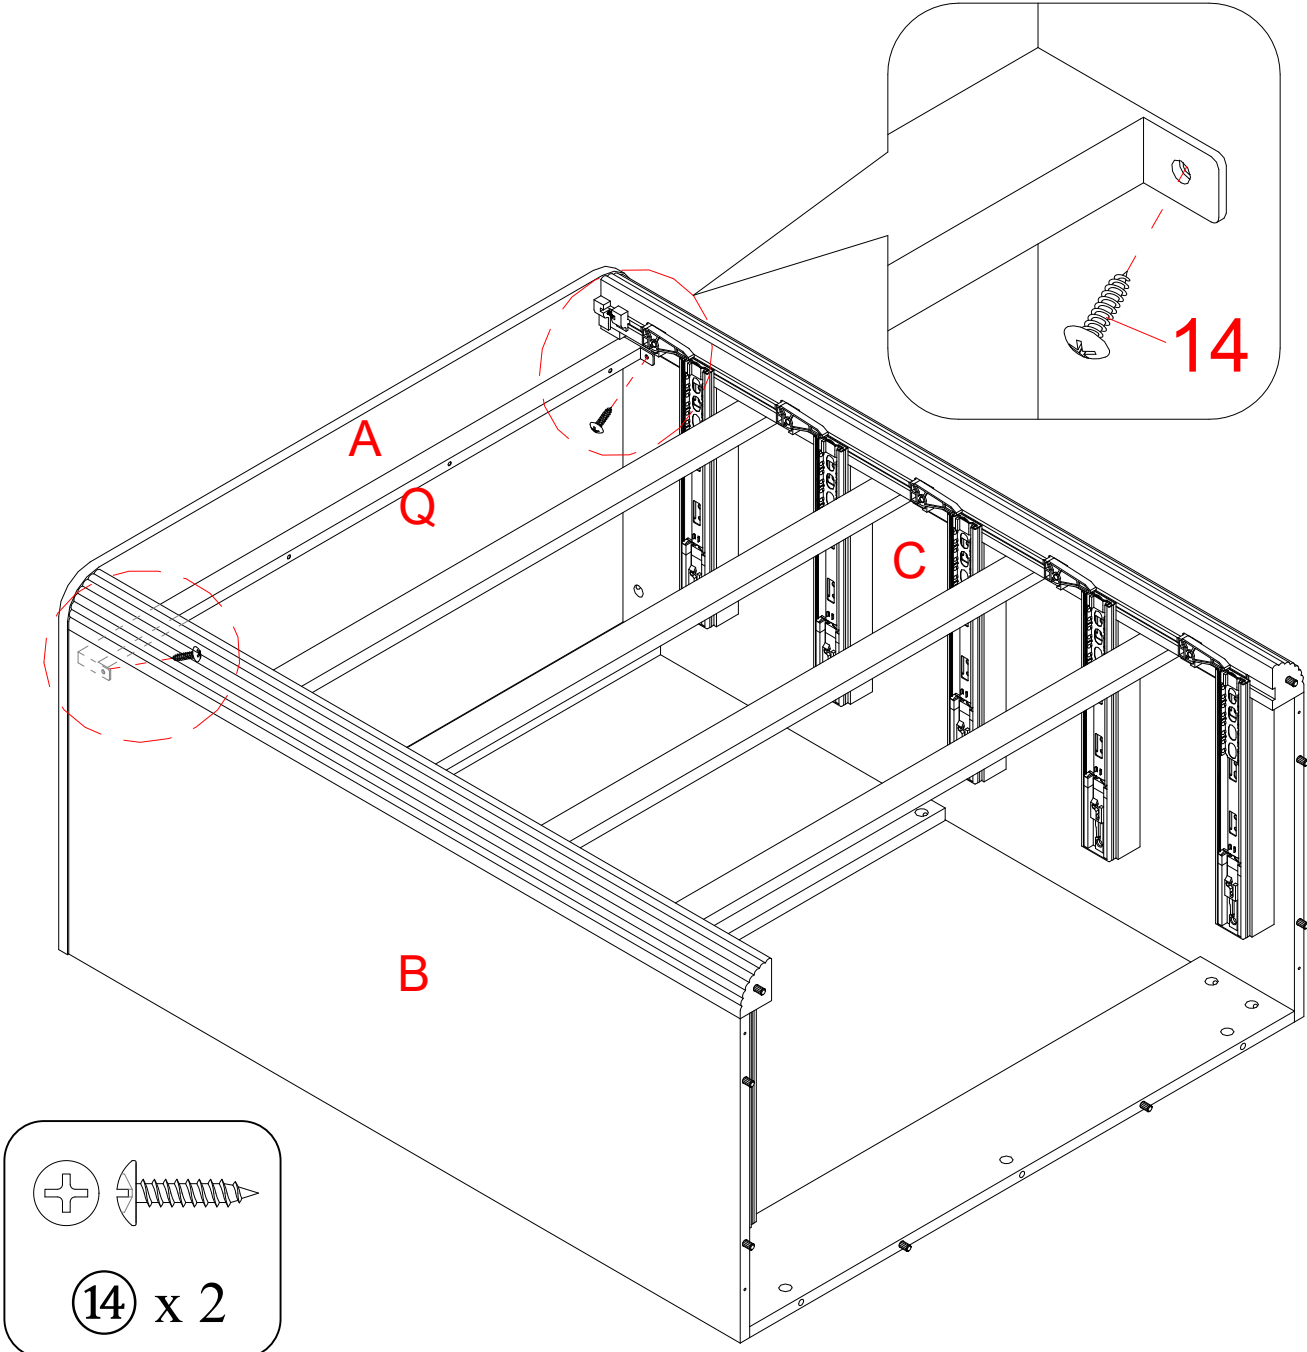


24. Insert two 15 mm Pan Head Screws (14) through the metal tabs on the Reinforcement (Q) and screw into both Side Panels (B and C).

Assembly Instructions

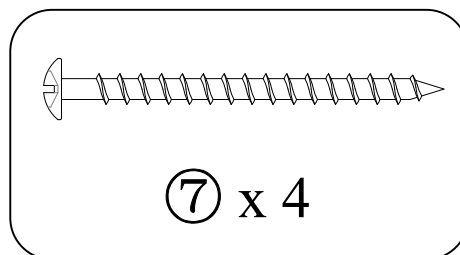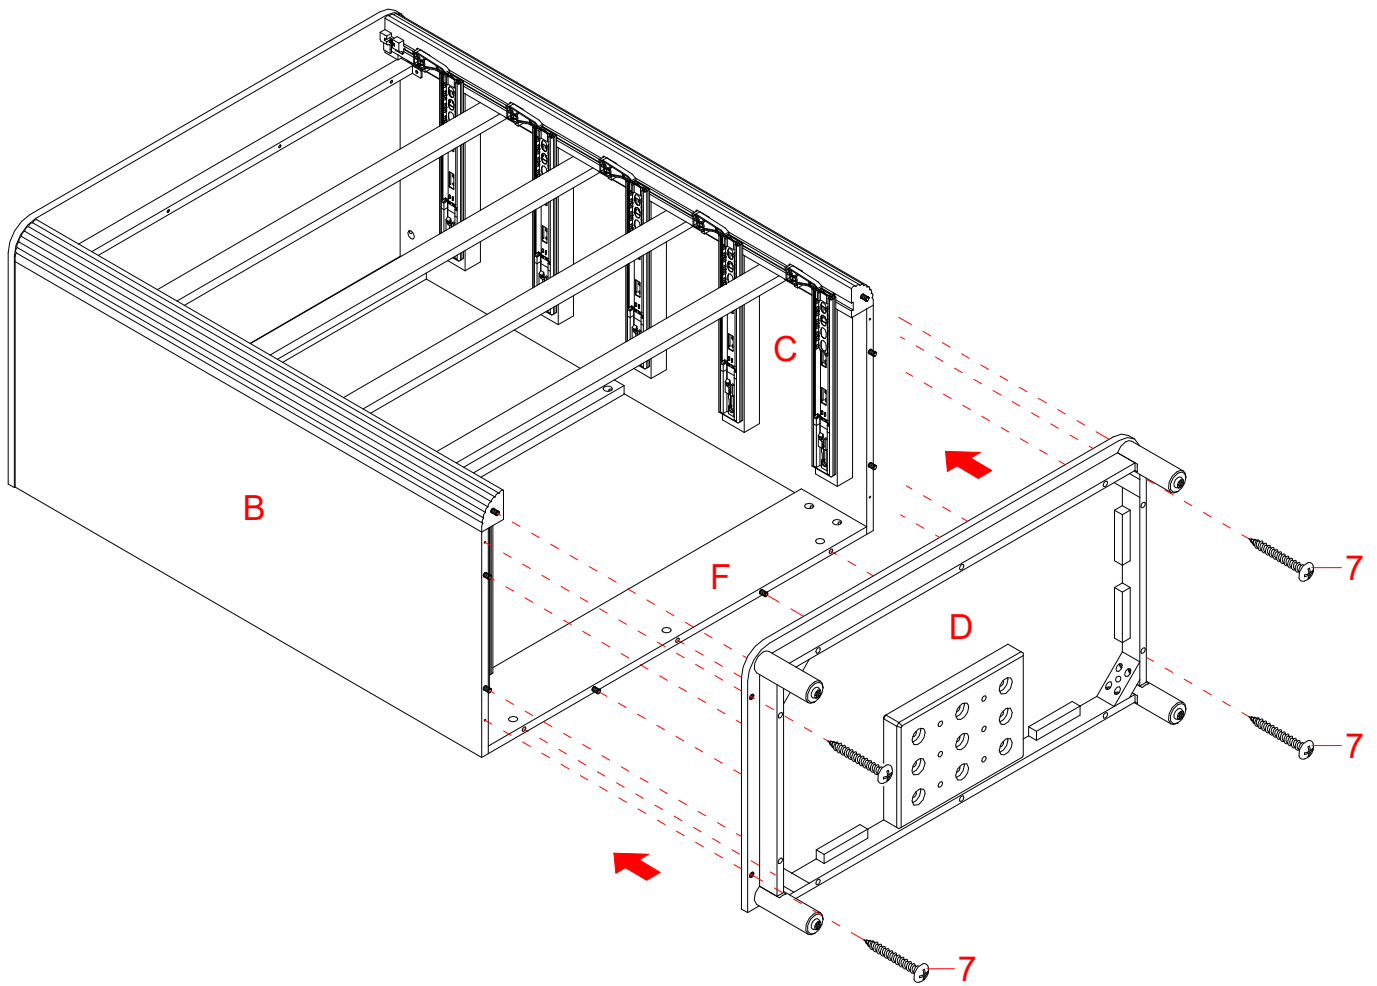


25. Align and attach the assembled Base (D) to both Side Panels (B and C) by inserting four 50 mm Pan Head Screws (7) through the pre-drilled holes and securely screw into the place.

Assembly Instructions

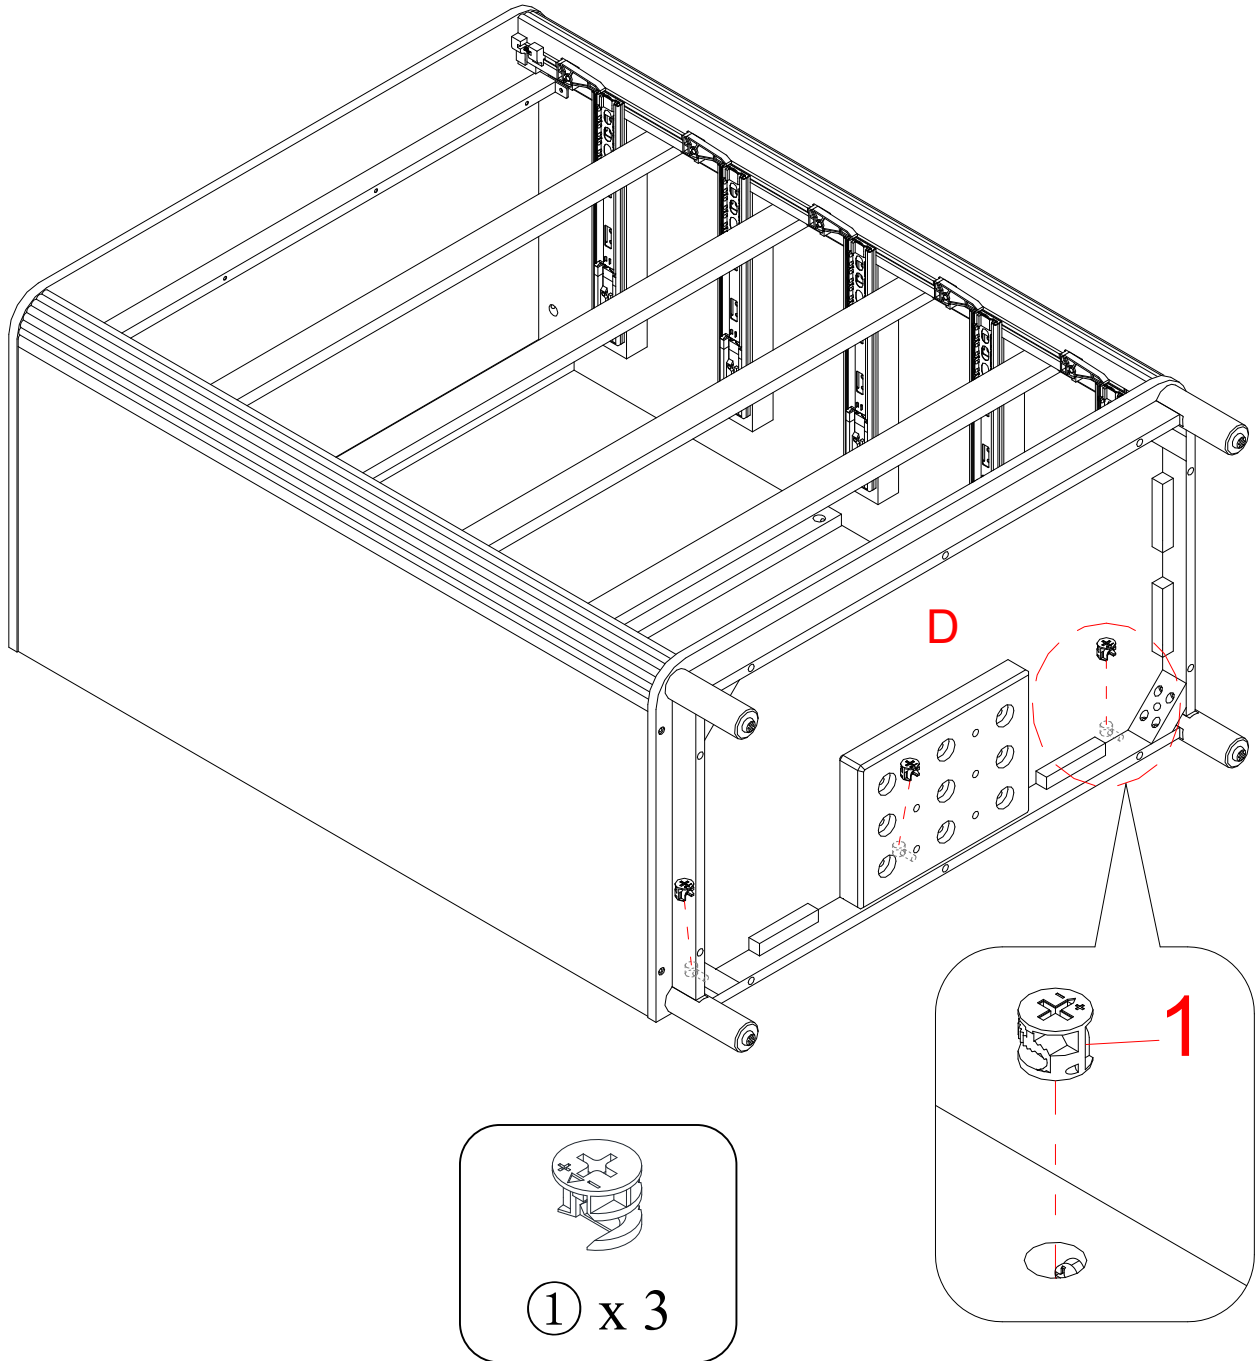

26. Secure the Lower Back Stretcher (F) to the Base (B) by engaging and tightening three Large Cam Locks (1). Turn the cam locks with a Phillips Screwdriver until securely locked onto the cam bolts.
27. Go back and tighten all fasteners. Make sure that all the parts are tight and there are no gaps between the pieces. This will help keep the unit square. Ask for assistance to stand the assembled unit upright.

Assembly Instructions

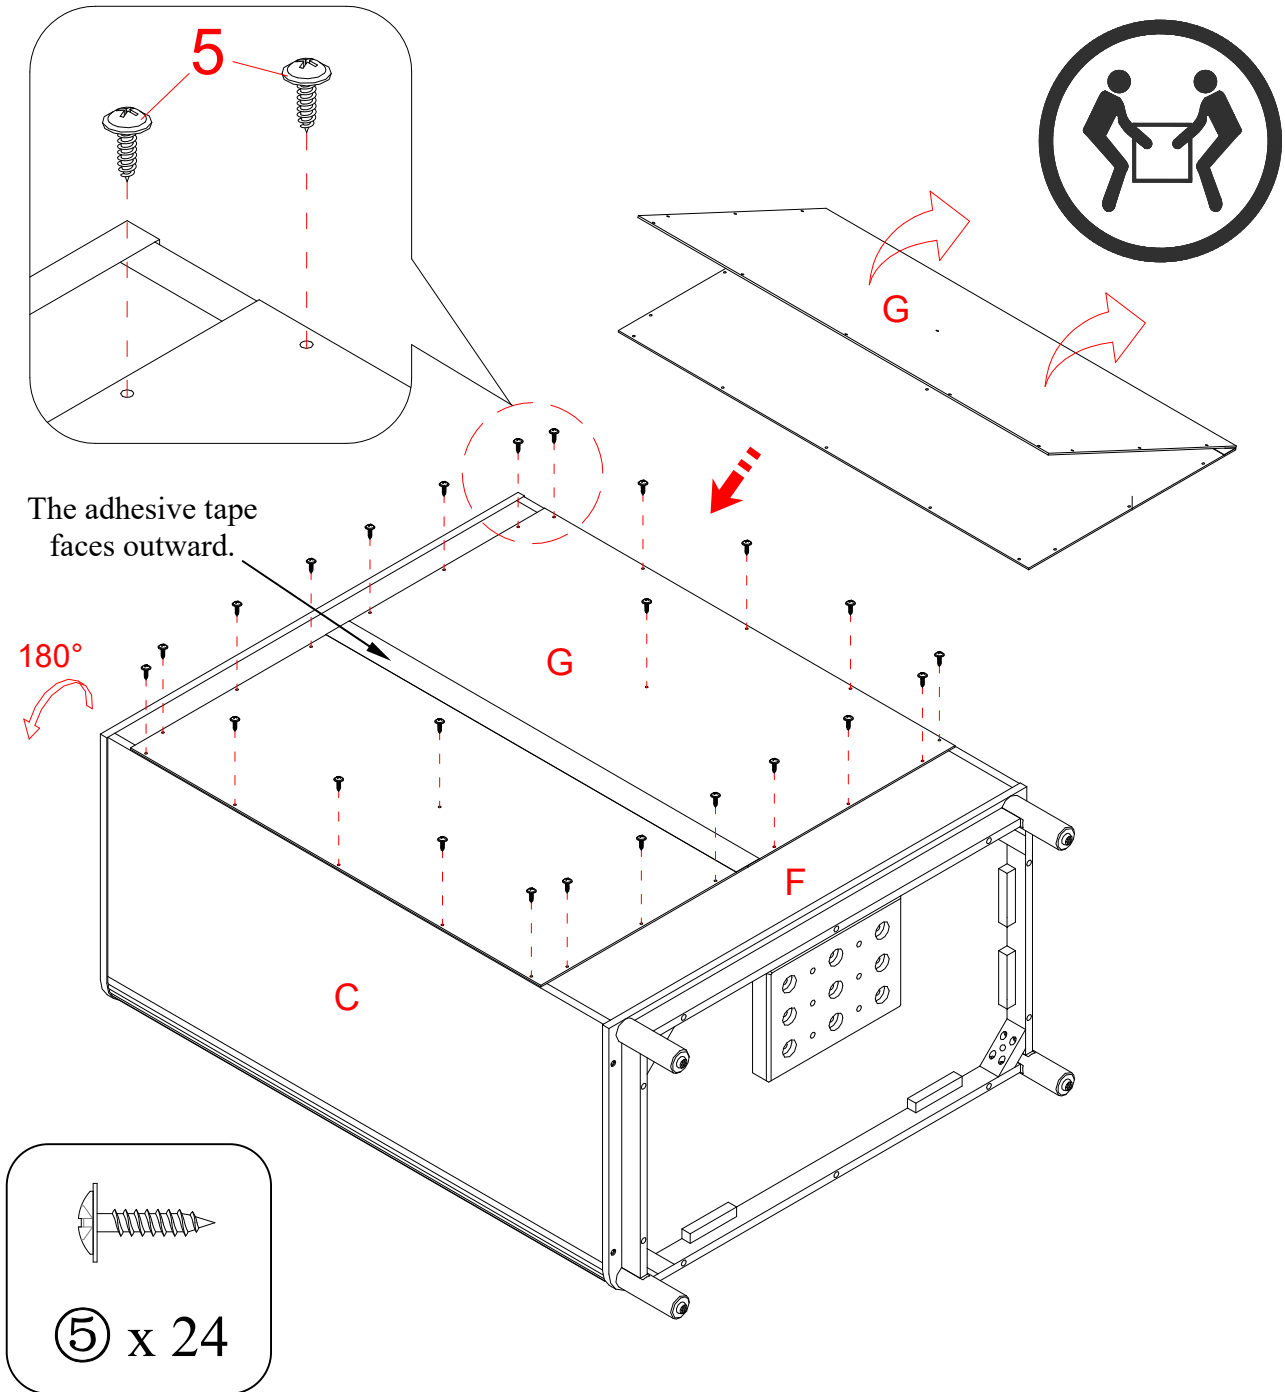


28. Ask for assistance to turn the assembled unit on its front edges.



29. Unfold the Back Panel (G) and lay it to the back of the assembled unit. Make sure that the pre-drilled holes against the upper long edge overlap the pilot holes on the Top Back Stretcher (E). Fasten it into place with the provided Washer Head Screws (5). DO NOT damage the edges.

NOTE: We recommend attaching back panel with washer head screws at the corners first.

Assembly Instructions

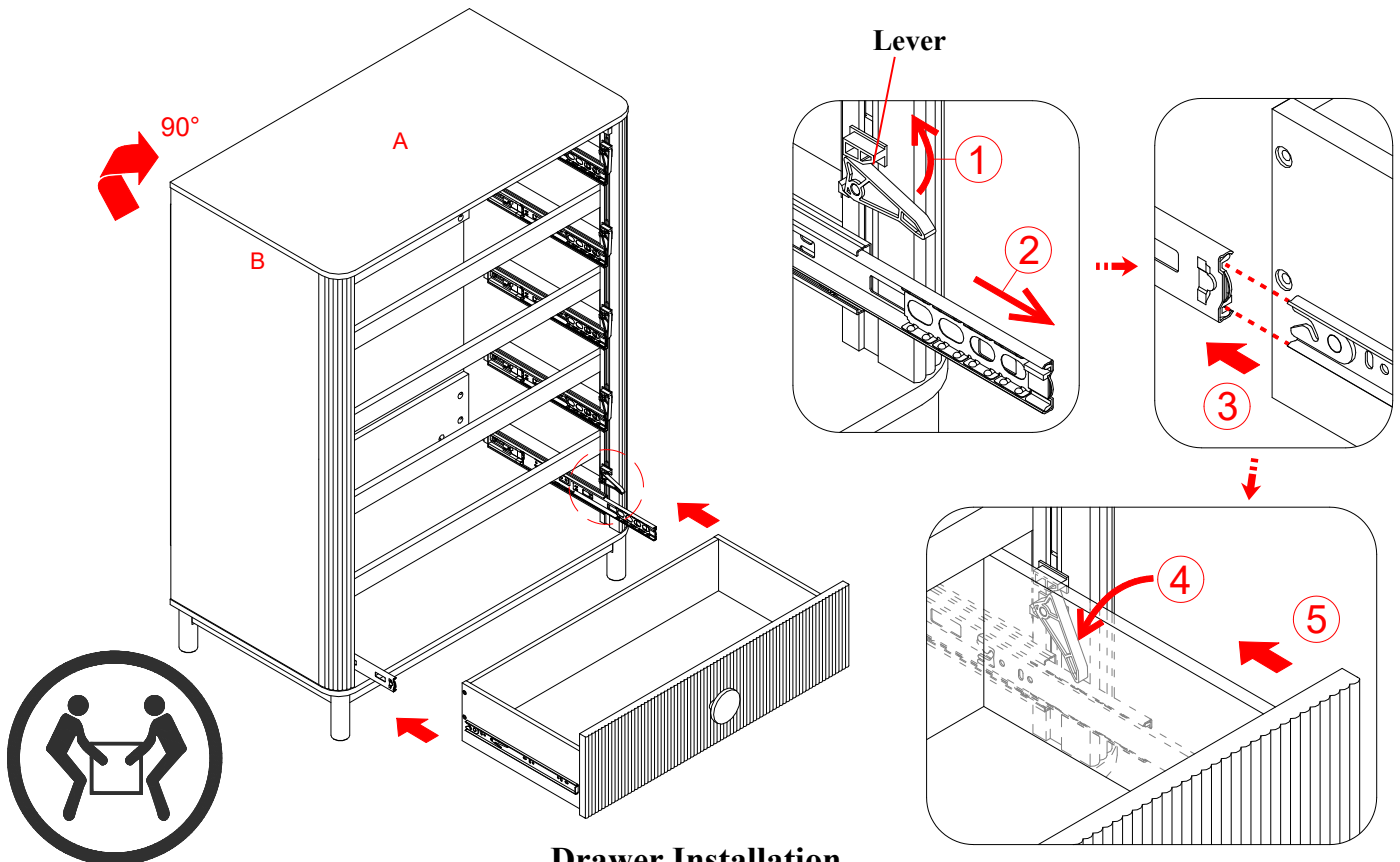

Drawer Installation

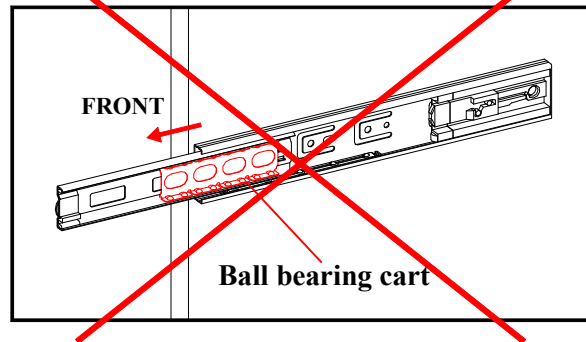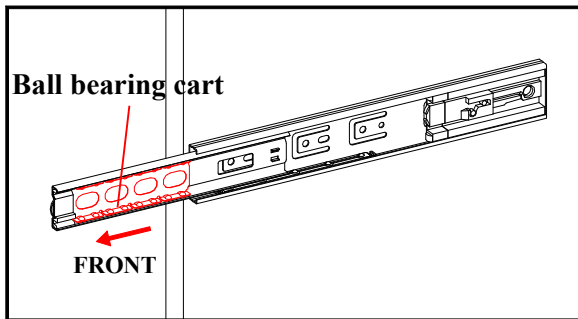

30. Ask for assistance to lift the assembled unit upright and position it near the final location.

31. Insert the assembled drawers into the frame by following the steps below:

- ①. Lift the lever upwards.
- ②. Extend the Ball Bearing Slide Tracks on the panels all the way forward (including ball bearing cart).
- ③. Align the Slide Runners on the assembled drawer with the Slide Tracks and push the drawer completely inside until it stops and hear a “click” sound.
- ④. Manually lowered the lever onto the drawer slide.




NOTE: If the drawer does not go in smoothly, please take it out and repeat the step. If you need to remove the drawer, please pull the drawer all the way out, then simultaneously pushes the plastic release lever of the ball bearing slides up on one side and down on the other side, and then pull it completely out.



WARNING


Ensure that no more than one drawer is opened simultaneously.

Assembly Instructions

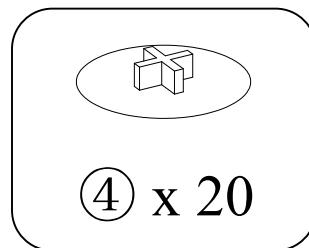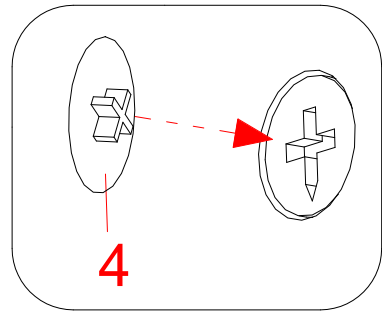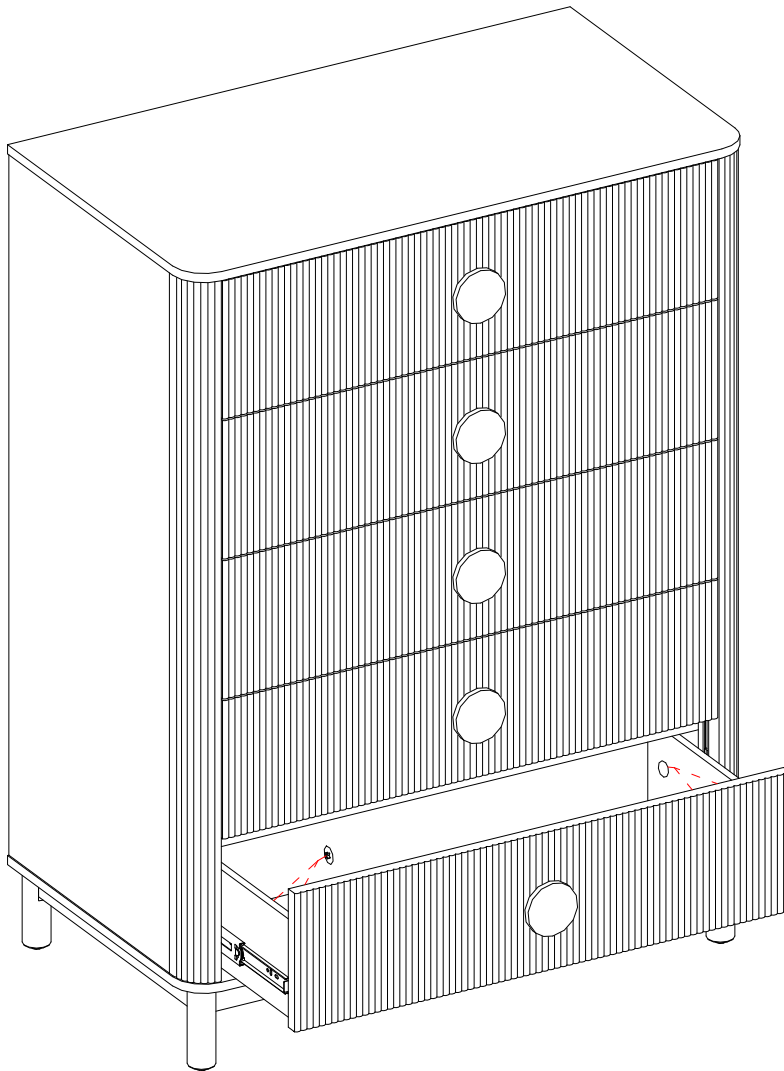

32. Open the drawers and plug the Cam Lock Covers (4) onto the visible Cams Locks to conceal the cams.

Assembly Instructions

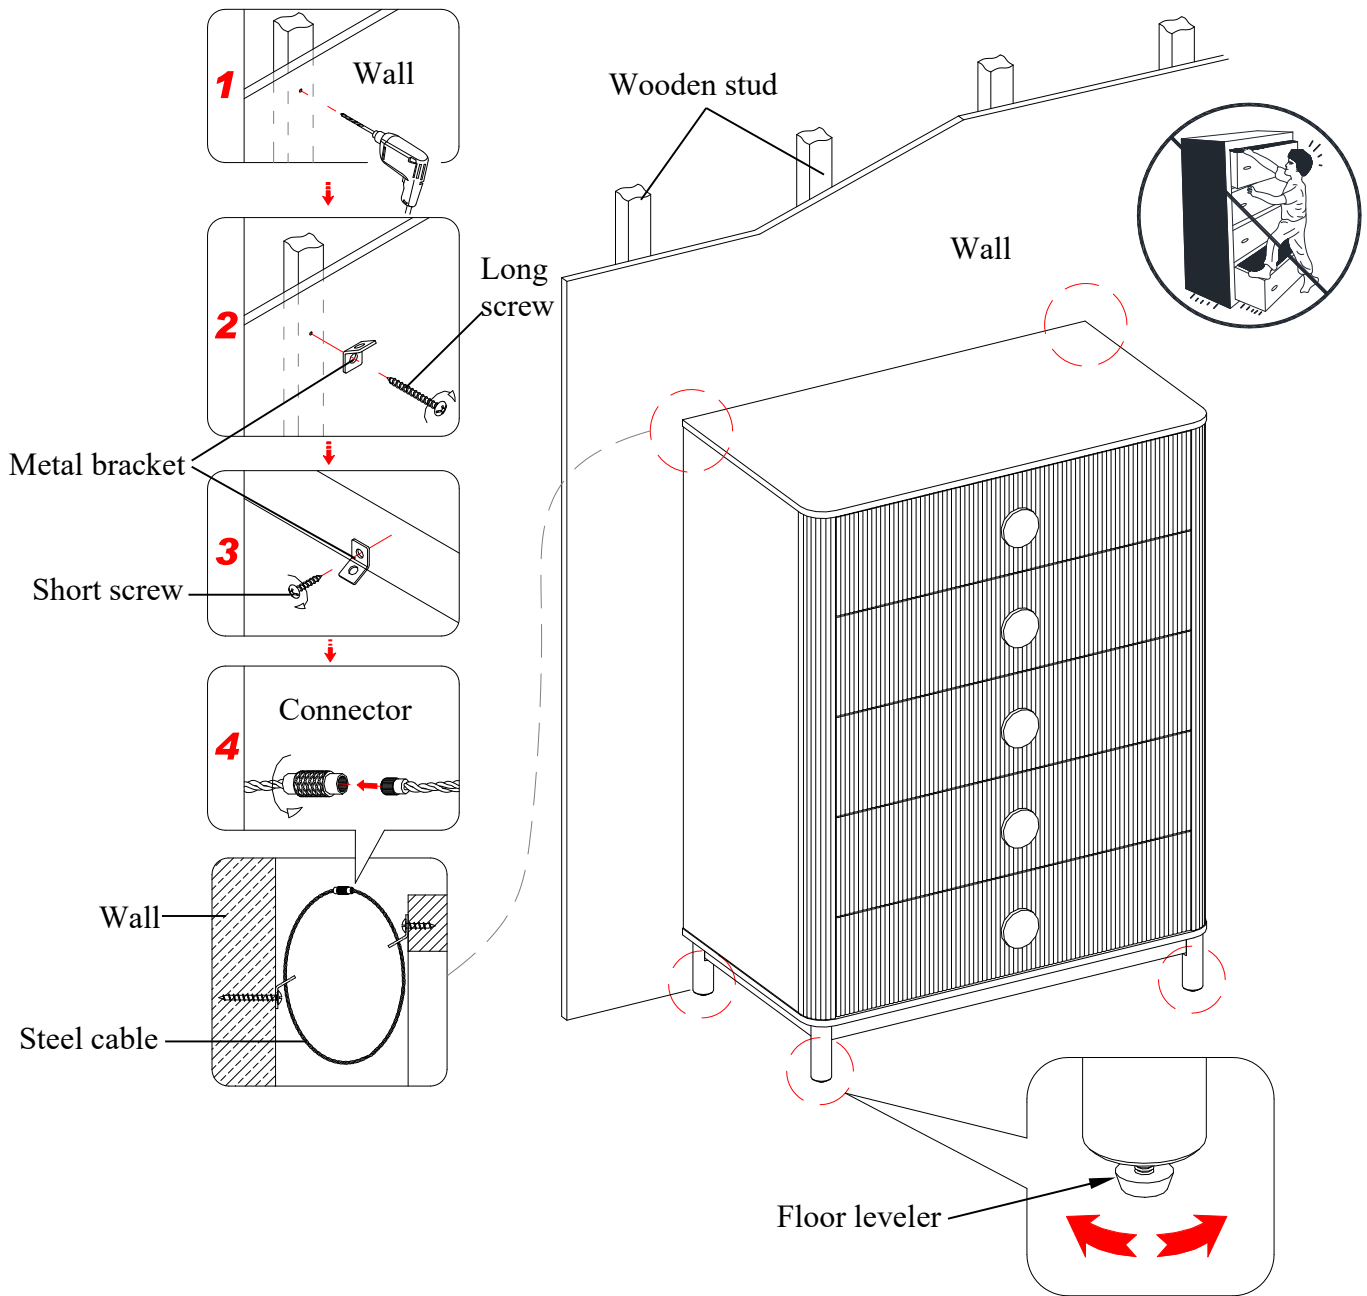

Tools required (not included): Phillips screwdriver, stud finder, tape measure, pencil, power drill and 1/8" drill bit.

33. Ask for assistance to position the assembled unit at the desired location against a wall. If necessary, adjust the pre-attached Floor Levelers at the bottom of Feet (I) to level the unit.
34. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Gently rub the surface with a soft dry cloth, soft damp cloth, or soft damp cloth with neutral detergent, and then dry it well.
- Strong Alkaline detergents or acidic detergents are not recommended to use.
- Sponges containing abrasive agents or fibers are not recommended to use.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage your furniture's finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further Advice about Furniture Care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Follow these important and helpful tips that will enhance your furniture as it ages.

A touchup pen has been provided to minimize the small nicks or scratches that may occur during assembly or shipping.

We hope you enjoy your purchase for many years.
Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Whalen Furniture Manufacturing
1578 Air Wing Road, San Diego, CA 92154, USA
Customer Service: 1-866-942-5362
8:30 a.m. - 4:30 p.m., PST, Monday to Friday
www.whalenstyle.com