


Woven Coastal Coffee Table

Stock # BH3425004710025

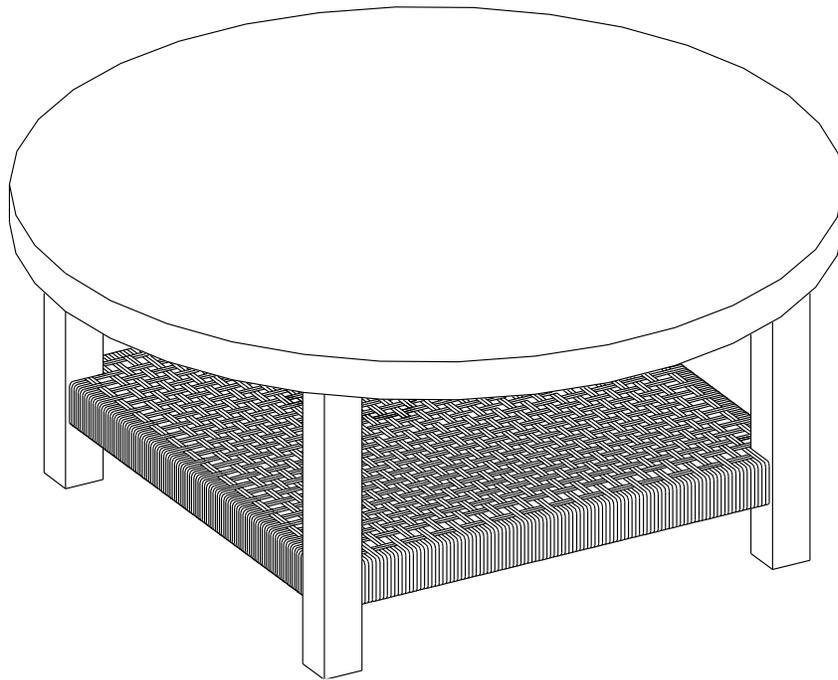

ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, **DO NOT** return this item to the store where it was purchased. Please call our customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

1-866-942-5362

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday - Friday

Or visit our website 24 hours a day, 7 days a week for product assistance at


www.whalenstyle.com

Or e-mail your request to **parts@whalenfurniture.com**

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

MAXIMUM RECOMMENDED WEIGHT LOADS

MANUFACTURER: Whalen Furniture Manufacturing
CATALOG: Woven Coastal Coffee Table
MODEL # BH3425004710025

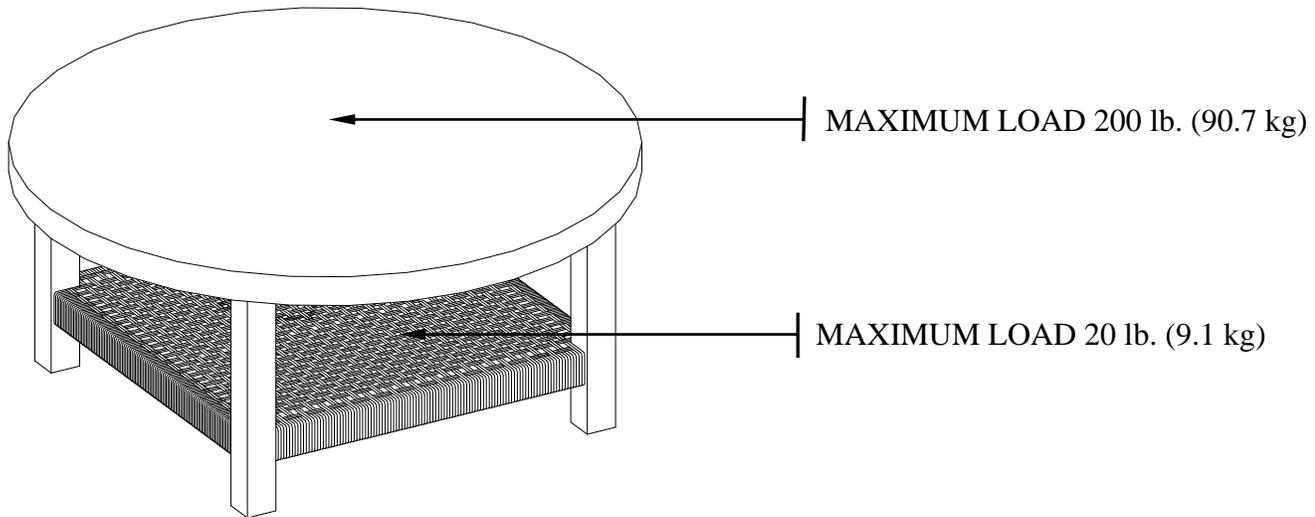


⚠ WARNING THIS UNIT IS INTENDED ONLY FOR USE WITHIN THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.

SPECIAL NOTES


- Please read the assembly instructions completely before assembling the item.
- Remove all parts from carton and separate into groups as indicated on the parts list.
- Please ensure all parts are included prior to assembly.
- Use of power tools to assemble the item is not recommended.
- Examine all packaging material and remove any staples from the carton before discarding.

Parts and Hardware List


Please read the assembly instructions thoroughly and verify that all listed parts and hardware are present before beginning assembly.

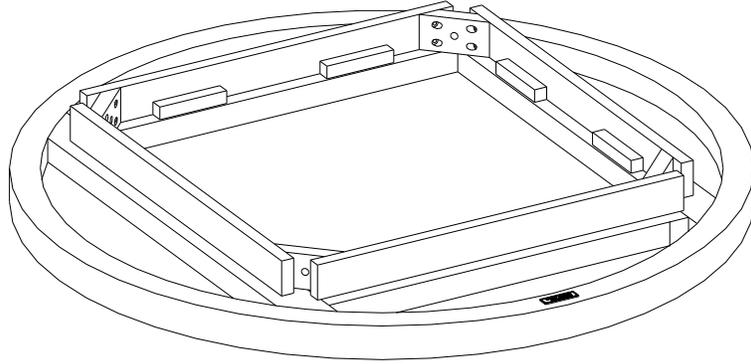


A- Table Top
(Qty. 1)

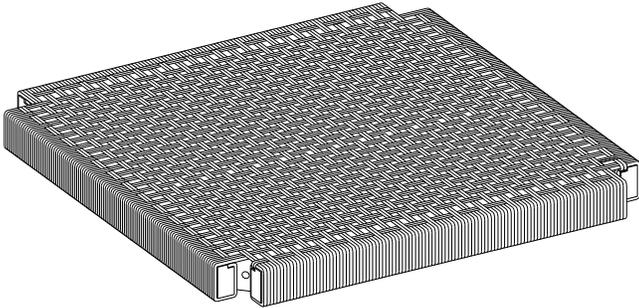

B- Bottom Shelf
(Qty. 1)

 


C- Leg
(Qty. 4)

 


(1) 1/4" x 60 mm Bolt
(Qty. 8+1 extra)




(2) Lock Washer
(Qty. 8+1 extra)

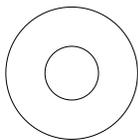

(3) Flat Washer
(Qty. 8+1 extra)

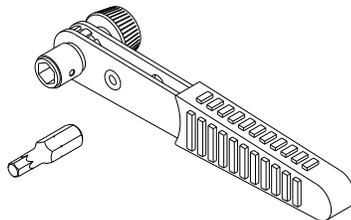





Ratchet Wrench
(Qty. 1)

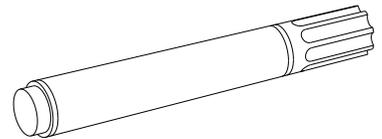

Touchup Pen
(Qty. 1)

Tools required: Ratchet wrench (provided).





Assembly Instructions

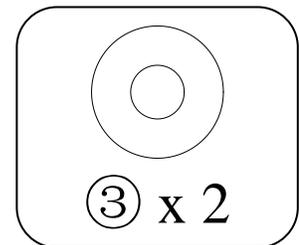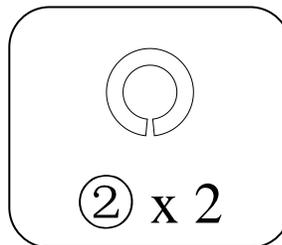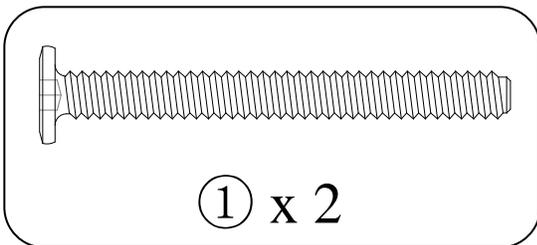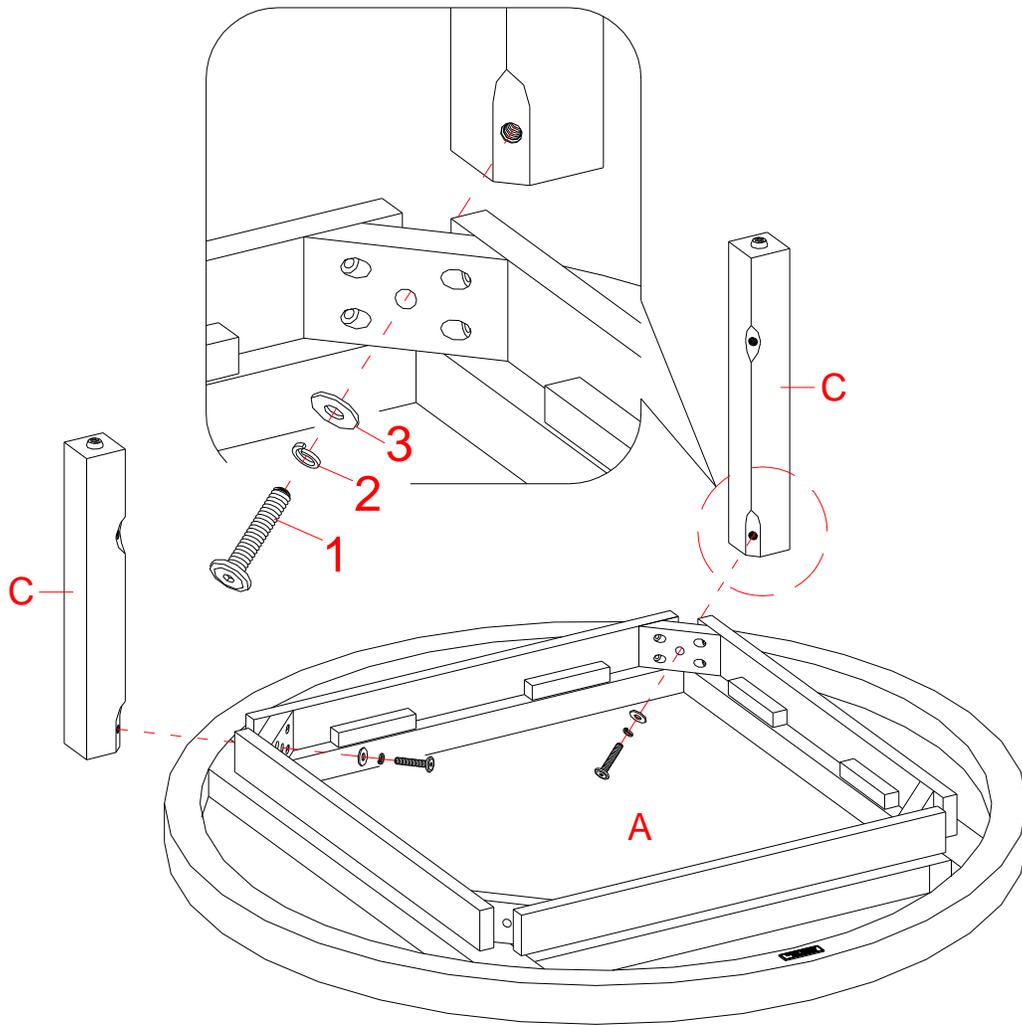

⚠ WARNING DO NOT fully tighten the bolts until all the bolts are loosely installed. To avoid causing damage to the threads, DO NOT overtighten the bolts.





1. Unpack the unit and confirm that you have all the hardware and required parts listed.
2. Position the Table Top (A) upside down on a level and protective surface.
3. Attach 2 Legs (C) to the Table Top (A) by inserting the 60 mm Bolts (1) with the Lock Washers (2) and Flat Washers (3) through the drilled holes on the corner blocks and securely screw into the threaded inserts on the Legs.

Assembly Instructions

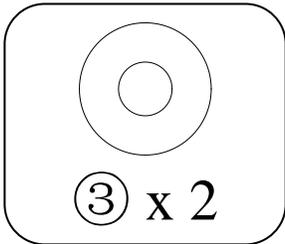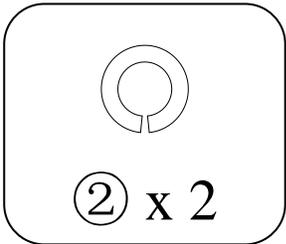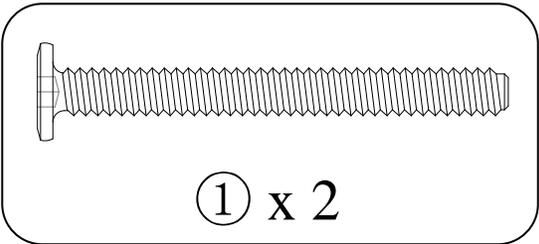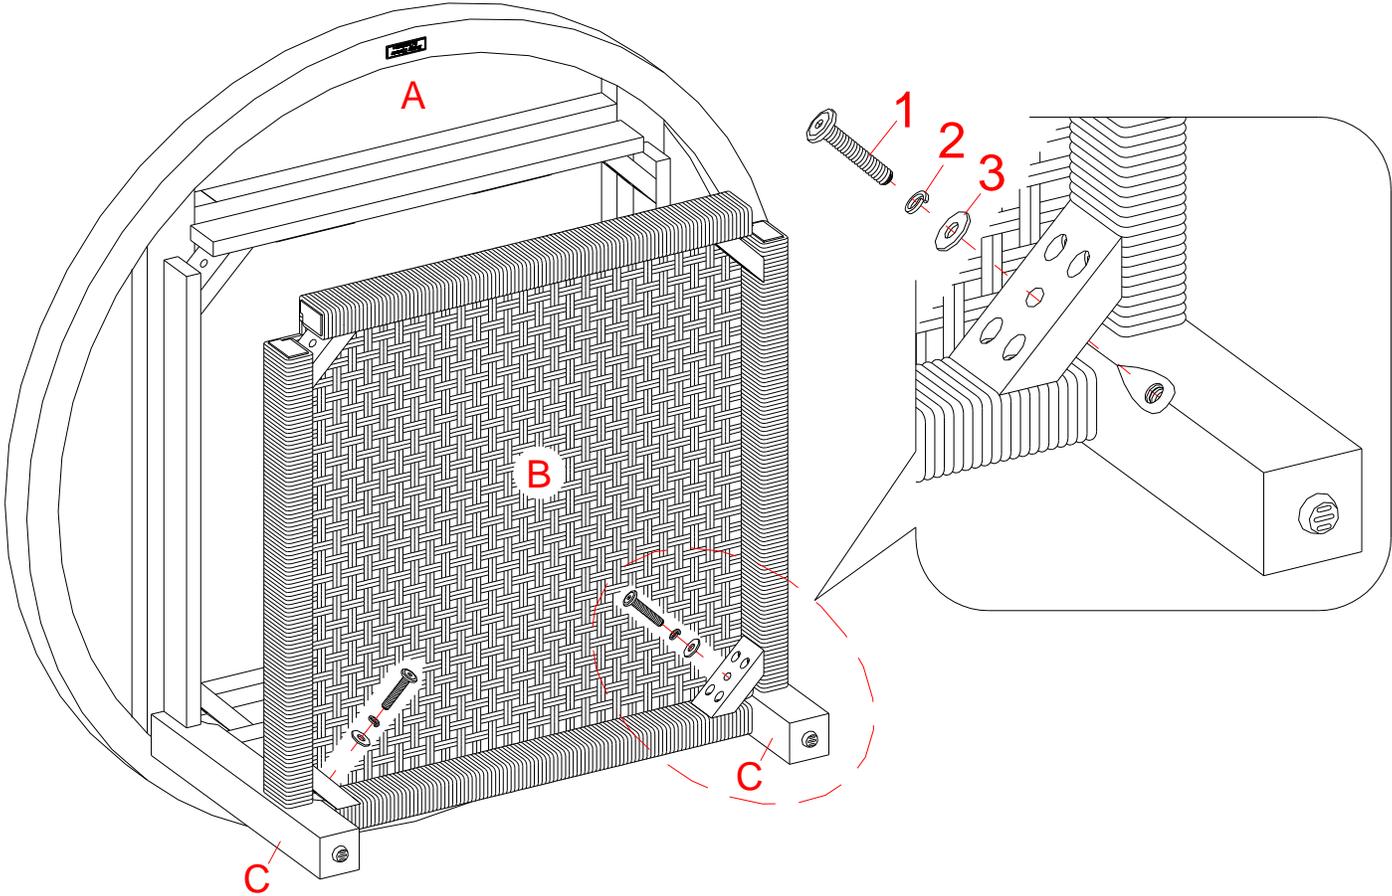


4. Fit the Bottom Shelf (B) between the bottom notches of two Legs (C). Insert two 60 mm Bolts (1) with the Washers (2 and 3) through the corner blocks of the Bottom Shelf (B) and screw into the Legs (C).

Assembly Instructions

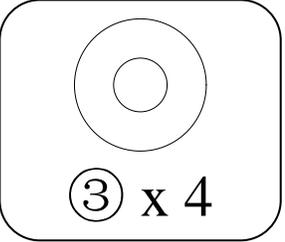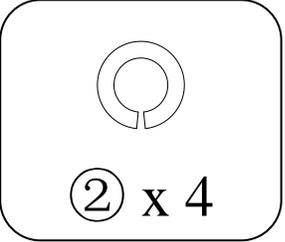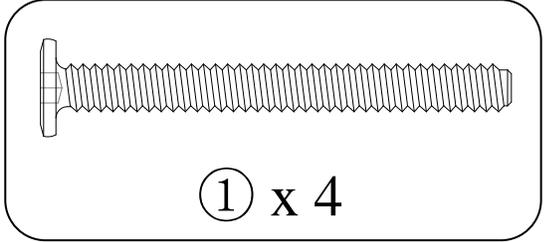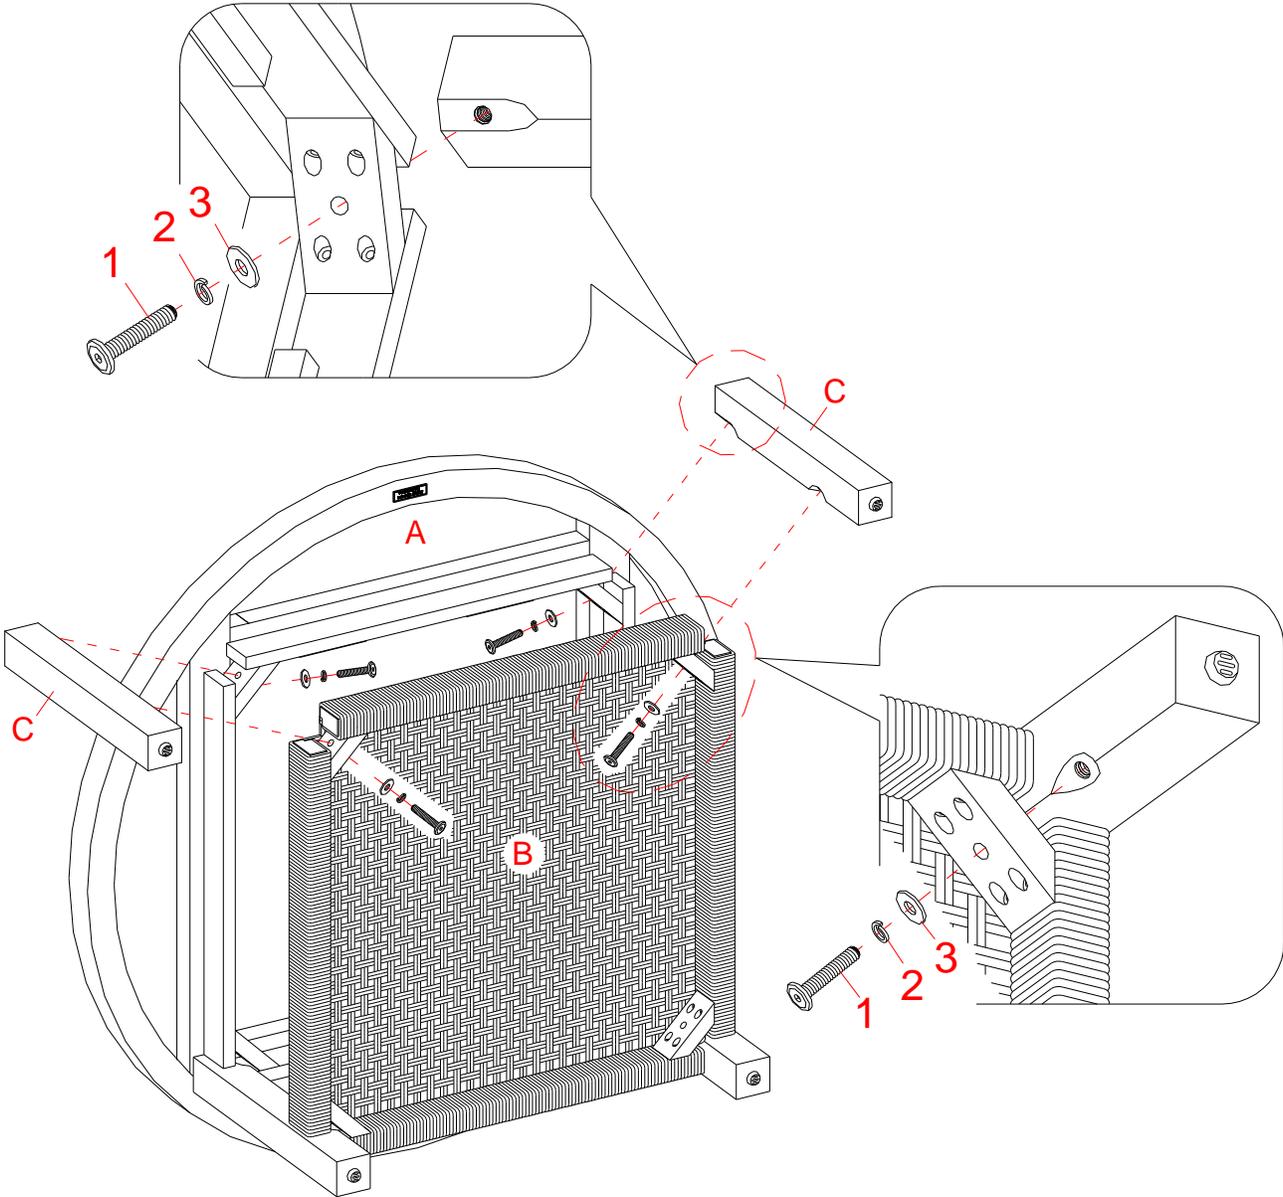

5. Repeat the same procedure to attach the remaining two Legs (C) at the opposite end.

Assembly Instructions

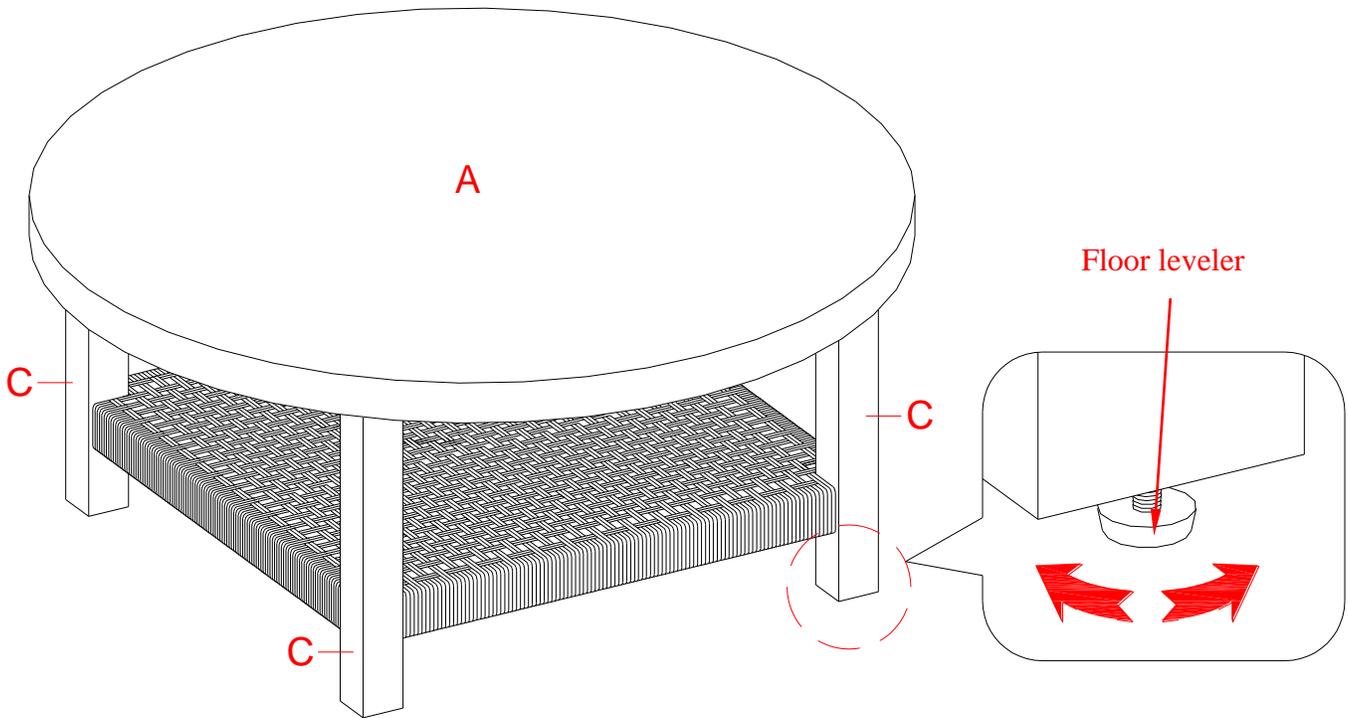

6. Stand the table upright and place it at your desired location.
7. Adjust each floor leveler as necessary until the shelf is level.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Gently rub the surface with a soft dry cloth, soft damp cloth, or soft damp cloth with neutral detergent, and then dry it well.
- Strong Alkaline detergents or acidic detergents are not recommended to use.
- Sponges containing abrasive agents or fibers are not recommended to use.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage your furniture's finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts periodically and tighten them if necessary.

Further Advice about Wood Furniture Care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking, and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

A touchup pen has been provided to minimize the small nicks or scratches that may occur during assembly or shipping.

We hope you enjoy your purchase for many years.
Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Whalen Furniture Manufacturing
1578 Air Wing Road, San Diego, CA 92154, USA
Customer Service: 1-866-942-5362
8:30 a.m. - 4:30 p.m., PST, Monday to Friday
www.whalenstyle.com