Beautiful
Home

LOT NUMBER:_____
DATE PURCHASED:___/__/___

2-Drawer Fluted Nightstand

Stock # BE65250047100A3

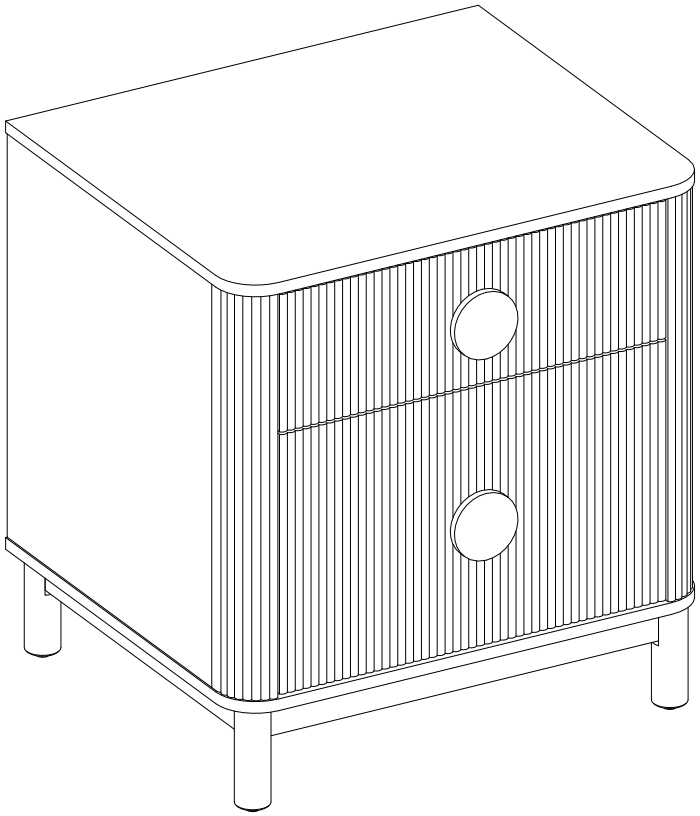

ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please call our customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

1-866-942-5362

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday - Friday
Or visit our website 24 hours a day, 7 days a week for product assistance at
www.whalenstyle.com
Or e-mail your request to **parts@whalenfurniture.com**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Date 2025-04-10 Rev. 0001-A

MAXIMUM RECOMMENDED WEIGHT LOADS

MANUFACTURER: Whalen Furniture Manufacturing
CATALOG: 2-Drawer Fluted Nightstand
STOCK # BE65250047100A3

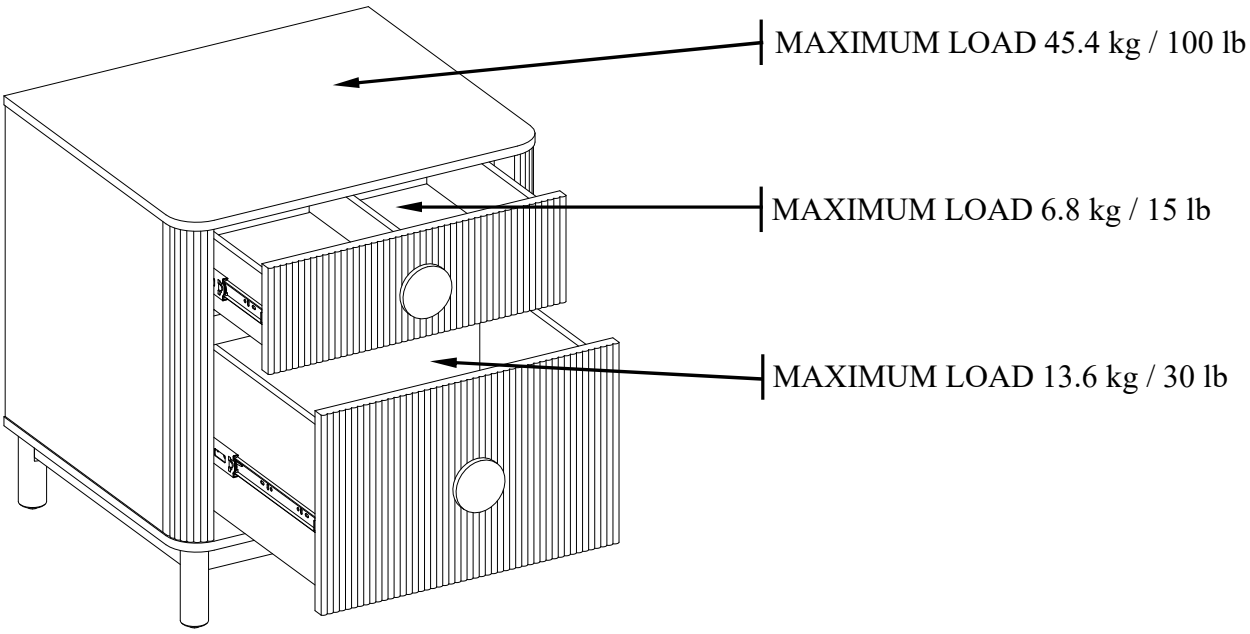

⚠WARNING THIS UNIT IS INTENDED ONLY FOR USE WITHIN THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.

SPECIAL NOTE

Please read the instruction sheets completely before assembly. Examine all packaging material before discarding carton. Remove any remaining staples from the carton before discarding. Remove all parts from carton and separate into groups as indicated on part list. Please ensure all parts are included prior to assembly. Use of power tools to complete assembly is not recommended.

IMPORTANT

Before you begin: Open, identify and count all parts prior to assembly. Lay out parts on a flat and non-abrasive surface. You will need the parts identified on page 9, 10 and 11 of this instruction manuals.

NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH DAMP CLOTH.

Insert the Dowel at least halfway by tapping lightly with a rubber mallet, IF NECESSARY.

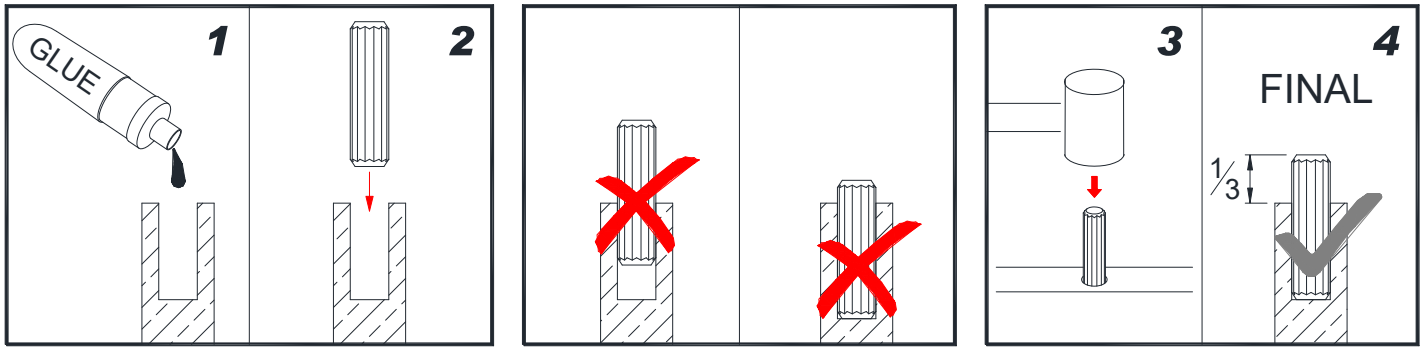

CAM LOCK SYSTEM OPERATION

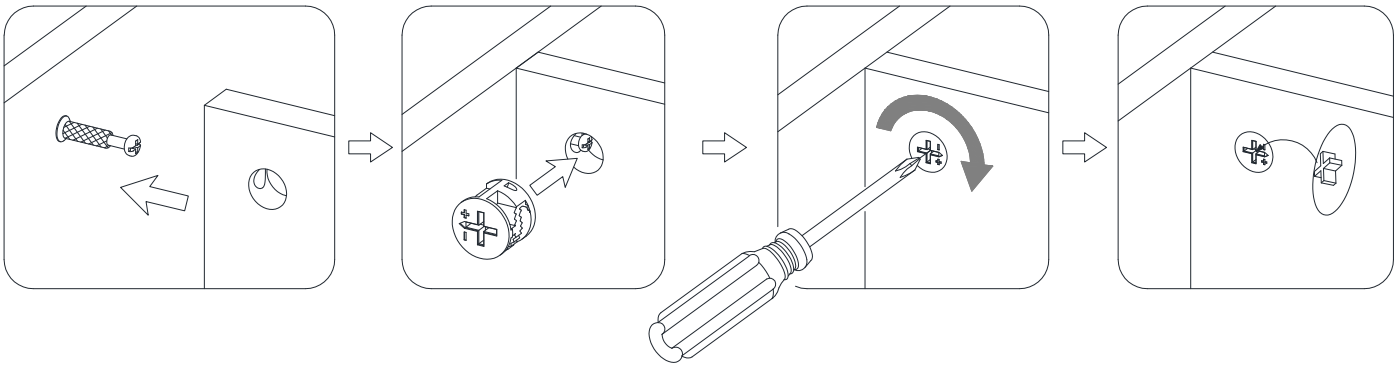

HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1. Screw the Cam Bolt into the threaded inserts on the panel. Connect both panels together; making sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock faces out and points towards Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt in place.
4. Plug the Cam Lock Cover into the cross slot of the Cam Lock to conceal the Cam.

You are now ready to assemble the KD unit.

FURNITURE POWER DISTRIBUTION CENTER IMPORTANT SAFETY INSTRUCTIONS

Carefully read all instructions installing and operating fixture

IF YOU HAVE ANY QUESTIONS REGARDING THE PROPER INSTALLATION CONSULT A QUALIFIED ELECTRICIAN.

⚠WARNING TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR INJURY TO PERSONS, PLEASE FOLLOW THE NEXT:

- Use only insulated staples or plastic ties (not included) to secure the cords.
- Route and secure cords so that they will not be pinched or damaged when the desk is pushed up against the wall.
- Make sure cord is not pinched between desk and floor.
- Use the unit indoors only.
- Do not use an extension cord to connect this unit to a wall outlet.
- Use power strip with integral over-current protection to supply other electrical devices or accessories in desk.
- This unit must be plugged into a properly grounded outlet.
- The socket outlet should be installed near the equipment and should be easily accessible.
- Maximum load of connected equipment cannot exceed a total of 12 amps and 120 volts.
- Do not open or disassemble this unit for any reason.

SAVE THESE INSTRUCTIONS

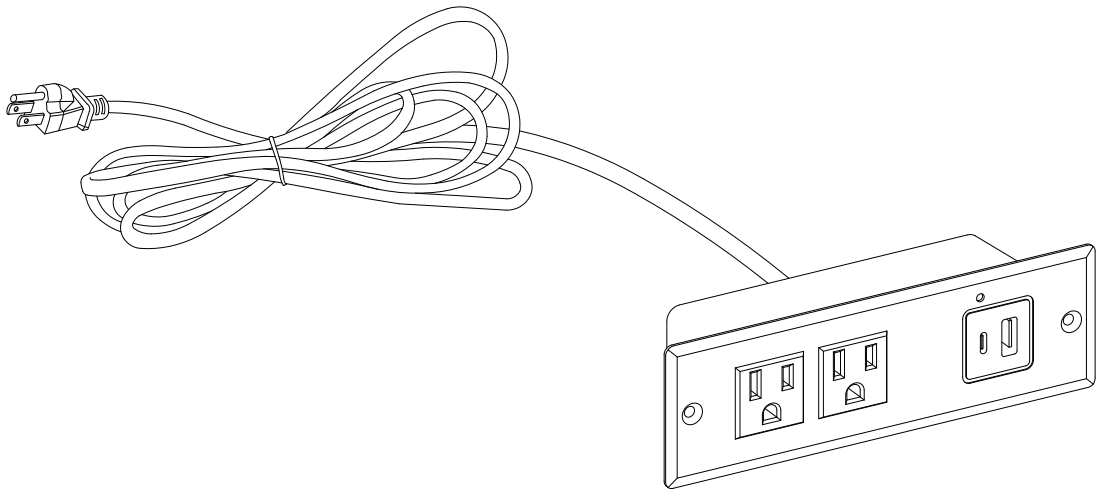

Furniture Power Distribution Unit User Guide

Please read this user guide before installing and using your power distribution Center.

INTRODUCTION

The integrated power and USB center can connect to two devices, such as a digital camera, MP3 player, tablet or cell phone.

SPECIFICATIONS

cULus listed, rated for: 120 V AC, 12 A, 60 HZ

USB-A: 5 VDC 3A, 9 VDC 2A, 12 VDC 1.5A

Type-C: 5 VDC 3A, 9 VDC 2.22A, 12 VDC 1.67A

Product: Furniture Power Distribution Unit
Model No: HG2000-HC
Company: Whalen Furniture Manufacturing

NOTES

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-003(B) / NMB-003(B)

This Class B digital apparatus complies with Canadian ICES-003.

Whalen Furniture Manufacturing
1578 Air Wing Road, San Diego, CA 92154, USA
1-866-942-5362

WARNINGS

! Keep your desktop hub dry; if it gets wet, wipe it dry immediately.

! Do not modify or tamper with your desktop hub's internal components. It may cause a malfunction and invalidate its warranty.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

FURNITURE POWER DISTRIBUTION CENTER
IMPORTANT SAFETY INSTRUCTIONS

Carefully read all instructions installing and operating fixture

IF YOU HAVE ANY QUESTIONS REGARDING THE PROPER INSTALLATION CONSULT A QUALIFIED ELECTRICIAN.

WARNING TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR INJURY TO PERSONS, PLEASE FOLLOW THE NEXT:

- Use only insulated staples or plastic ties (not included) to secure the cords.
- Route and secure cords so that they will not be pinched or damaged when the desk is pushed up against the wall.
- Make sure cord is not pinched between desk and floor.
- Use the unit indoors only.
- Do not use an extension cord to connect this unit to a wall outlet.
- Use power strip with integral over-current protection to supply other electrical devices or accessories in table.
- This unit must be plugged into a properly grounded outlet.
- The socket outlet should be installed near the equipment and should be easily accessible.
- Maximum load of connected equipment cannot exceed a total of 2.1 amps and 5 volts.
- Do not open or disassemble this unit for any reason.

SAVE THESE INSTRUCTIONS

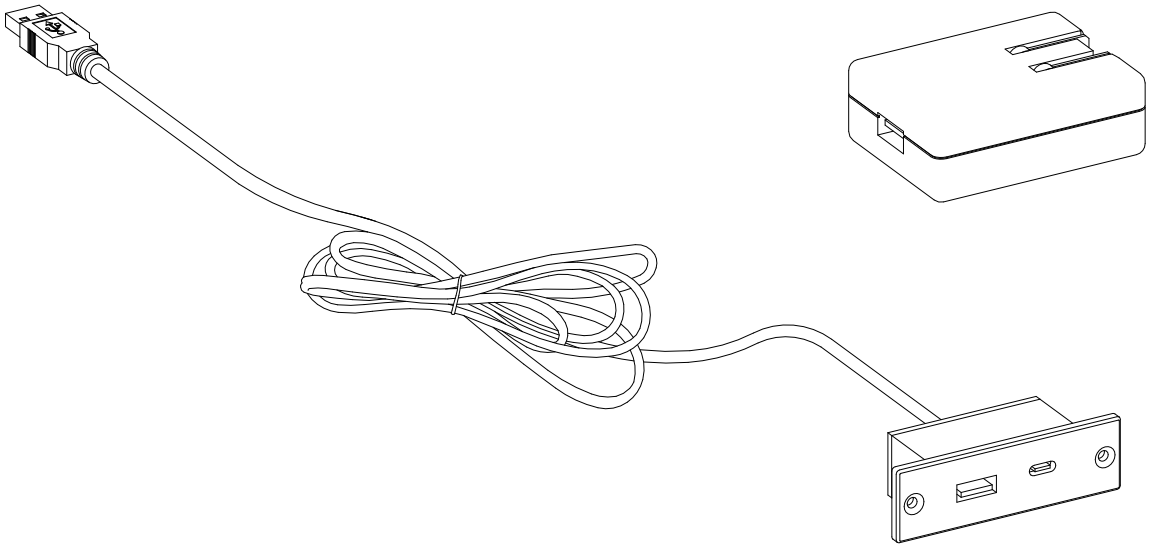

Furniture Power Distribution Unit User Guide

Please read this user guide before installing and using your power distribution Center.

INTRODUCTION

The integrated USB center can connect to two devices, such as a digital camera, MP3 player, tablet or cell phone.

SPECIFICATIONS

Input: 100 ~ 240 V, 0.3 A, 50/60 Hz, USB output: 5 V dc, 2.1 A MAX

Product: Furniture Power Distribution Unit
Model No: GEO101U-050210U
Company: Whalen Furniture Manufacturing

NOTES

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-003(B) / NMB-003(B)

This Class B digital apparatus complies with Canadian ICES-003.

Whalen Furniture Manufacturing
1578 Air Wing Road, San Diego, CA 92154, USA
1-866-942-5362

WARNINGS

! Keep your USB hub dry; if it gets wet, wipe it dry immediately.

! Do not modify or tamper with your USB hub's internal components. It may cause a malfunction and invalidate its warranty.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

FURNITURE TIPPING RESTRAINT

YOUNG CHILDREN MAY BE INJURED BY TIPPING FURNITURE AND YOU MUST USE THIS TIPPING RESTRAINT TO ATTACH THIS UNIT TO THE WALL, TO PREVENT ACCIDENTS AND/OR INJURIES.

THIS HARDWARE, MUST BE PROPERLY INSTALLED (FOLLOW ALL DIRECTIONS IN ORDER ON THIS INSTRUCTIONS), TO PROVIDE PROTECTION AGAINST THE UNEXPECTED TIPPING OF FURNITURE DUE TO IMPROPER USE.

THIS PRODUCT IS ONLY A DETERRENT. IT IS NOT A SUBSTITUTE FOR PROPER ADULT SUPERVISION. USE OF TIP-OVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE, THE RISK OF TIP-OVER.

⚠ WARNING

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tipover.

Parts and Hardware List

Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

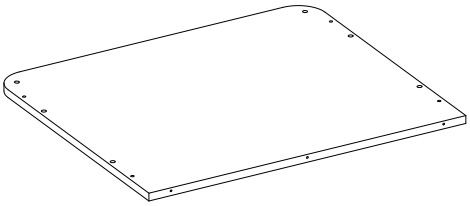

A- Top Panel
(Qty. 1)

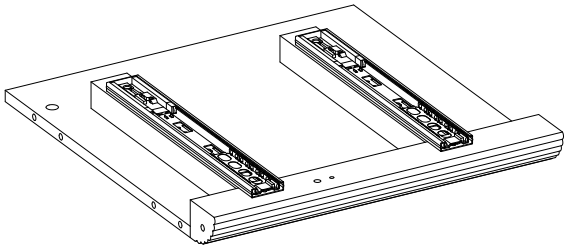

B- Left Side Panel
(Qty. 1)

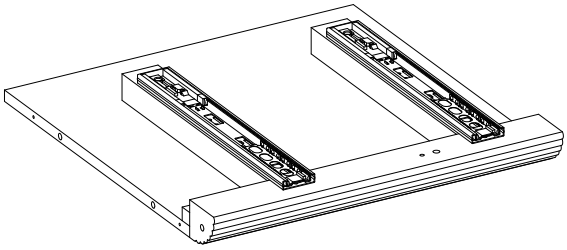

C- Right Side Panel
(Qty. 1)

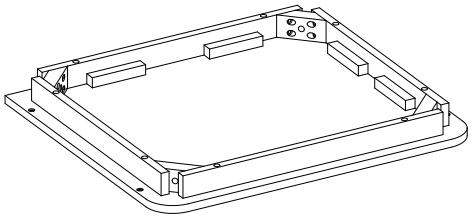

D- Bottom Frame
(Qty. 1)

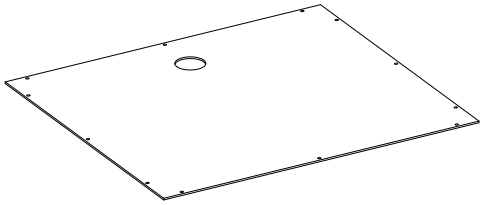

E- Back Panel
(Qty. 1)

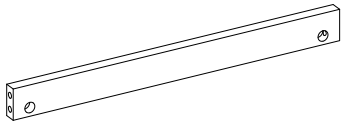

F- Front Crossbar
(Qty. 1)



G- Foot
(Qty. 4)

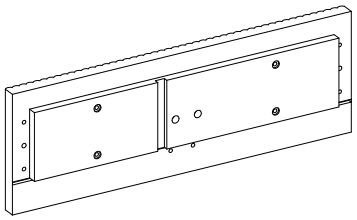

H- Upper Drawer Front
(Qty. 1)

Parts and Hardware List

Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

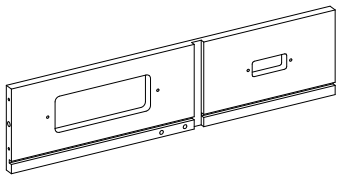

I- Upper Drawer Back Panel
(Qty. 1)

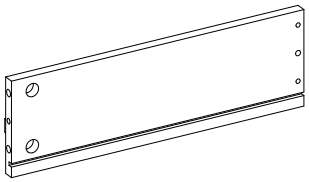

J- Upper Drawer Left Side Panel
(Qty. 1)

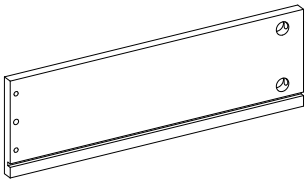

K- Upper Drawer Right Side Panel
(Qty. 1)

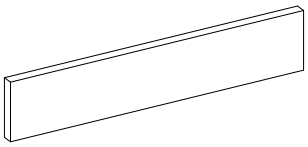

L- Upper Drawer Divider
(Qty. 1)

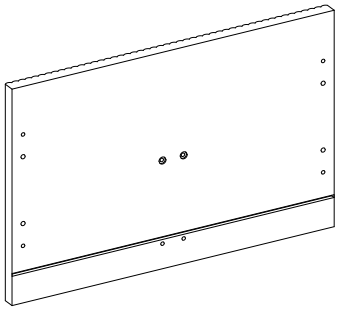

M- Lower Drawer Front
(Qty. 1)

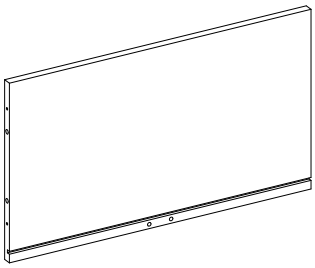

N- Lower Drawer Back Panel
(Qty. 1)

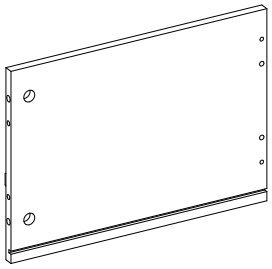

O- Lower Drawer Left Side Panel
(Qty. 1)

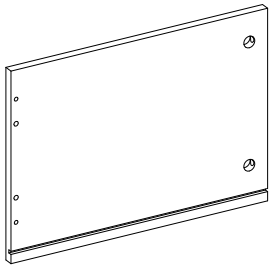

P- Lower Drawer Right Side Panel
(Qty. 1)

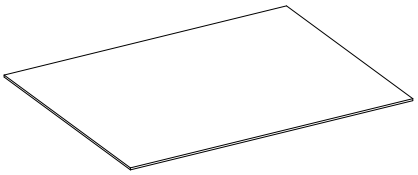

Q- Drawer Bottom Panel
(Qty. 2)



R- Drawer Bottom Support
(Qty. 2)



S- Drawer Konb
(Qty. 2)

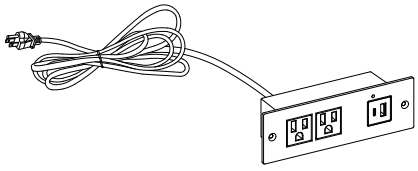

T- Power Center
(Qty. 1)

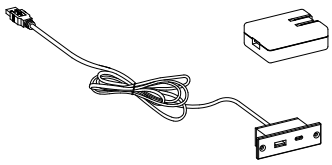

U- USB Hub with Adapter
(Qty. 1)

Parts and Hardware List

Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

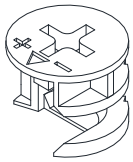

(1) Large Cam Lock
(Qty. 6+1 extra)



(2) Cam Bolt
(Qty. 18+1 extra)



(3) M8 x 30 mm Large Wood Dowel
(Qty. 14+1 extra)



(4) M3 x 12 mm Screw
(Qty. 4+1 extra)



(5) M3.5 x 15 mm Washer Head Screw
(Qty. 12+1 extra)



(6) M3.5 x 40 mm Pan Head Screw
(Qty. 12+1 extra)



(7) M4 x 50 mm Pan Head Screw
(Qty.4+1 extra)



(8) Small Cam Lock
(Qty. 12+1 extra)

(9) M6 x 30 mm Small Wood Dowel
(Qty. 12+1 extra)



(10) 1/4" x 55 mm Bolt
(Qty. 4+1 extra)

(11) Lock Washer
(Qty. 4+1 extra)

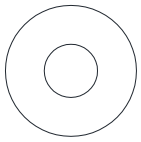

(12) Flat Washer
(Qty. 4+1 extra)



(13) 5/32" x 25 mm Knob Bolt
(Qty. 4+1 extra)



(14) Cam Lock Cover
(Qty. 8+1 extra)

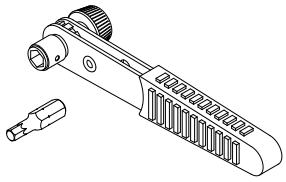

Ratchet Wrench
(Qty. 1)



Glue
(Qty. 1)

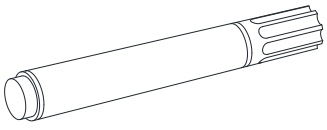

Touchup Pen
(Qty. 1)

Tools required: Ratchet wrench (provided), Phillips screwdriver, rubber mallet, stud finder, pencil, tape measure, power drill and 1/8"drill bit (not provided).

Assembly Instructions

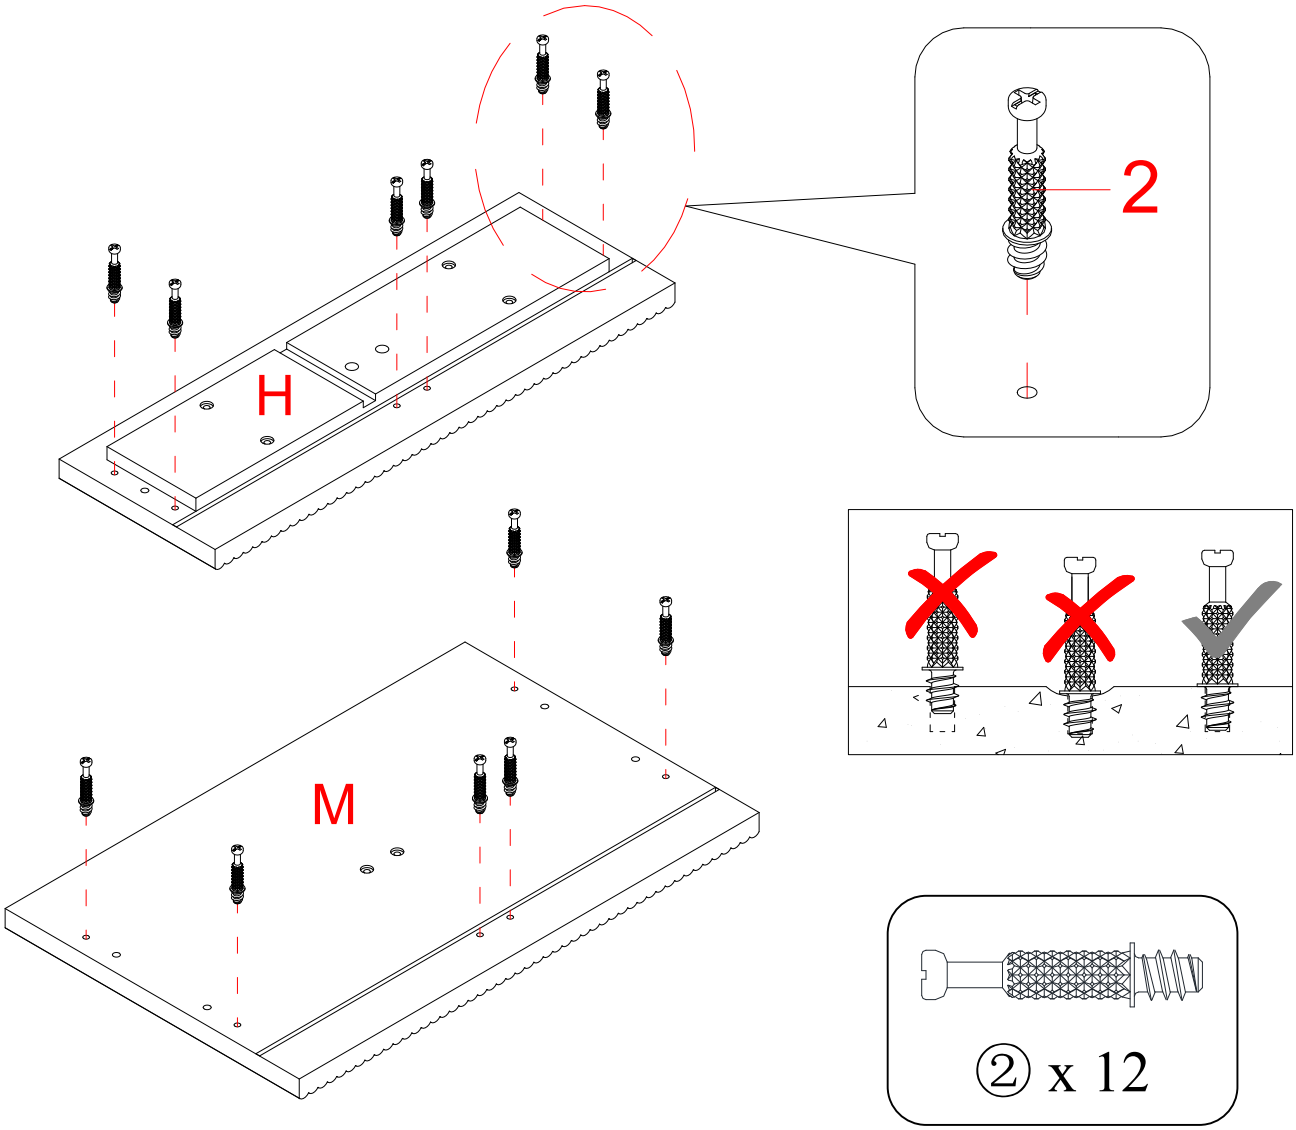

WARNING DO NOT fully tighten the bolts or screws until all the bolts or screws are loosely installed. To avoid causing damage to the threads, DO NOT overtighten the bolts or screws.

1. Unpack the unit and confirm that you have all the hardware and required parts listed. Assemble the unit on a carpeted floor or the empty carton to avoid scratching the parts.
2. Securely screw twelve Cam Bolts (2) into the designated small holes on the Drawer Fronts (H and M) respectively. Tighten the cam bolts with a Phillips screwdriver.

   NOTE: DO NOT overtighten the cam bolts. Screw-in cam bolts must be screwed down flush.

Assembly Instructions

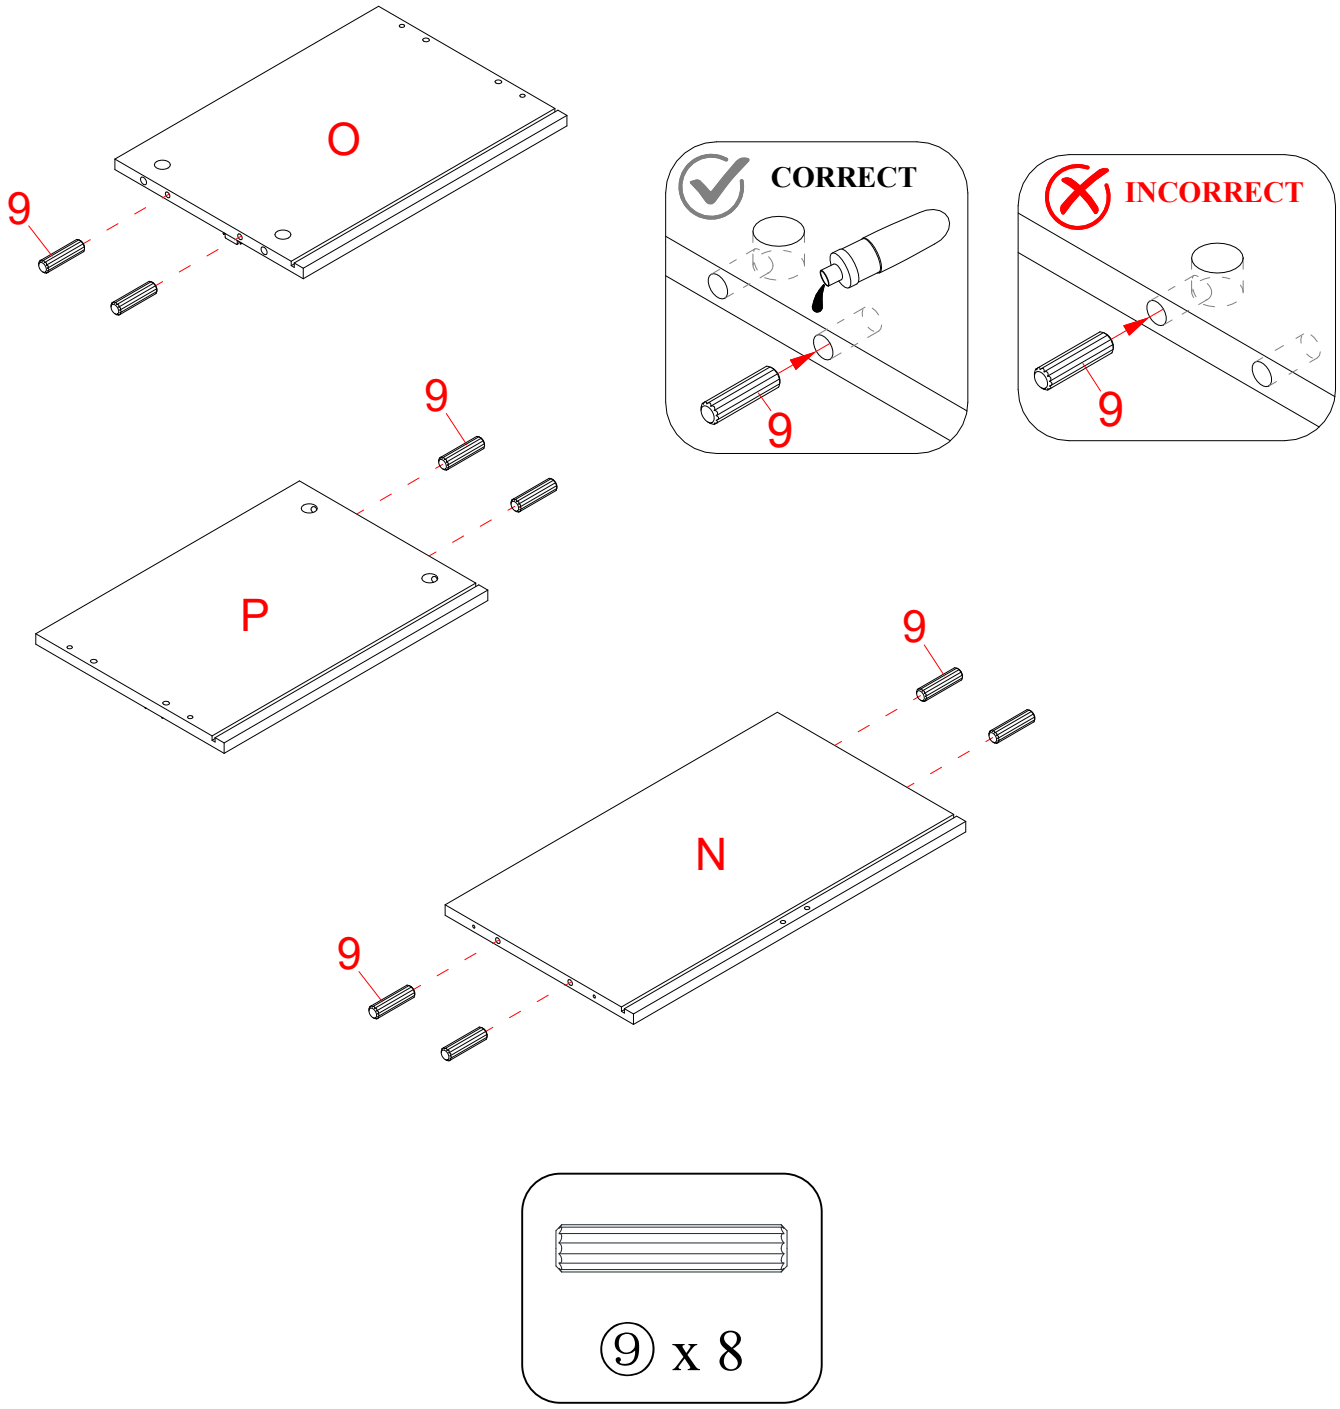

3. Glue the Small Wood Dowels (9) into the inner holes on the Lower Drawer Back Panel (N) and Lower Drawer Side Panels (O and P) as shown. Make sure that you use a small amount of glue with both ends of all dowels.

   NOTE: It is very important to use a small amount of glue on both ends of dowels and wipe off the excess glue immediately with a damp cloth.

Assembly Instructions

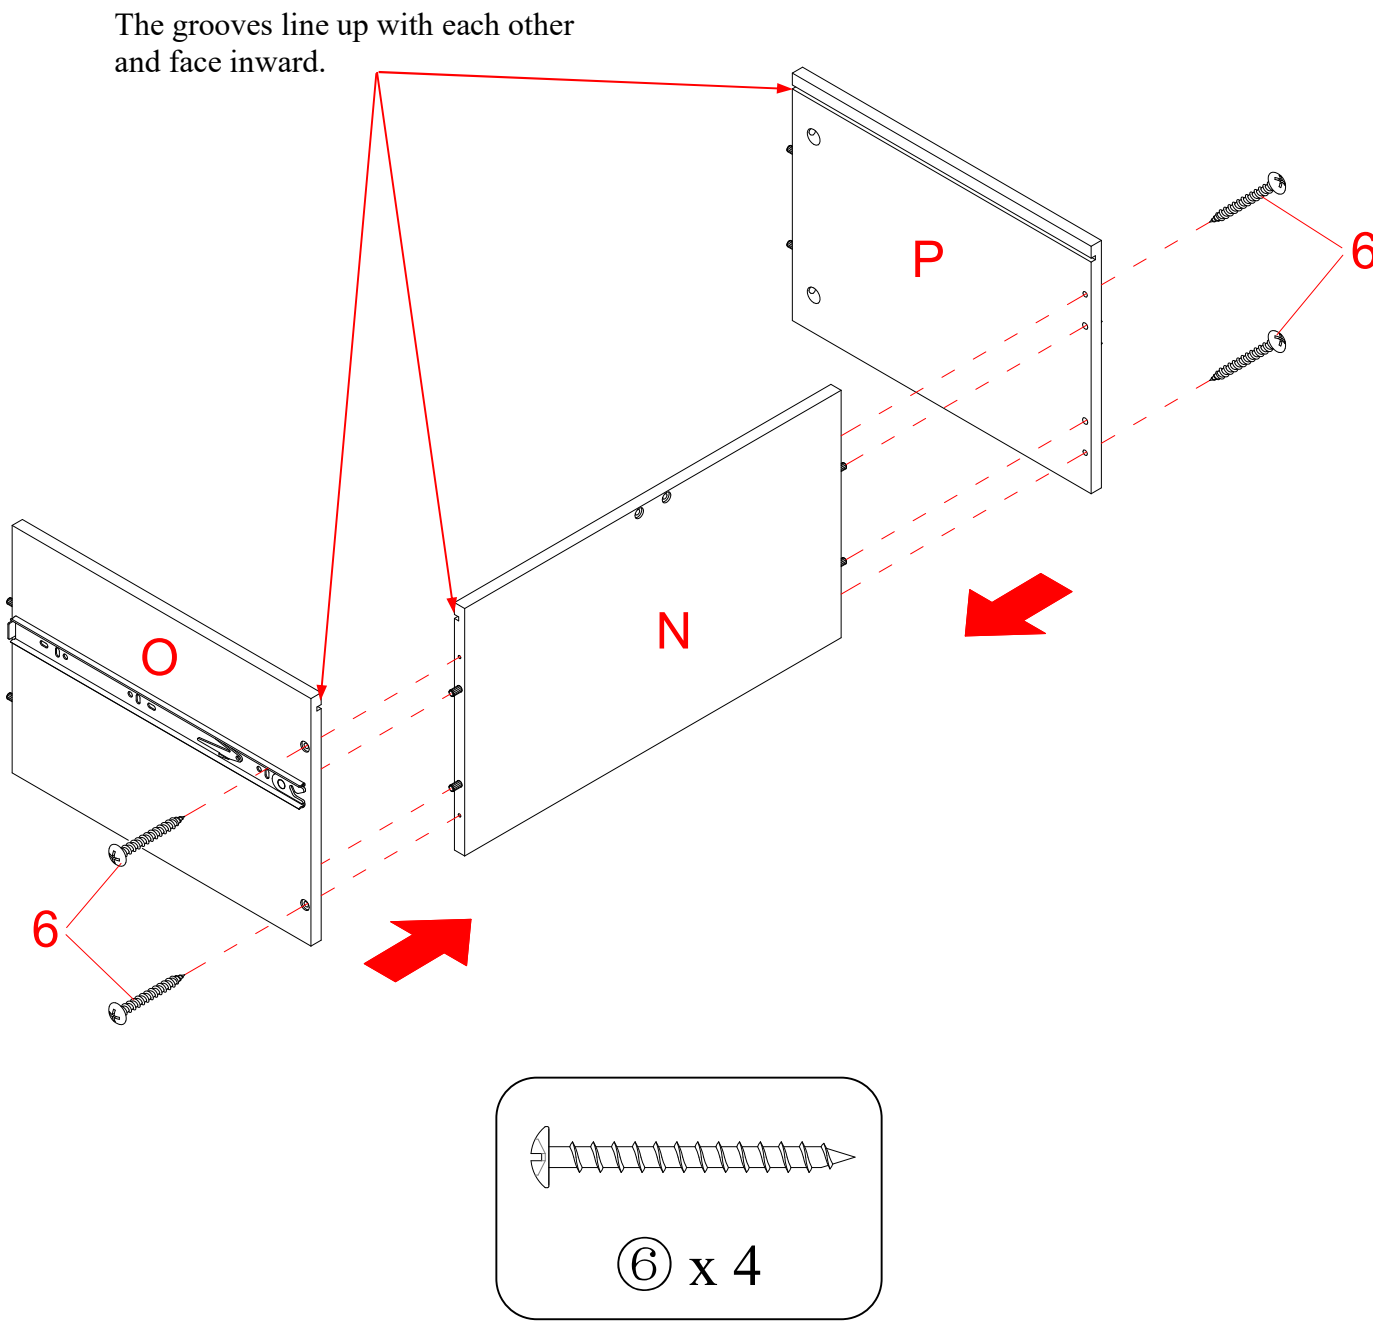

4. Orient and attach the Lower Drawer Back Panel (N) between the Lower Drawer Side Panels (O and P) with four 40 mm Pan Head Screws (6). Tighten the screws with a Phillips screwdriver.

Assembly Instructions

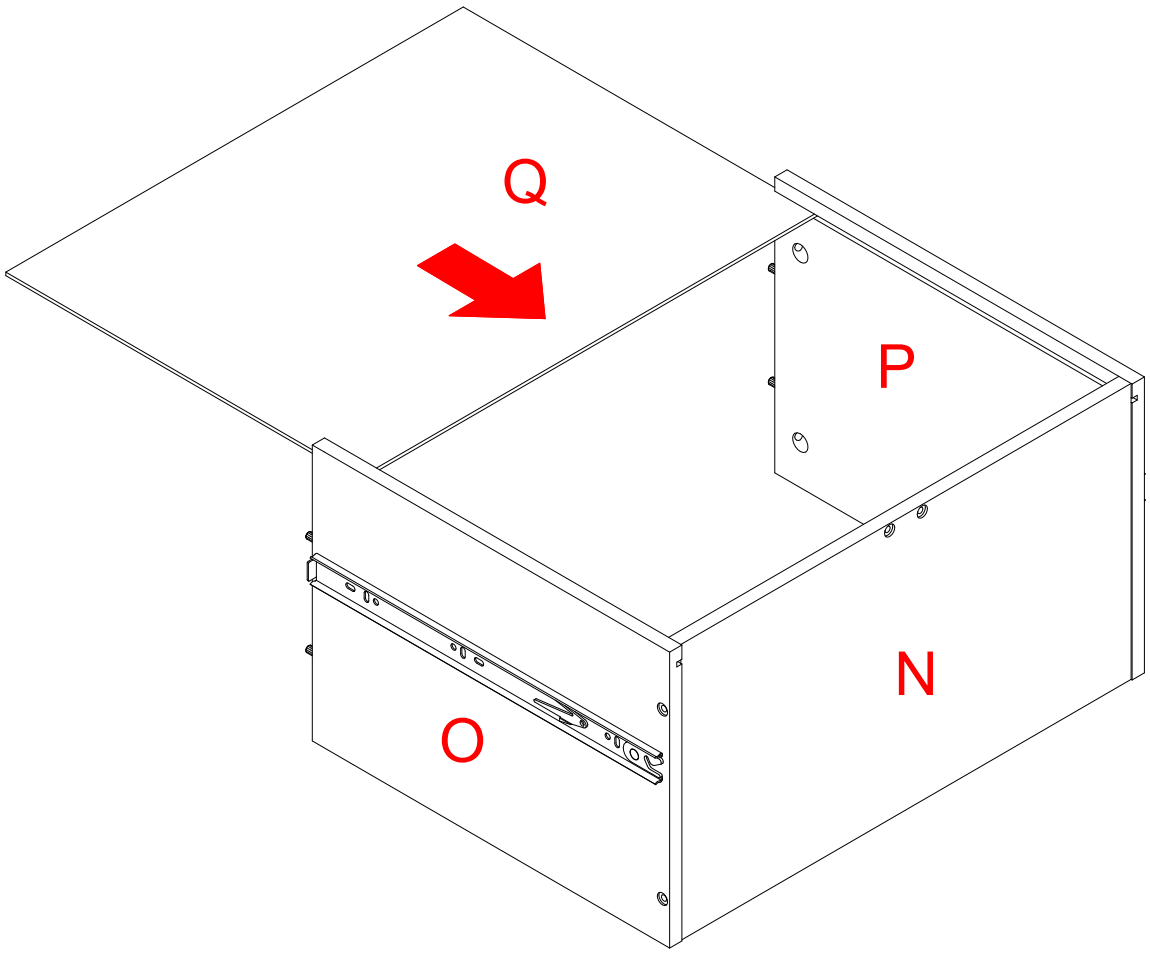

5. Slide one Drawer Bottom Panel (Q) into the grooves on the Lower Drawer Side Panels (O and P) until fully inserted into the Lower Drawer Back Panel (N).

Assembly Instructions

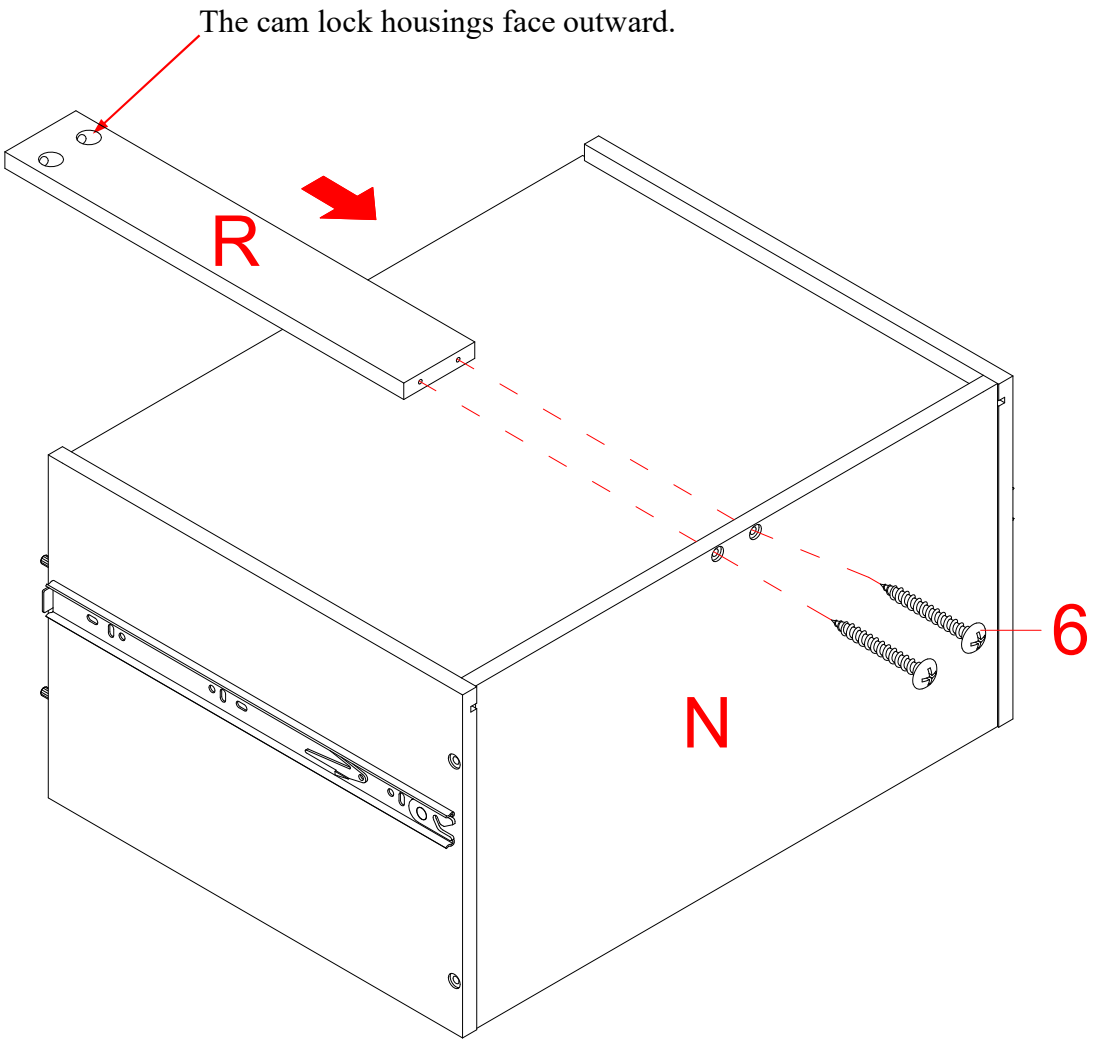

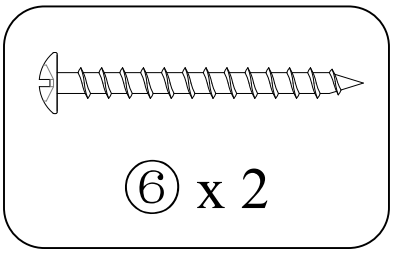

6. Orient and fasten one Drawer Bottom Support (R) to the Lower Drawer Back Panel (N) with two 40 mm Pan Head Screws (6).

Assembly Instructions

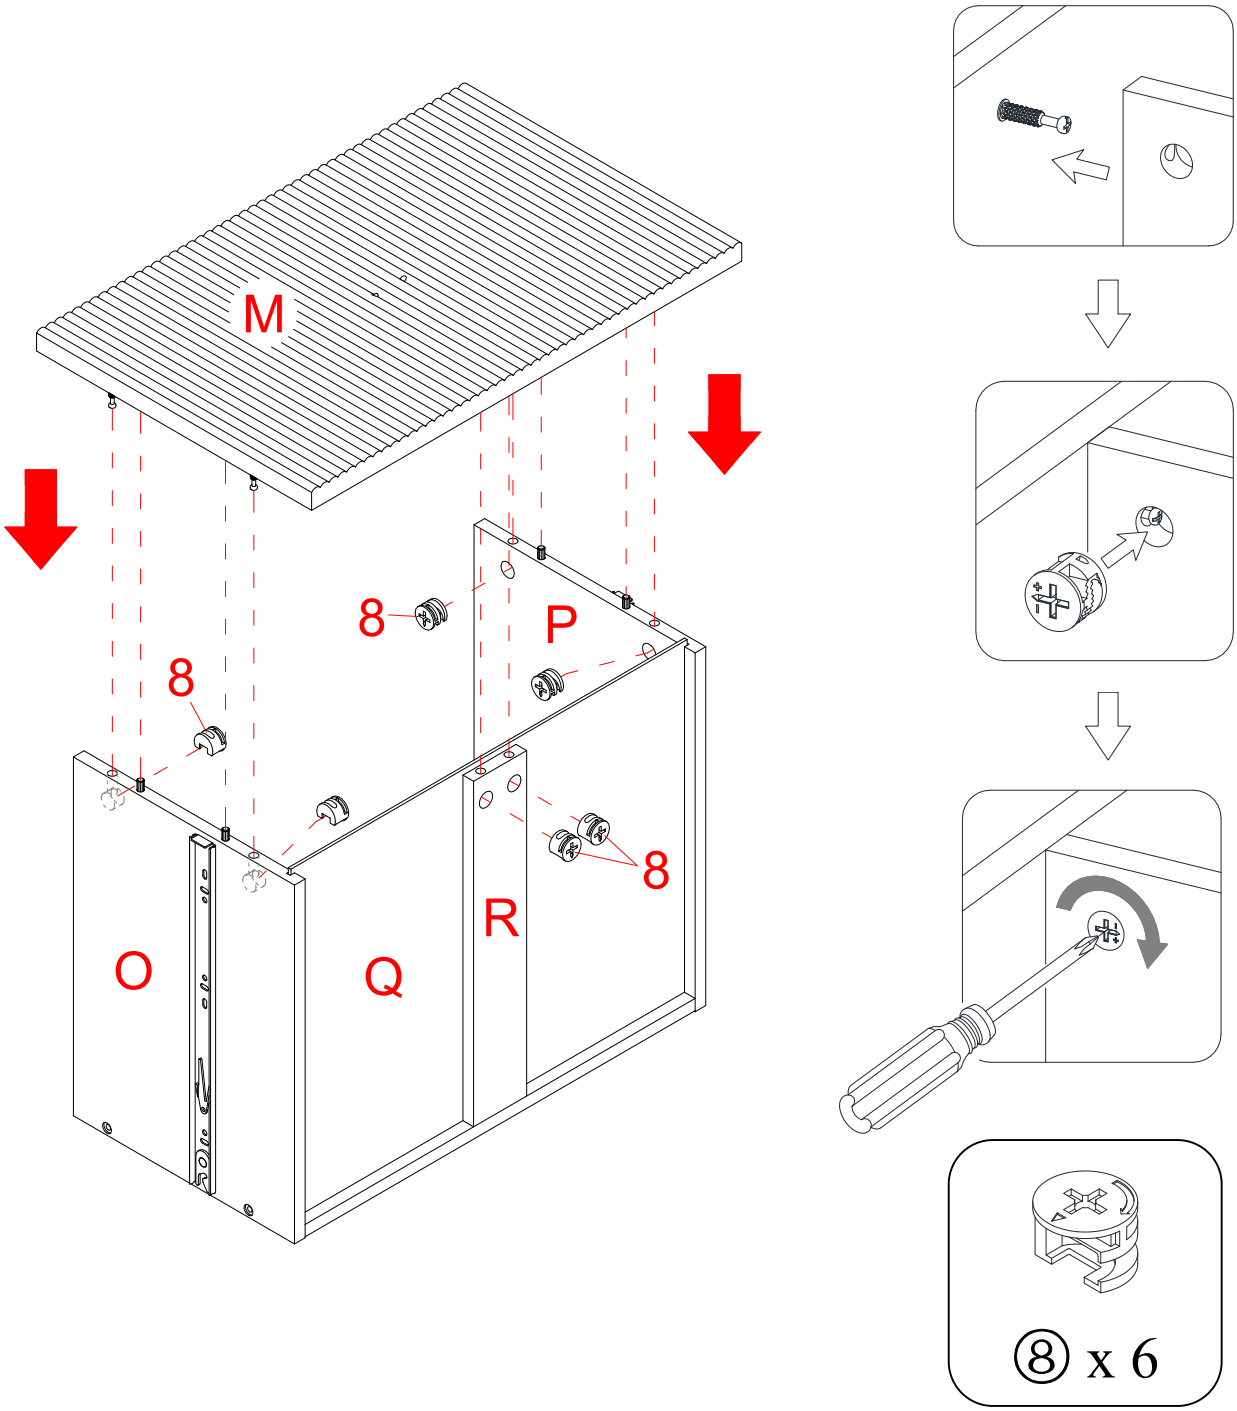

7. Position the Lower Drawer Front (M) so that the installed Cam Bolts enter the holes in front edge of both Lower Drawer Side Panels (O and P) and Drawer Bottom Support (R). Make sure that the Drawer Bottom Panel (Q) fits securely into the groove of the Lower Drawer Front (M).
8. Insert six Small Cam Locks (8) into the large holes in both Lower Drawer Ends (O and P) and Drawer Bottom Support (R), making sure that the arrow on the face of cam lock faces out and points towards the holes on the closest end. Turn the cam locks with a Phillips screwdriver until securely locked onto the cam bolts.

Assembly Instructions

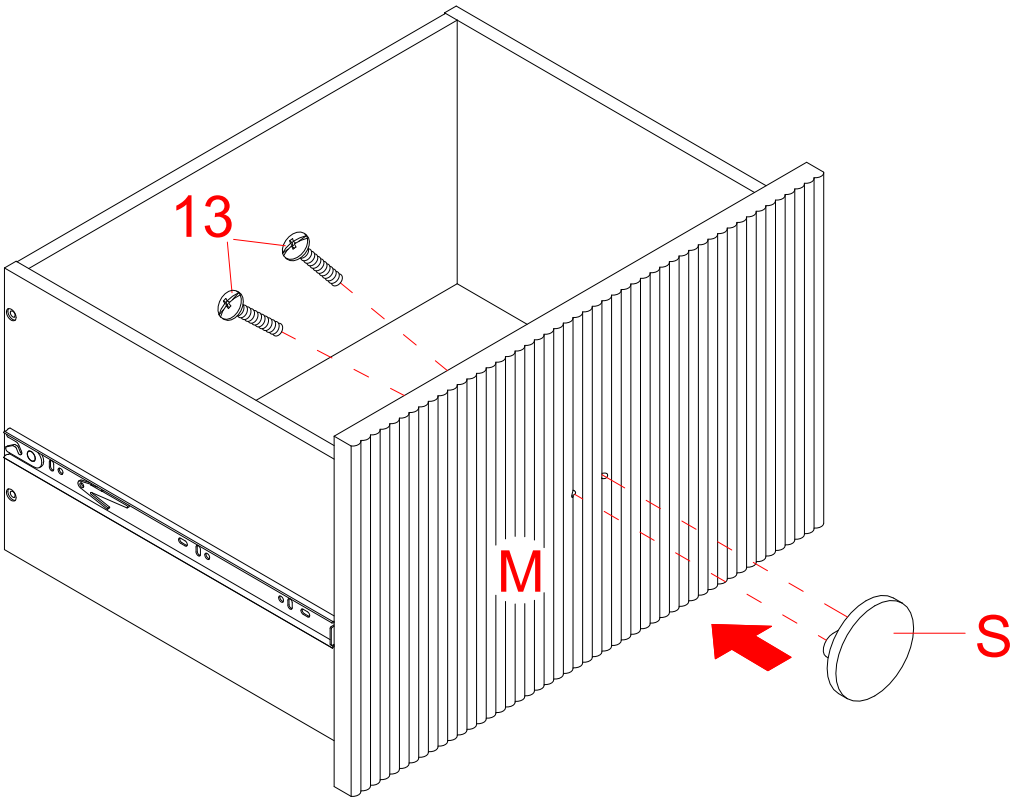

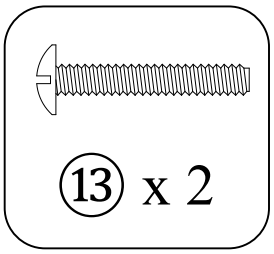

9. Using the pilot holes as a guide, fasten one Knob (S) to the Lower Drawer Front (M) with two 25 mm Knob Bolts (13).

Assembly Instructions

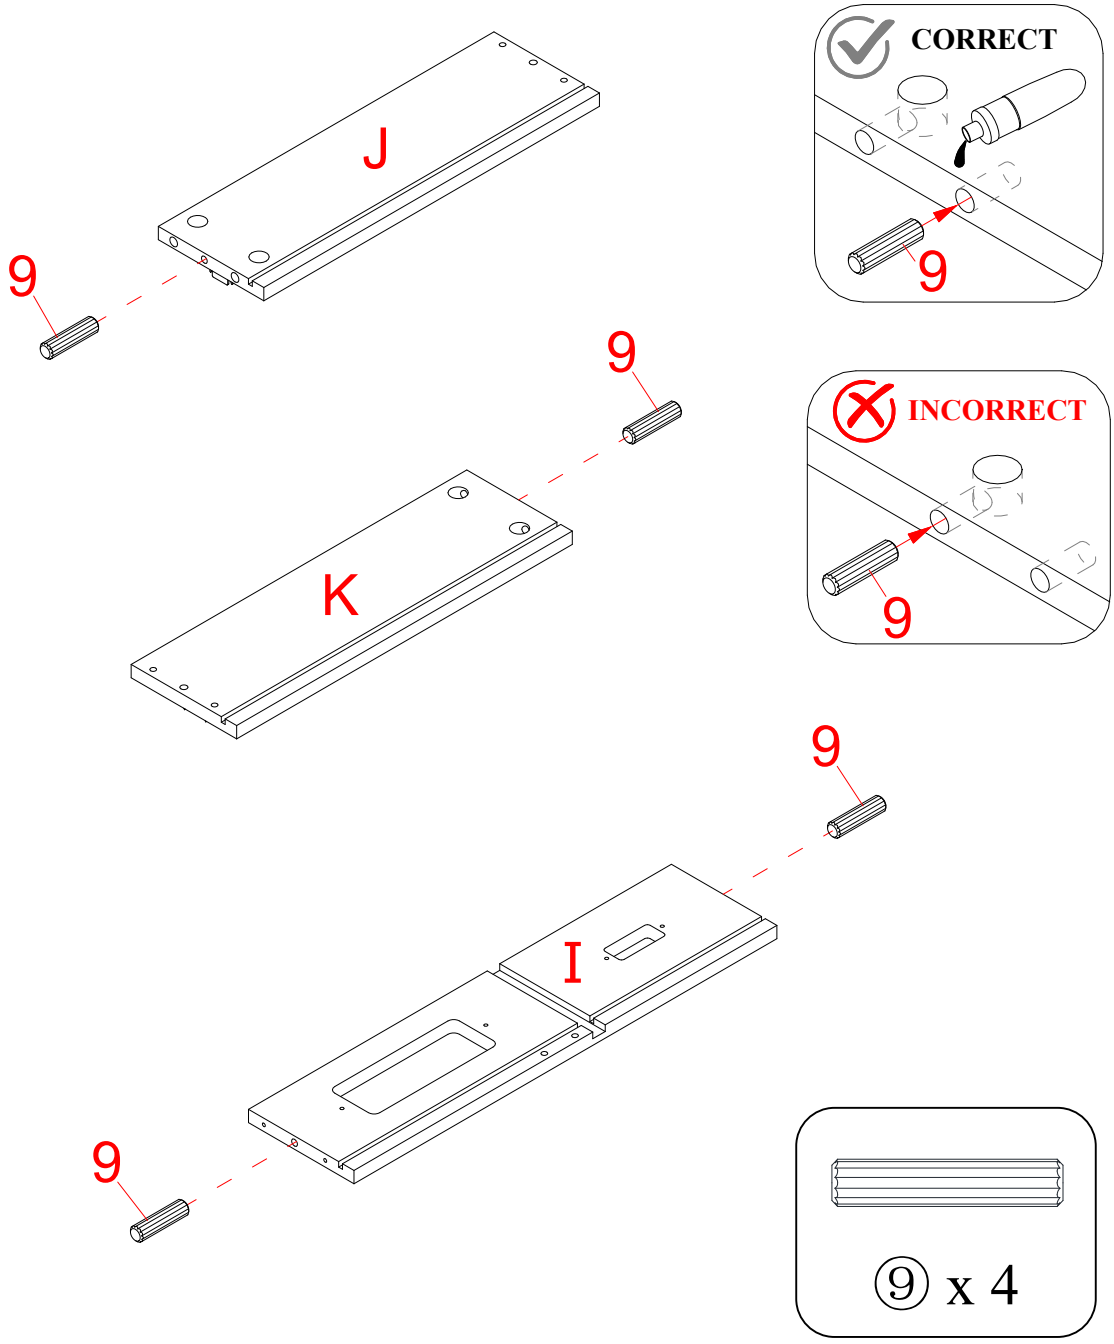

10. Glue four Small Wood Dowels (9) into the inner holes on the Upper Drawer Back Panel (I) and Upper Drawer Side Panels (J and K) as shown. Make sure that you use a small amount of glue with both ends of all dowels.

Assembly Instructions

The grooves line up with each other and face inward.

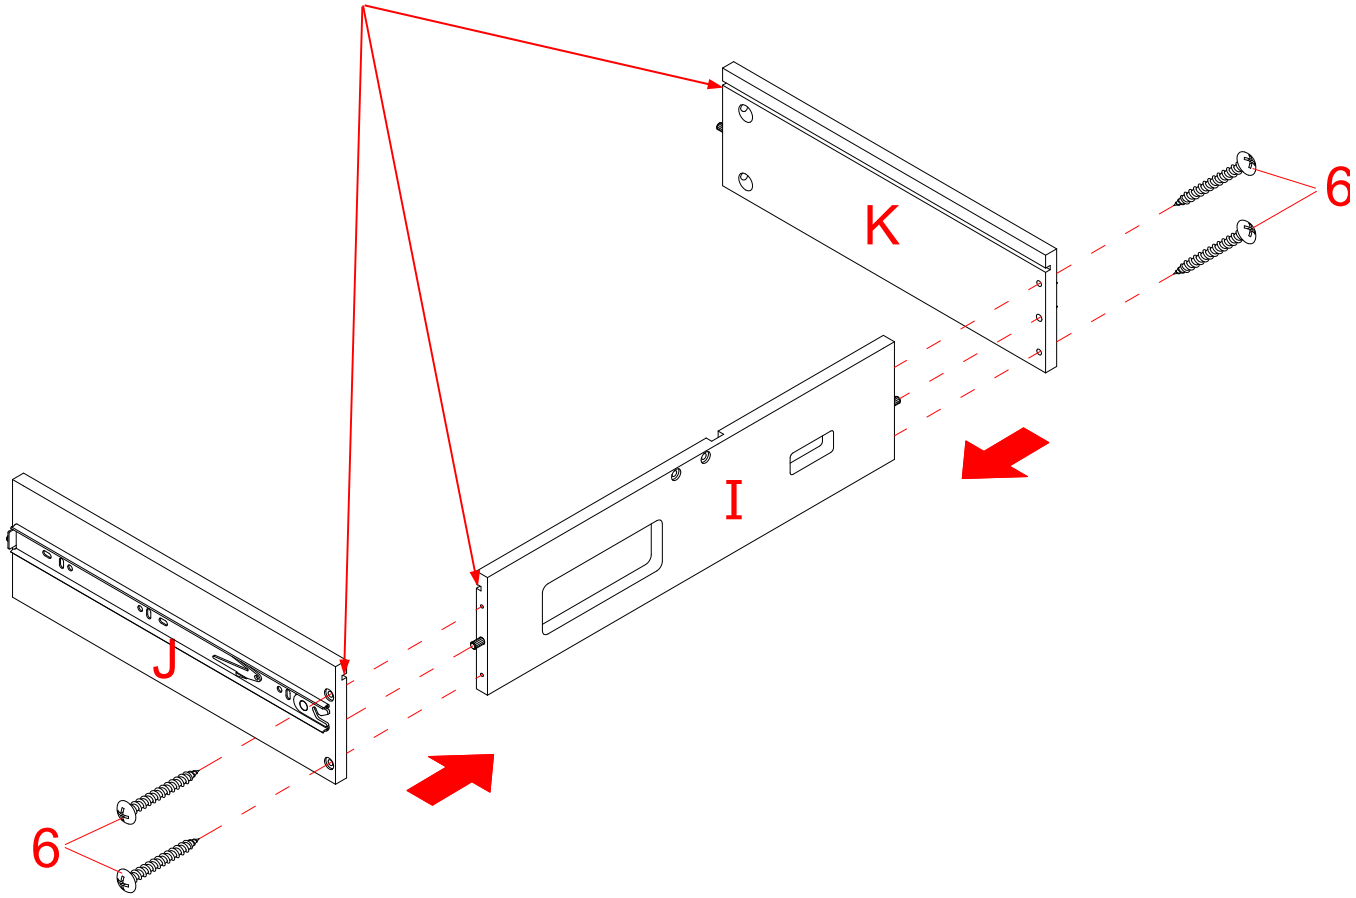

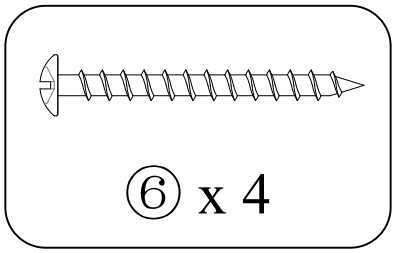

11. Orient and attach the Upper Drawer Back Panel (I) between the Upper Drawer Side Panels (J and K) with four 40 mm Pan Head Screws (6). Tighten the screws with a Phillips screwdriver.

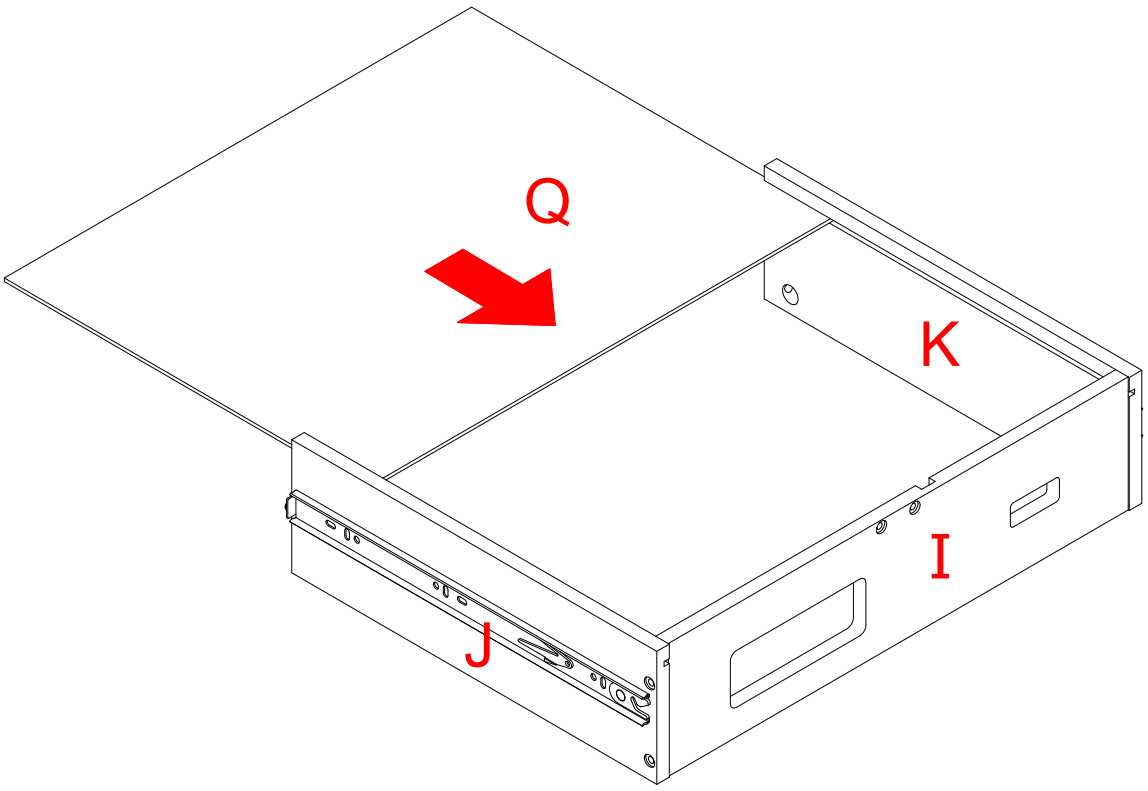

12. Slide one Drawer Bottom Panel (Q) into the grooves on the Upper Drawer Side Panels (J and K) until fully inserted into the Upper Drawer Back Panel (I).

Assembly Instructions

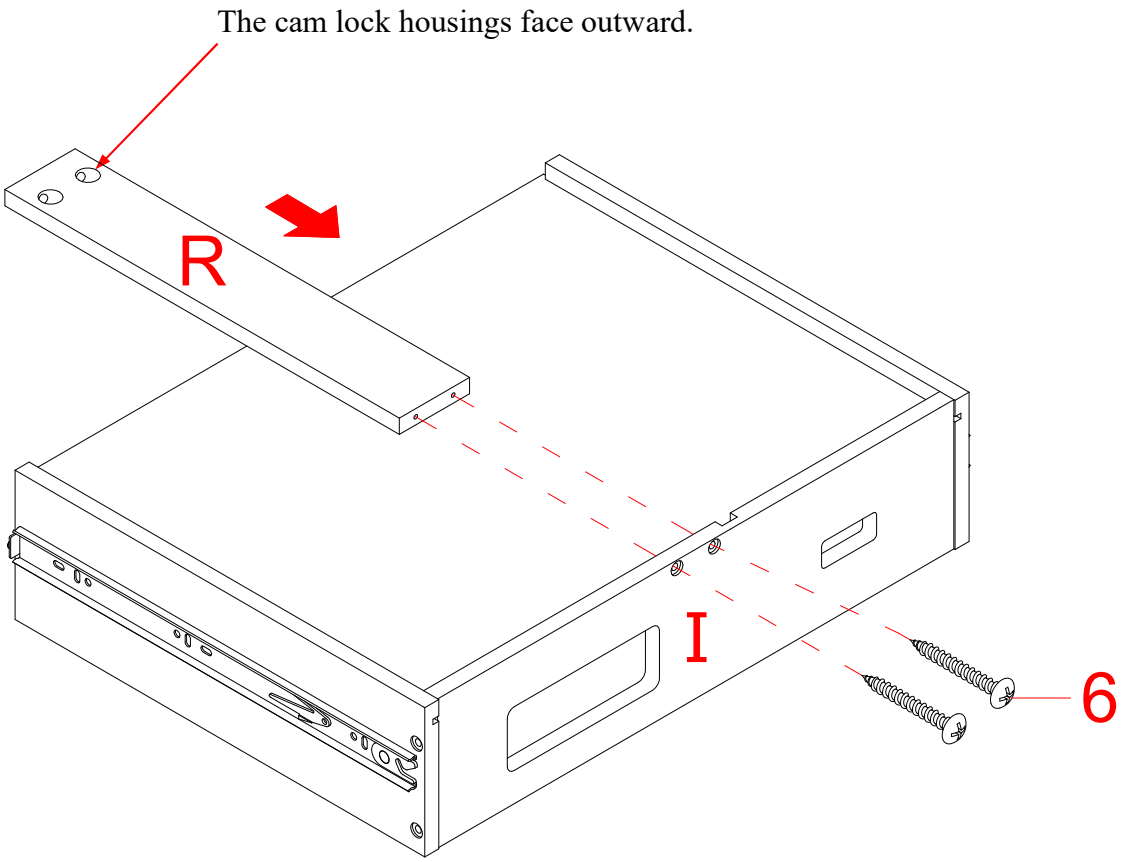

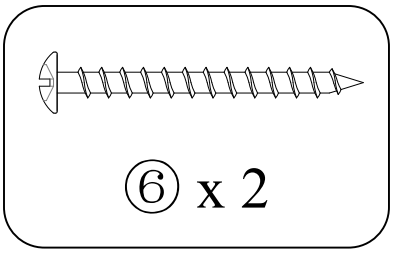

13. Orient and fasten one Drawer Bottom Support (R) to the Upper Drawer Back Panel (I) with two 40 mm Pan Head Screws (6).

Assembly Instructions

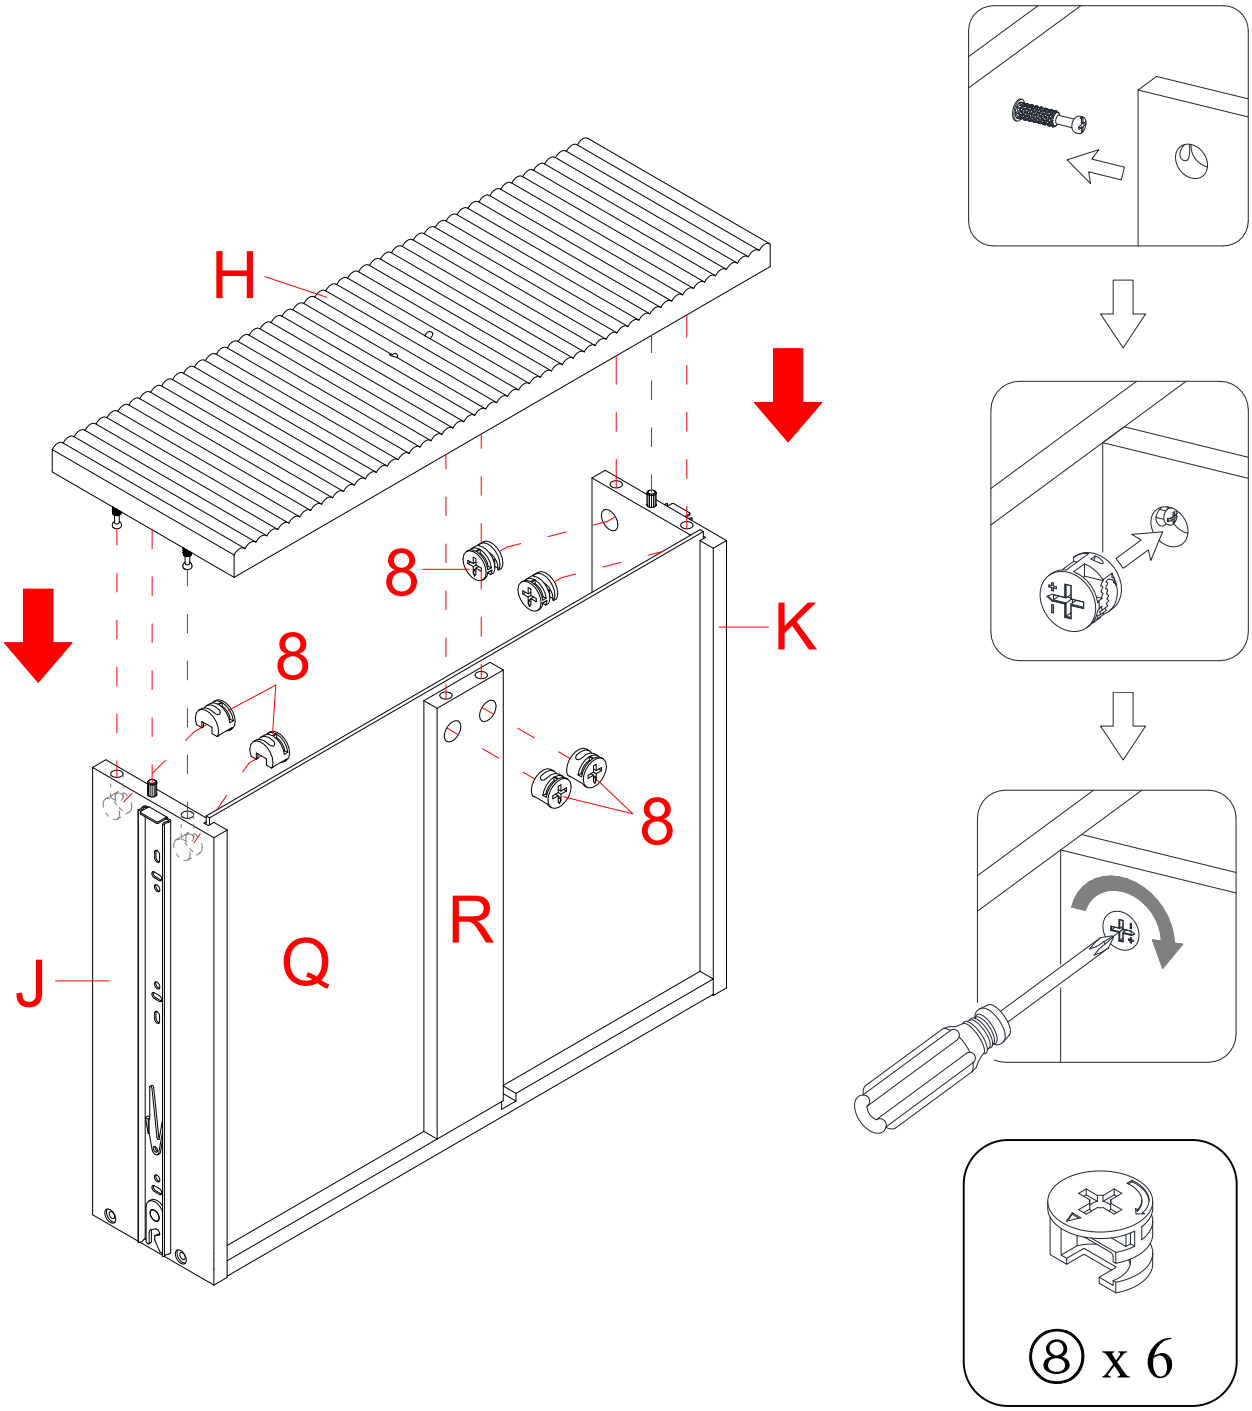

14. Position the Upper Drawer Front (H) so that the installed Cam Bolts enter the holes in front edge of both Upper Drawer Side Panels (J and K) and Drawer Bottom Support (R). Make sure that the Drawer Bottom Panel (Q) fits securely into the groove of the Upper Drawer Front (H).
15. Insert six Small Cam Locks (8) into the large holes in both Upper Drawer Ends (J and K) and Drawer Bottom Support (R), making sure that the arrow on the face of cam lock faces out and points towards the holes on the closest end. Turn the cam locks with a Phillips screwdriver until securely locked onto the cam bolts.

Assembly Instructions

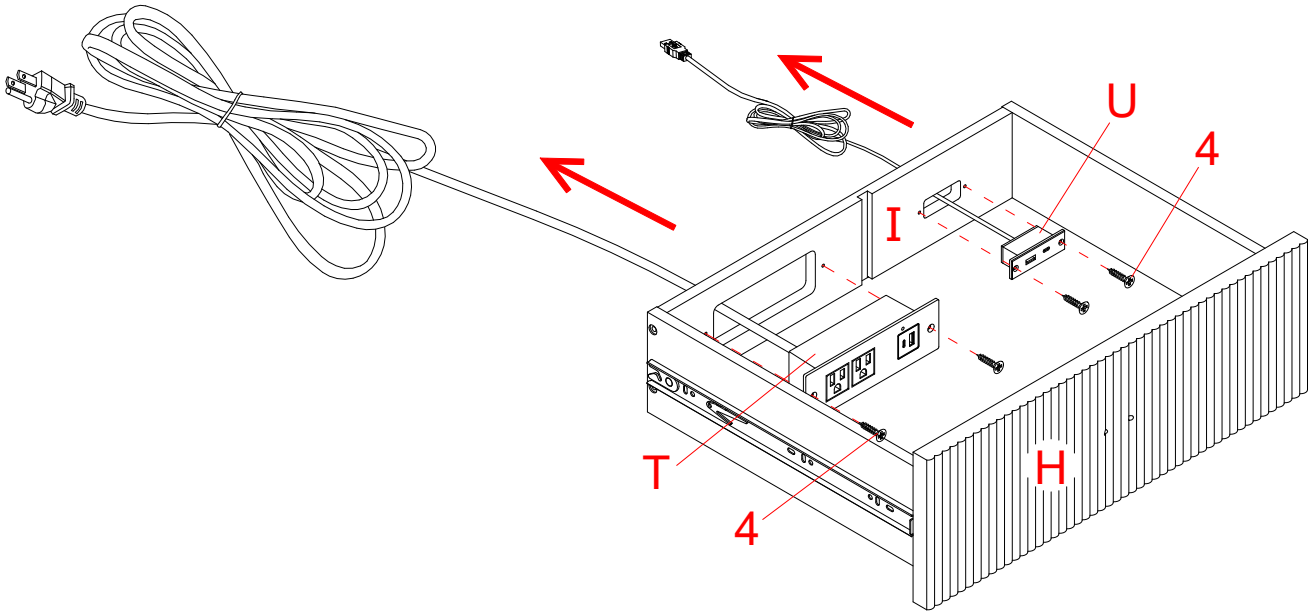

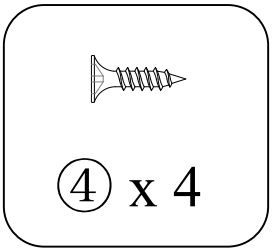

16. Thread the cords of the Power Center (T) and the USB Hub (U) through their respective cutouts on the Upper Drawer Back Panel (I) until both sit properly in place.
17. Using the pilot holes as a guide, fasten the Power Center (T) and the USB Hub (U) to the Upper Drawer Back Panel (I) with four 12 mm Screws (4).

Assembly Instructions

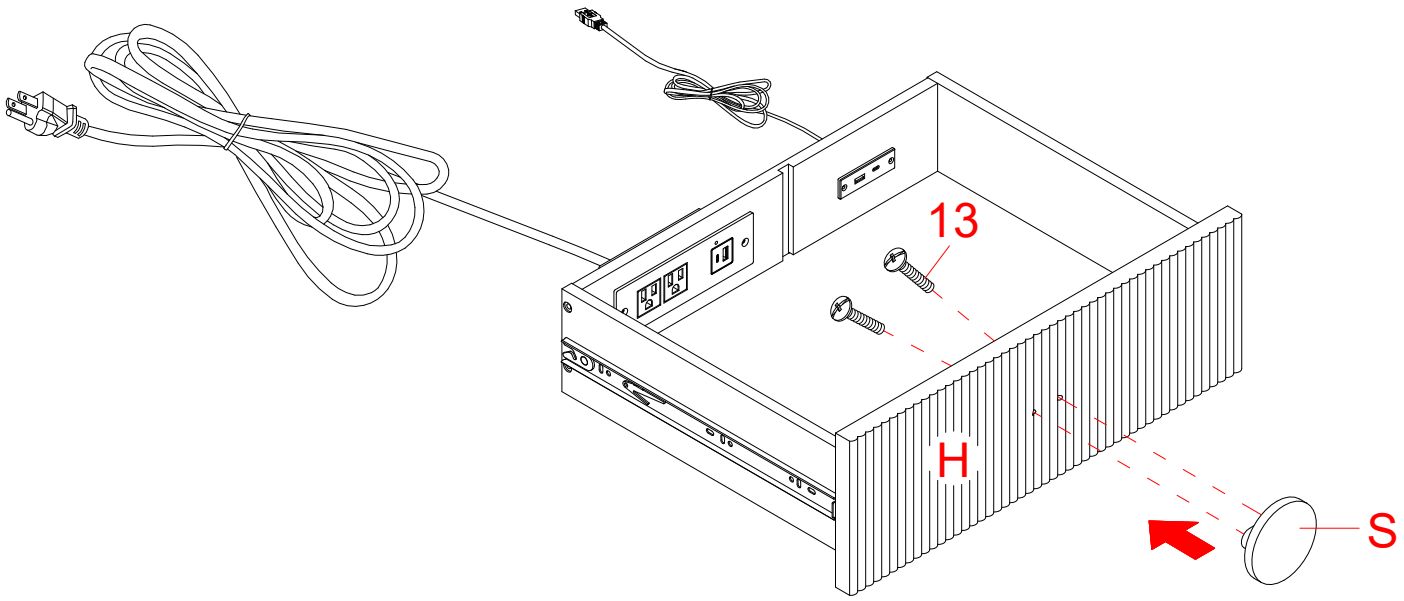

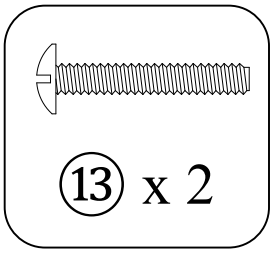

18. Using the pilot holes as a guide, fasten one Knob (S) to the Upper Drawer Front (H) with two 25 mm Knob Bolts (13).

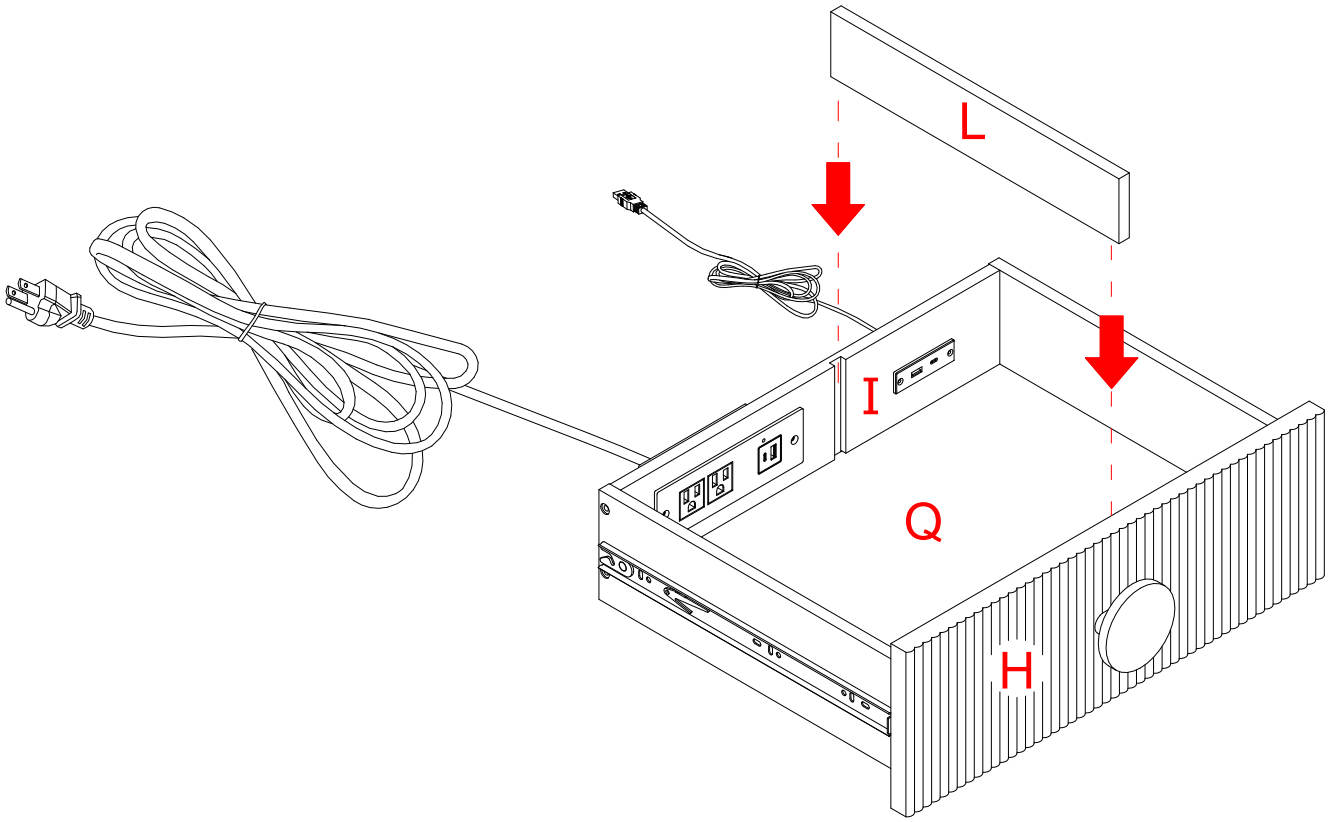

19. Slide the Upper Drawer Divider (L) into the grooves on the Upper Drawer Front (H) and the Upper Drawer Back Panel (I) until fully inserted into the Drawer Bottom Panel (Q).

Assembly Instructions

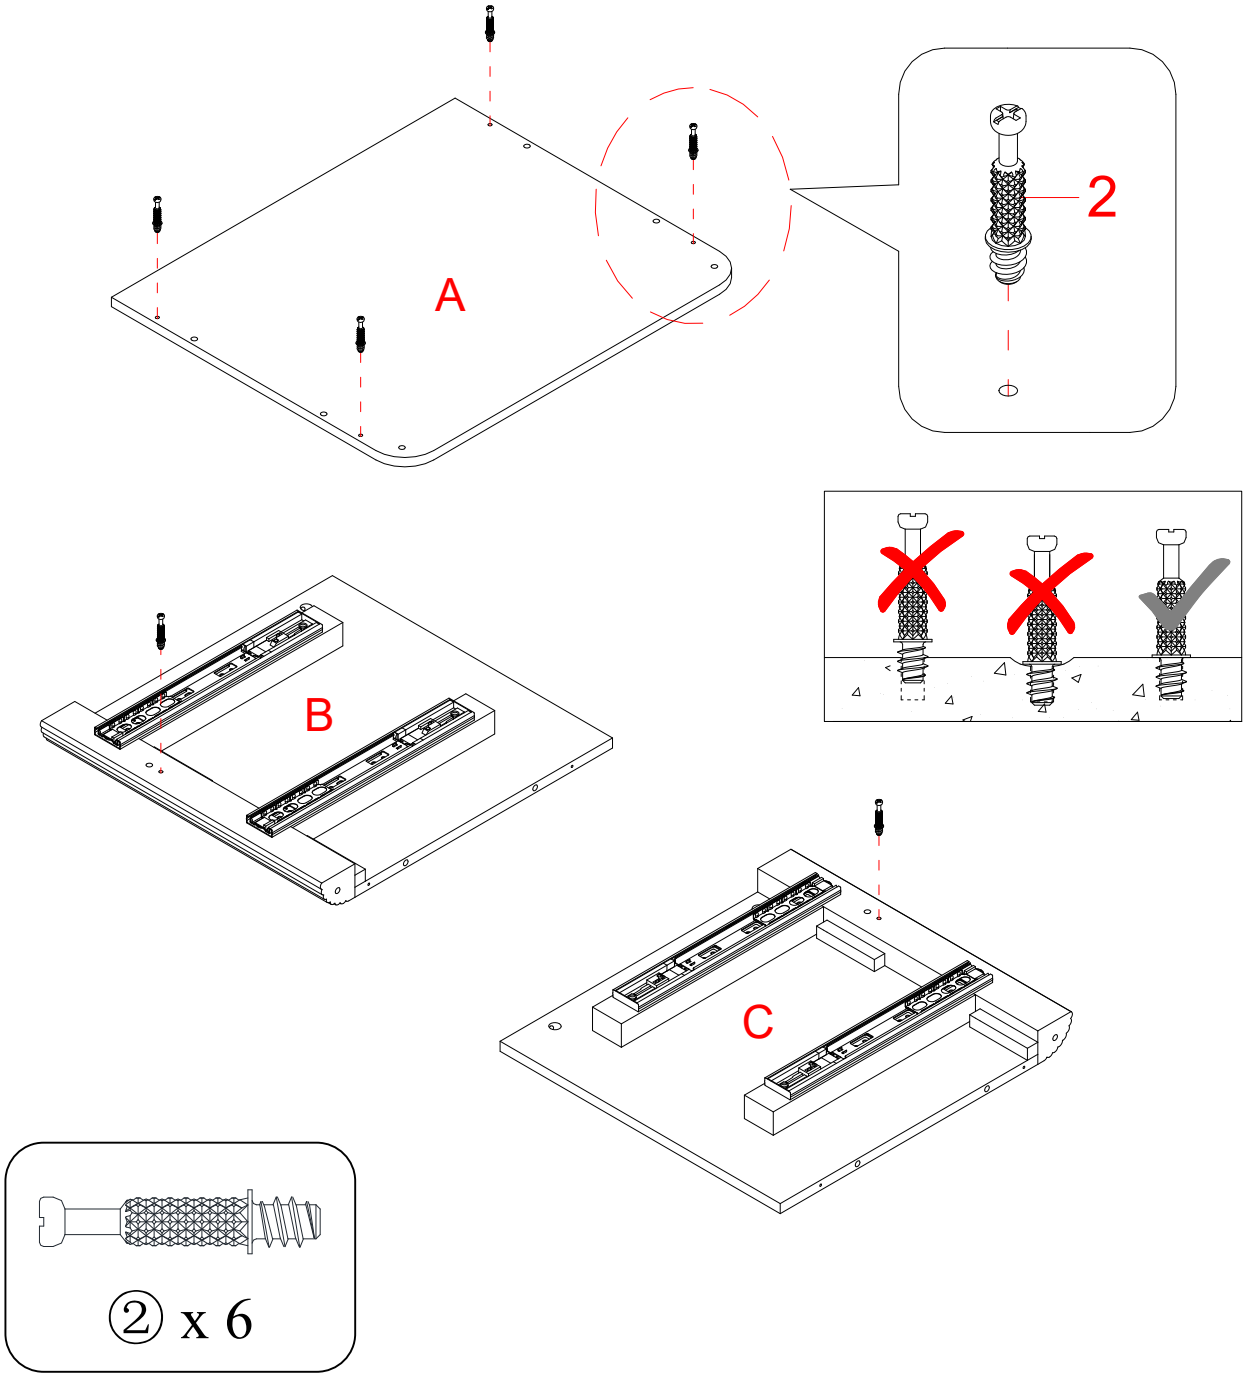

20. Securely screw six Cam Bolts (2) into the designated small holes on the Top Panel (A) and Side Panels (B and C) with a Phillips screwdriver.

Assembly Instructions

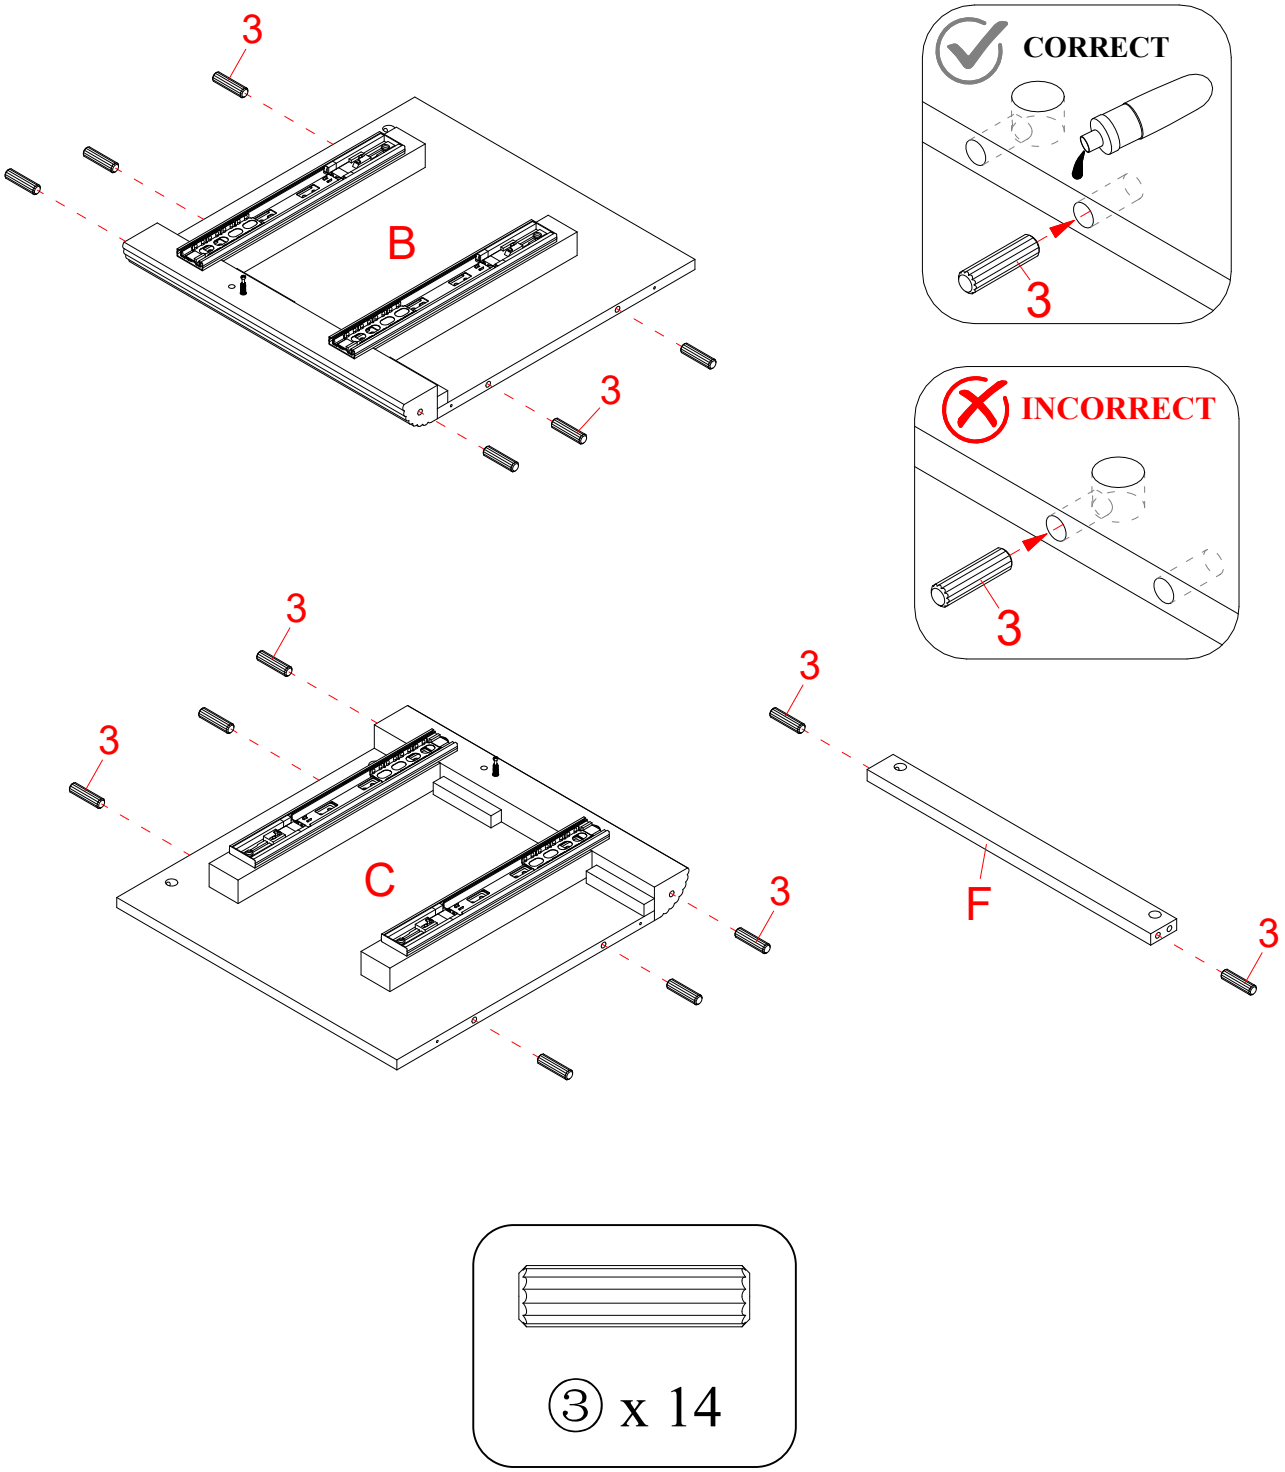

21. Glue the Large Wood Dowels (3) into the designated holes on the Side Panels (B and C) and the Front Crossbar (F) as shown.

Assembly Instructions

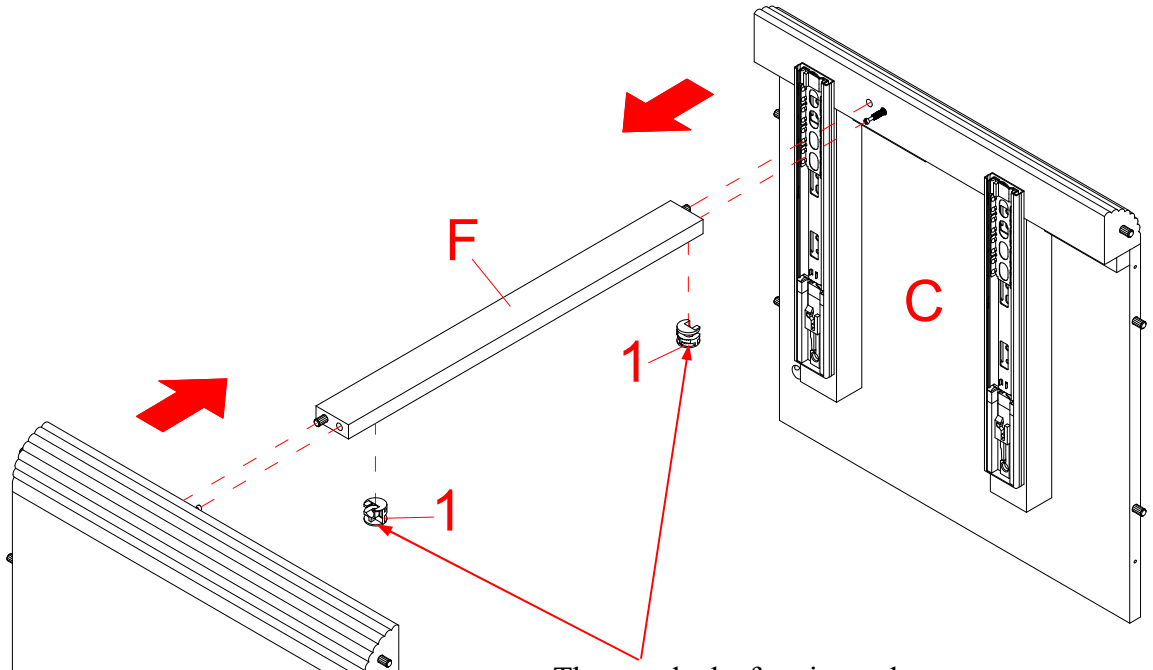

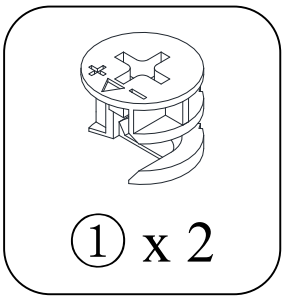

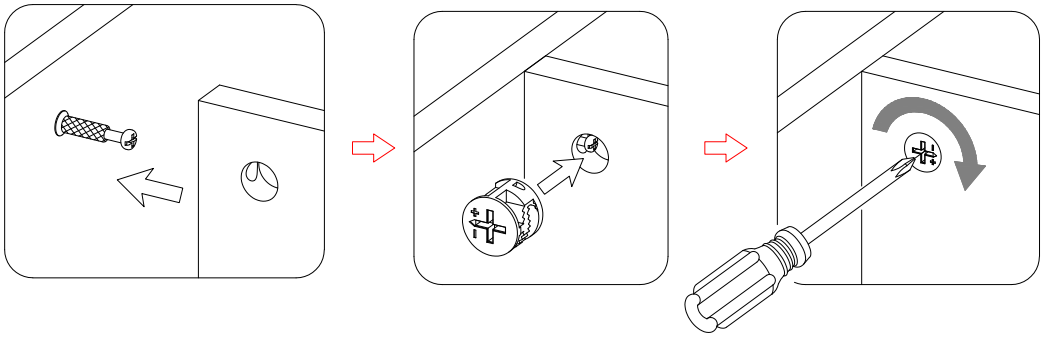

22. Align and attach the Front Crossbar (F) between the Side Panels (B and C) by engaging two Large Cam Locks (1) as shown. Turn the cam locks with a Phillips screwdriver until securely locked onto the cam bolts.

Assembly Instructions

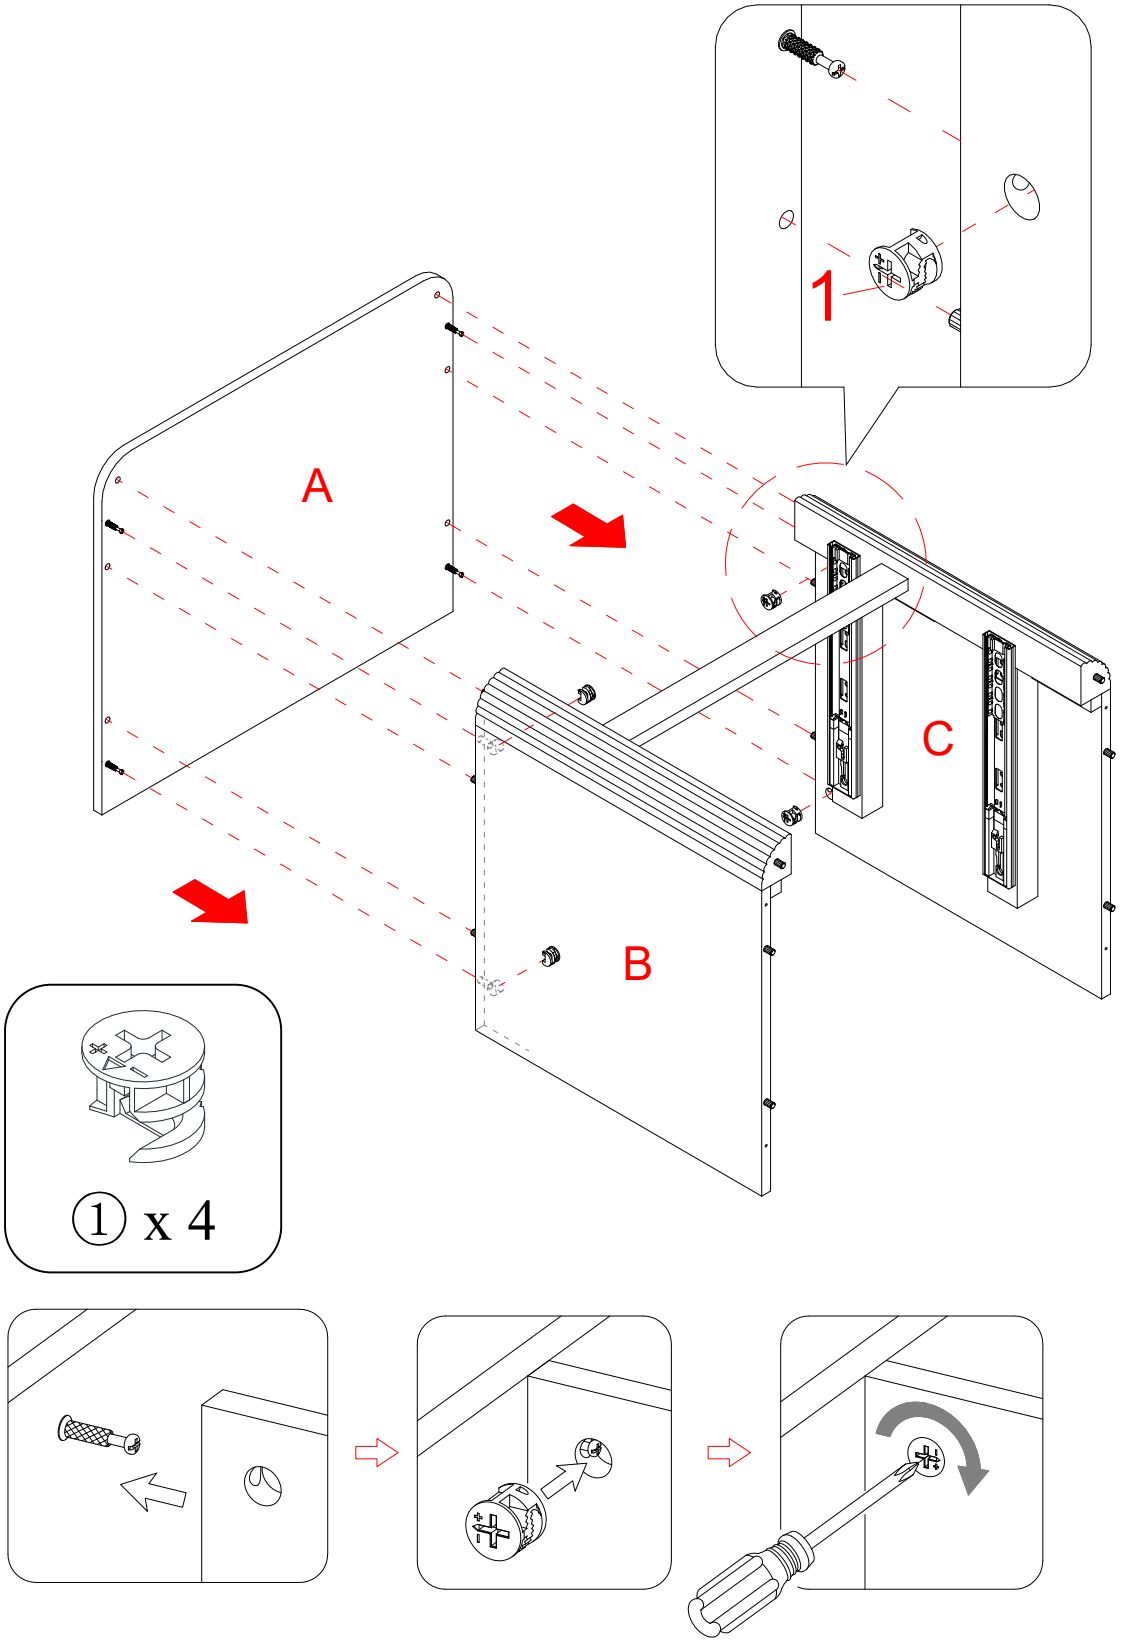

23. Align and attach the Top Panel (A) to the previous assembly by engaging four Large Cam Locks (1).

Assembly Instructions

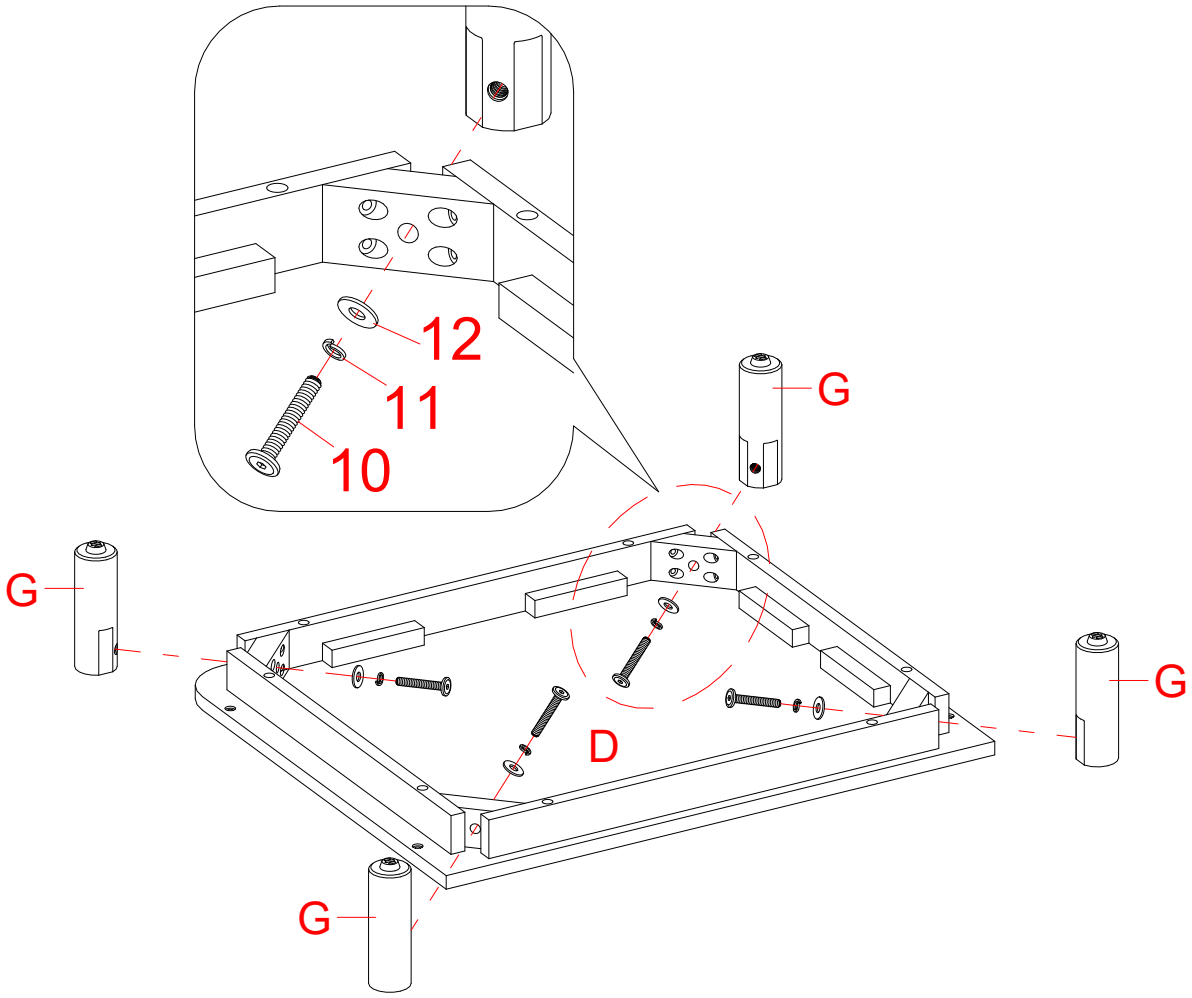

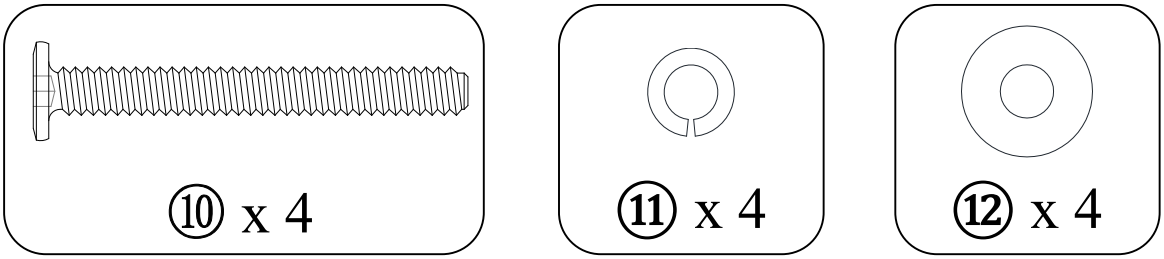

24. Align and attach four Feet (G) to the apron corners of the Bottom Frame (D) by using four 55 mm Bolts (10) with Lock Washers (11) and Flat Washers (12) through the corner blocks and screw into the threaded inserts in feet.

Assembly Instructions

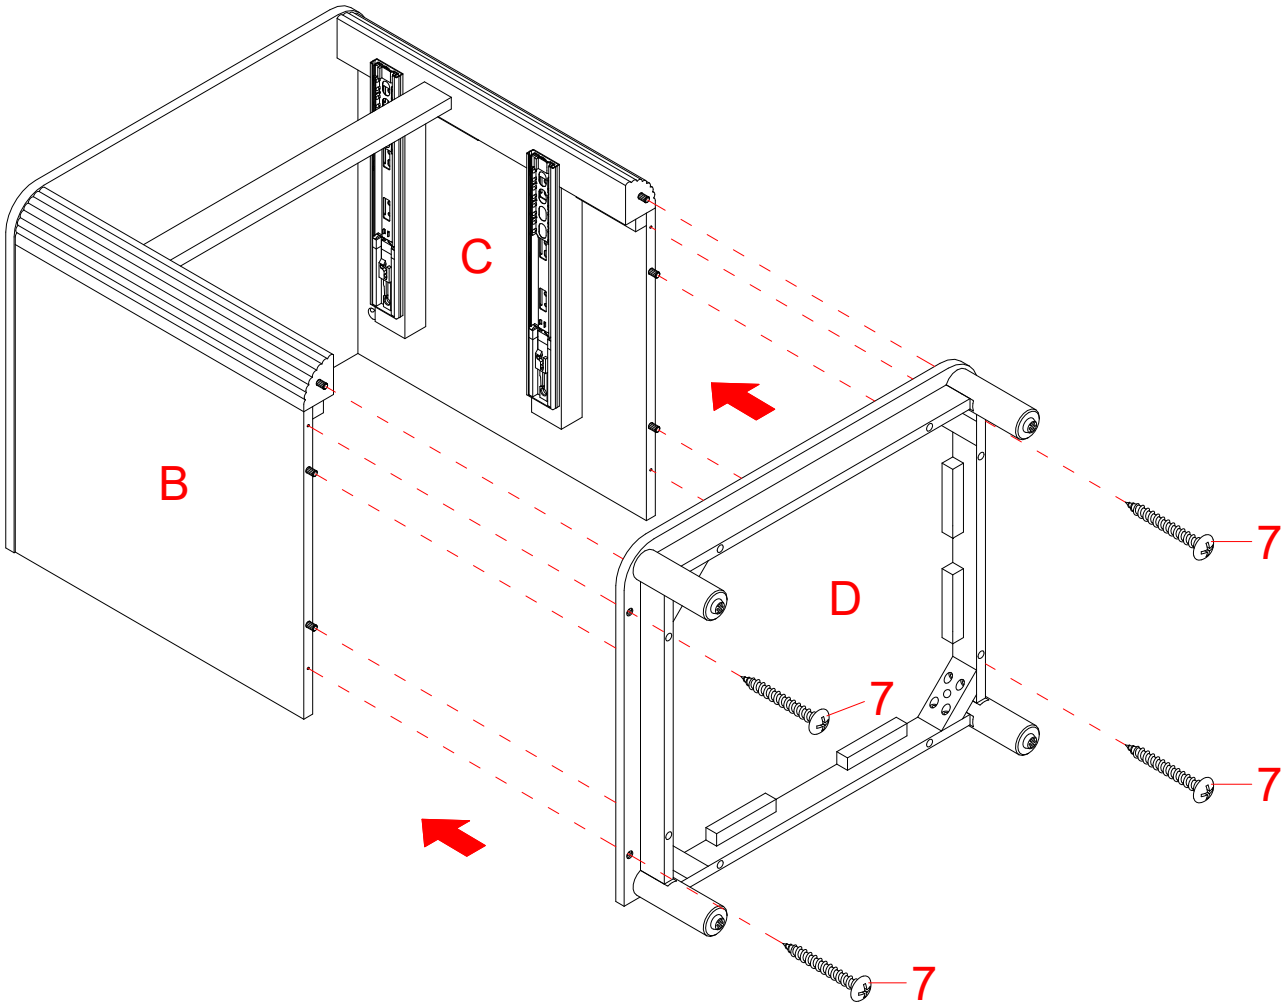

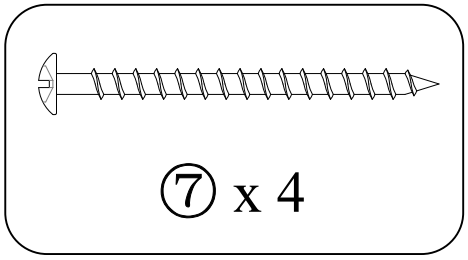

25. Align and firmly press the assembled Bottom Frame (D) to the Side Panels (B and C).
26. Insert four 50 mm Pan Head Screws (7) through the pre-drilled holes on the Bottom Frame (D) and securely screw into the Side Panels (B and C).

Assembly Instructions

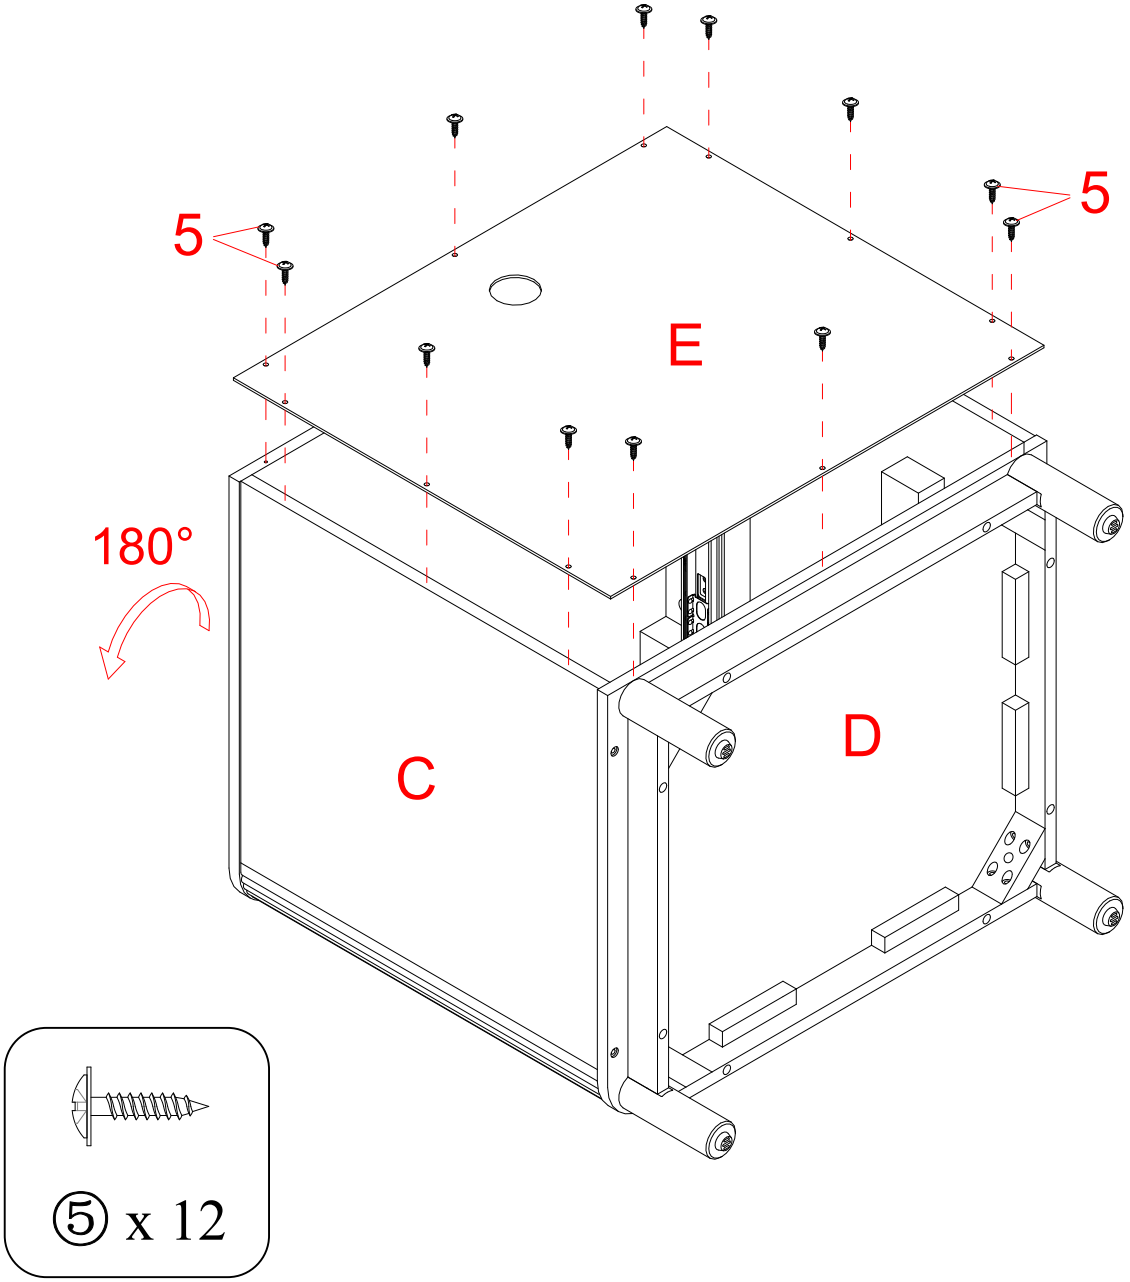

27. Now, go back and tighten all Cam Locks, Bolts and Screws. Make sure that all the parts are tight and there are no gaps between the pieces. This will help keep the unit square. Ask for assistance to stand the assembled unit upright.
28. Turn the assembled unit on its front edges.
29. Pick up the Back Panel (E) and align the pre-drilled holes against the edge with the pilot holes on the back rail of Top Panel (A). And attach it in place with the provided 15 mm Washer Head Screws (5).

    NOTE: We recommend attaching back panel with washer head screws at the corners first.

Assembly Instructions

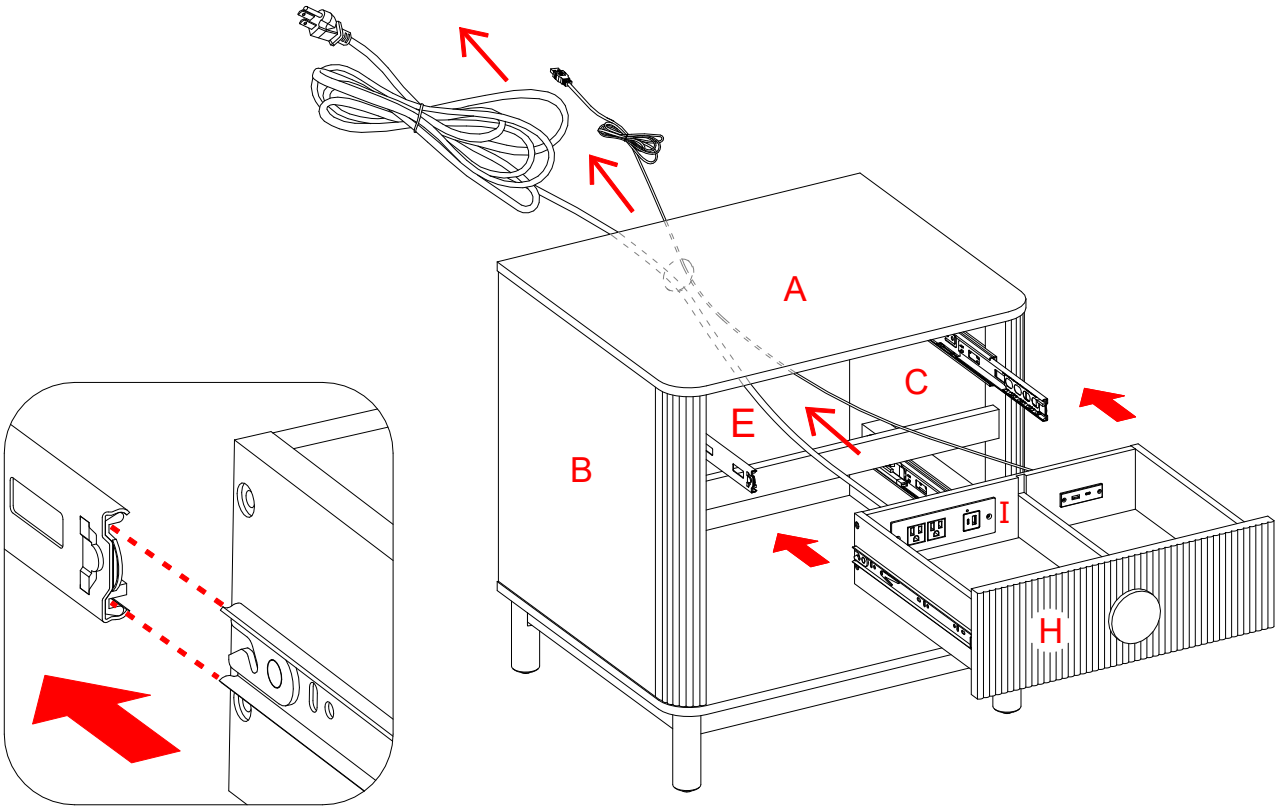

Drawer Installation

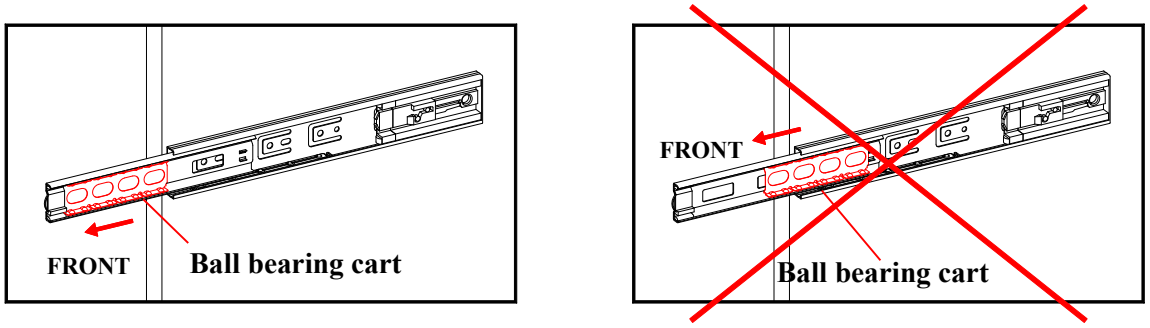

Drawer removal

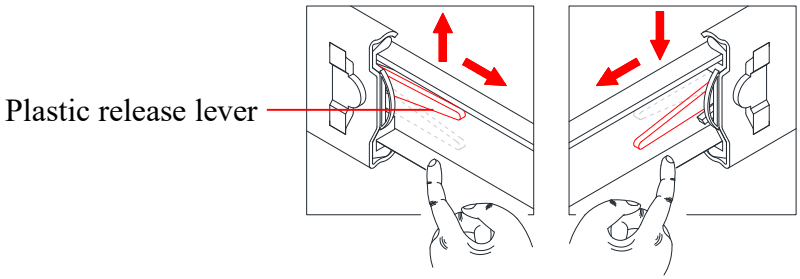

30. Lift the unit upright. Thread the cords of the Power Center and the USB Hub through the circular cutout on the Back Panel (E).

31. Insert the assembled upper drawer into the upper frame. Extend the Ball Bearing Slide Tracks on the panels all the way forward (including ball bearing cart). Then align the Slide Runners on the assembled drawer with the Slide Tracks and push the drawer carefully inside until it stops.

    NOTE: If the drawer does not go in smoothly, please take it out and repeat the step. If you need to remove the drawer, please pull the drawer all the way out, then simultaneously pushes the plastic release lever of the ball bearing slides up on one side and down on the other side, and then pull it completely out.

Assembly Instructions

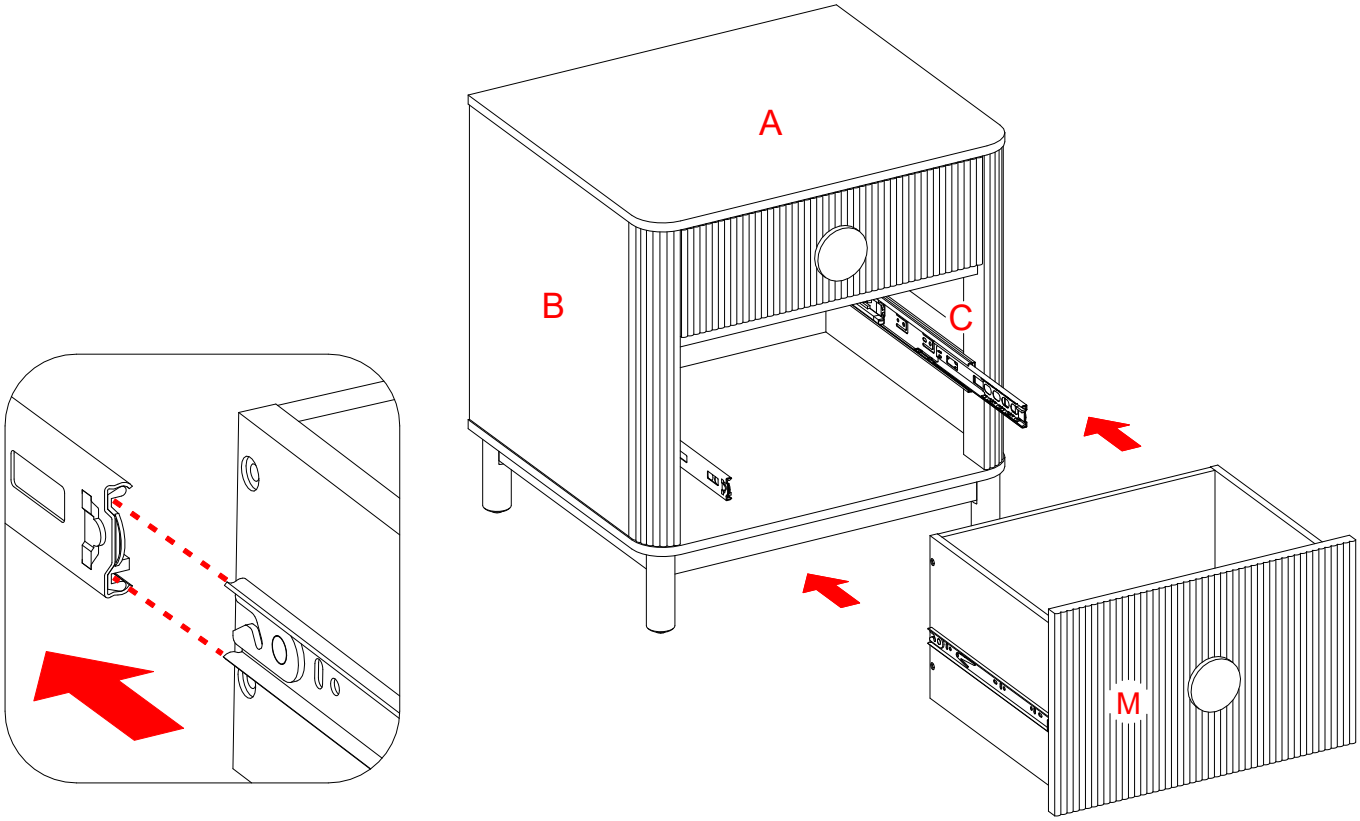

32. Repeat the same process to install the assembled lower drawer into the lower frame.

Assembly Instructions

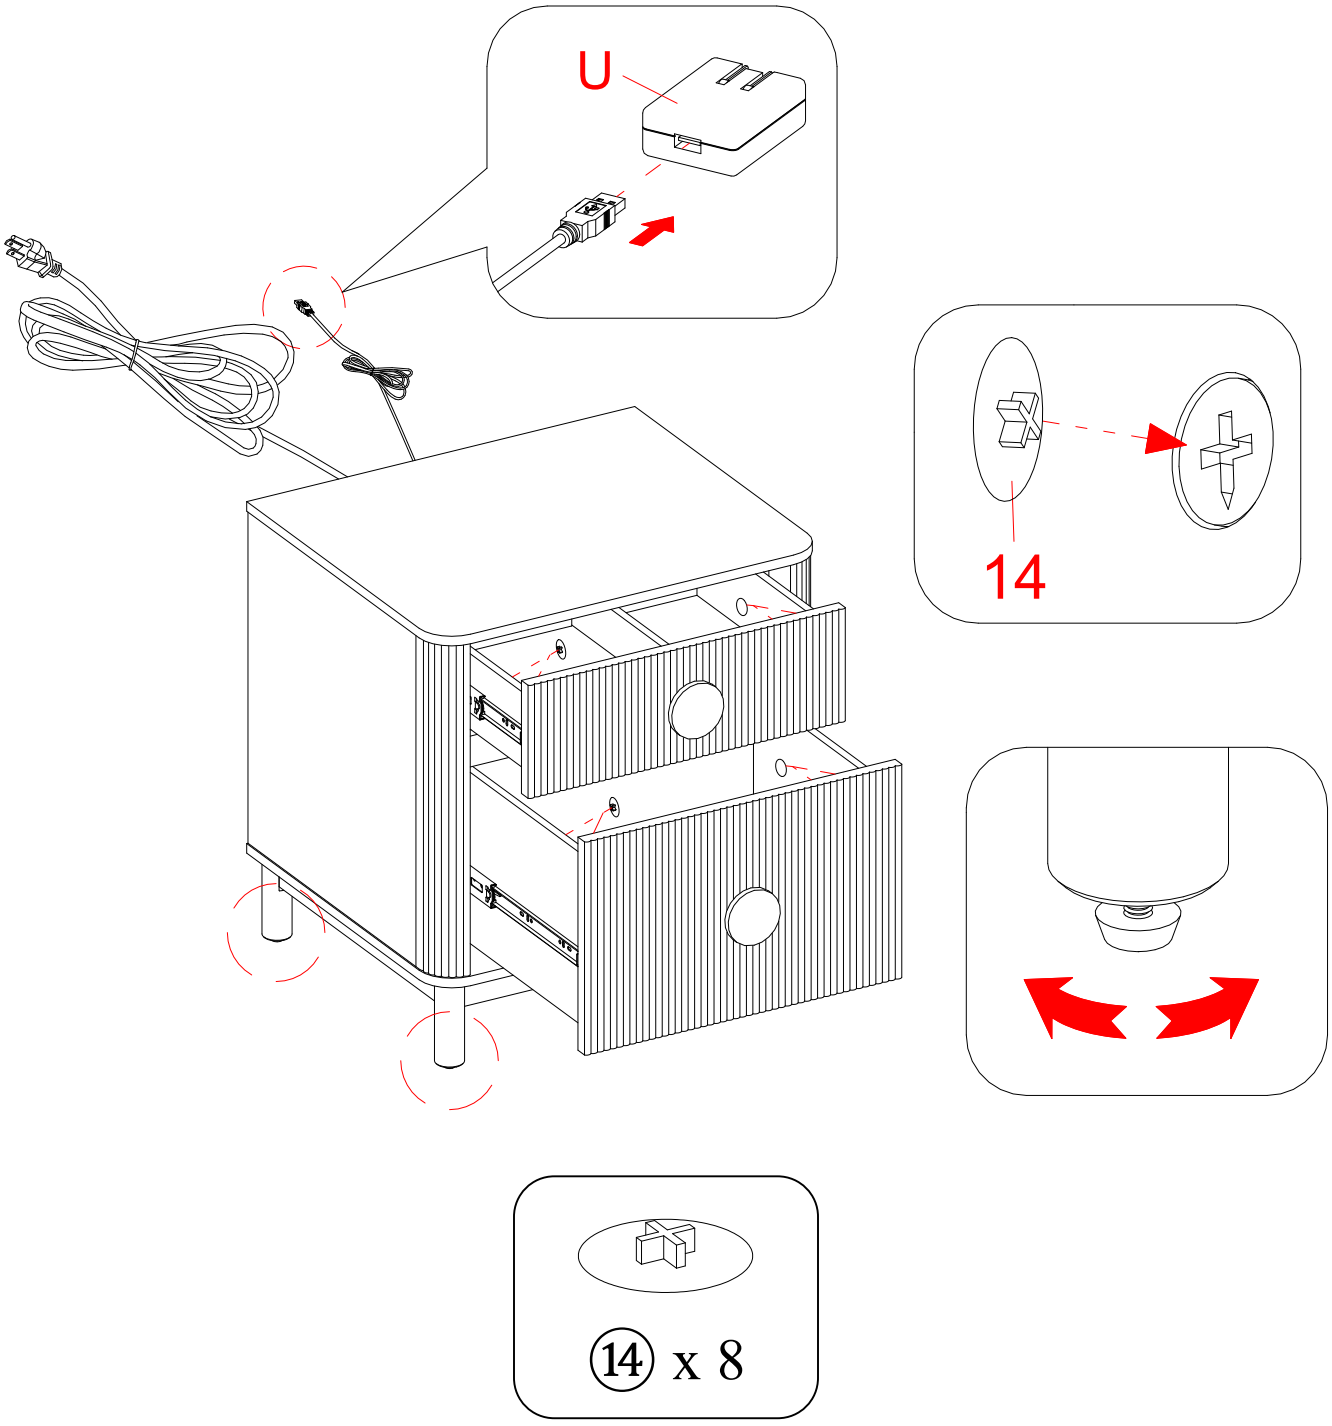

33. Connect the USB cord with the Adapter (U) and insert the two-prong plug into an outlet to supply power.
34. Plug the Cam Lock Covers (14) onto the visible Cams Locks to conceal the cams.
35. Position the assembled unit at the desired location against a wall. If necessary, adjust the installed floor levelers to correct the tilting.
36. The nightstand is now ready for use.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Gently rub the surface with a soft dry cloth, soft damp cloth, or soft damp cloth with neutral detergent, and then dry it well.
- Strong Alkaline detergents or acidic detergents are not recommended to use.
- Sponges containing abrasive agents or fibers are not recommended to use.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage your furniture's finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further Advice about Furniture Care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Follow these important and helpful tips that will enhance your furniture as it ages.

A touchup pen has been provided to minimize the small nicks or scratches that may occur during assembly or shipping.

We hope you enjoy your purchase for many years.
Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Whalen Furniture Manufacturing
1578 Air Wing Road, San Diego, CA 92154, USA
Customer Service: 1-866-942-5362
8:30 a.m. - 4:30 p.m., PST, Monday to Friday
www.whalenstyle.com